


Quick Access Controller

Button Operation:

On/Off:
press and hold

Change Auto Program:
Short press; new program will be announced and start

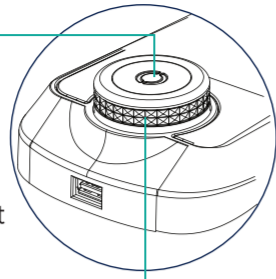

Dial Operation:

Turn left or right to recline or incline

Sounds

Home/Sounds

Sound > Select from Nature sounds

Volume > Set volume level

BEEP > Set to OFF to stop sounds from remote

To play Nature Sounds, Bluetooth must remain set to ON prior to selection the sound choice.

Chromotherapy

Home/Lights

Themes > Select light in programs

Solid – Single color light

Breathe – Single color that dims, then brightens in repetition

Wake up: Blue enriched lights to boost energy level - gradual brightness

Wind down – Colors of sunset absent blue waves – gradual darkening

Multi-wave – All the colors of the rainbow morphing into each other

Multi-rotate – Colors rotate from one to another

Intelligent Voice Commands

Use the voice control commands below. (Once you've activated voice control, give a command within 5 seconds, or you will have to re-activate the voice function)

To Active Voice Mode say
"Switch to Voice Mode"

- > Power On
- > Switch Off
- > Activate Massage
- > Sports Refresh
- > Extension
- > Rest & Sleep
- > Working Relief
- > Neck & Shoulder
- > Waist & Spine
- > Deep Shiatsu
- > Healthy Breath
- > Massage Extend
- > Relaxation
- > Air Bag Massage
- > Zero Gravity
- > Start Heat
- > Heat Off

INFINITY®

72 Start Road, Seabrook, NH 03874
603-910-5000
www.infinitymassagechairs.com

INFINITY®

Quick Start Guide

Dynasty Massage Chair

INFINITY®

Multi-Functional Screen –

Use the directional buttons below to navigate these menu screens. Then press ok to select

Power – Powers up the remote or returns the chair to the exit position and powers down remote

Home – Shortcut to the home page of all menu screens


OK – After navigating to the command desired on the display, push OK to select.

Zero Gravity – Press for Zero Gravity 1, press again for Zero Gravity 2, press again to restore to recline

Foot Roller – Press to turn off Foot Roller, press again to resume Foot Roller

Footrest – Press and hold up arrow to bring foot rest up, Press and hold down arrow to bring footrest down

Leg Length – Press and hold right arrow to extend the leg length adjustment, press and hold the left arrow to retract the leg length adjustment

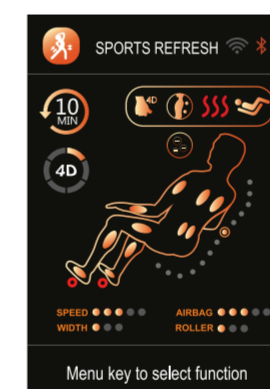

In-Use Screen:

After a massage program is selected, displays all settings to that program



Pause – Press pause to immediately stop all massage chair activity, press again to resume



Auto – Shortcut to the Auto Programs menu screen



Directional Button – Press up, down, left or right to navigate the display screen



Back Adjustment – Back mechanism position adjustment; press and hold up to raise, press and hold down to lower. Use during initial body scan fine tuning or in manual partial or point zone mode



4D – Press to increase or decrease 4D intensity of back mechanism. In-use screen displays intensity dial



Seat Back Position – Press and hold down arrow to recline the seat back, press and hold the up arrow to upright the seat back