



SIDE WINDER ASSEMBLY INSTRUCTIONS



Attach the legs using the four nuts provided.
[See picture for proper leg set up]

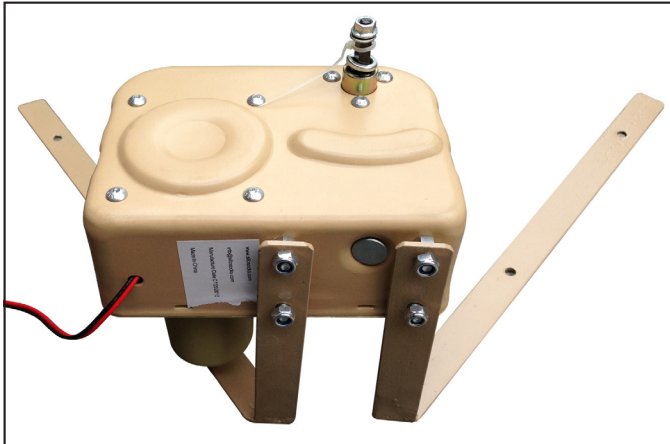


Attach the receiver for the the Sillosocks Flapping stakes. (Fiberglass stakes that come with the flappers)

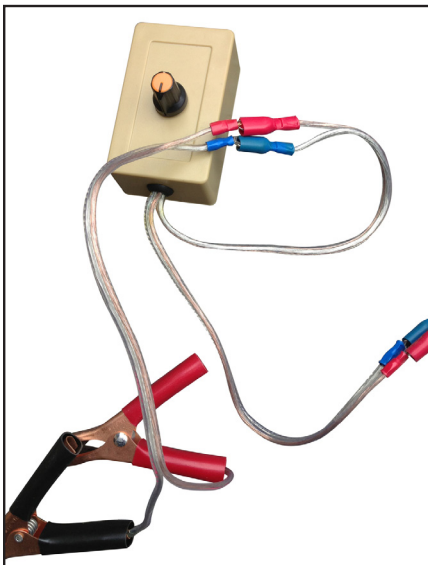

Attach the manual control to the leads to the motor and to the battery clips provided. The connectors are color coded DO NOT hook them up backwards.

MAKE SURE TO HOOK TO THE BATTERY CORRECTLY. FAILURE TO DO SO WILL RESULT IN FAILURE OF YOUR MANUAL SPEED CONTROL. DO NOT REVERSE POLARITY

Attach the Sillosocks Flappers to the Sidewinders. Two Flappers per machine. If your Flappers came with two part stakes, glue the sections together so they do not twist during use. Bend the wires in the nosepiece to adjust the Flappers to the desired position. On the Up Wind Flapper make sure the wire is in the fixed position in the slot on the nosepiece.

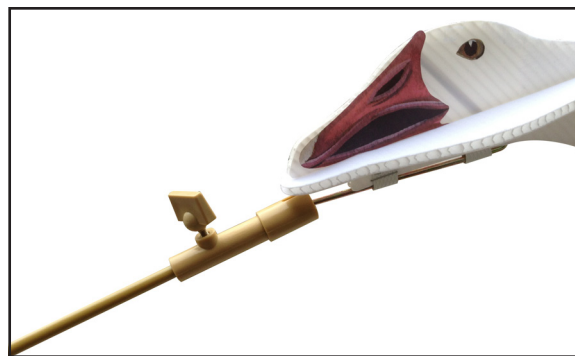

Position the machine so the V created by the legs is facing into the wind. The Flappers must be facing the wind. Holes are provided the legs for stakes in windy conditions. A light coat of Krylon camo khaki paint aids concealment.