

BLINDFOLD ASSEMBLY INSTRUCTIONS

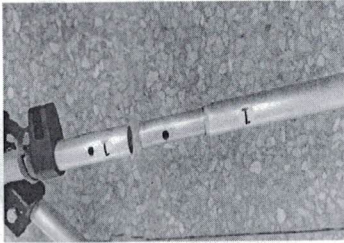


Photo 1

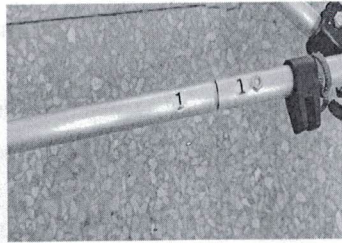


Photo 2



Photo 3

1. First step is to assemble the frame, Assemble the top frame rail first, all sections are numbered for ease of assembly.

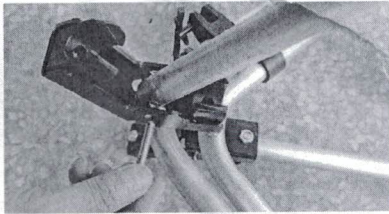


Photo 4

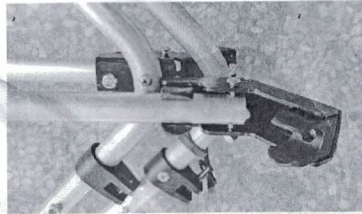


Photo 5

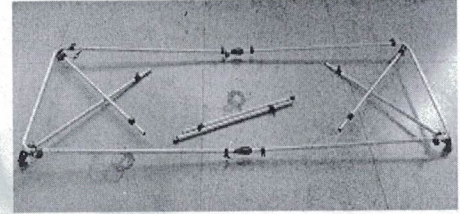


Photo 6

2. Next step is to attach the leg hinges and legs see photo 4-5, Picture 6 shows the frame completely assembled

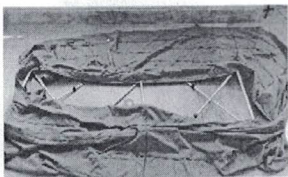


Photo 7

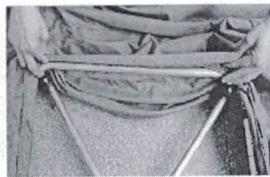


Photo 8

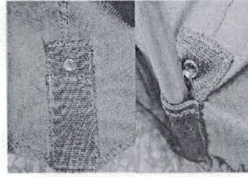


Photo 9



Photo 10

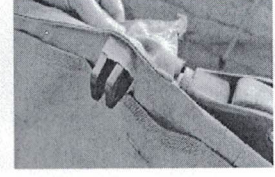


Photo 11

3. Once the frame is completely assembled it is time to attach the cordura cover, Velcro tabs go over the top rail and secure it in position. here is a pocket for each leg. Insert the leg into the pocket and secure the cordura cover to the leg with snaps provided. There is a Velcro tab for each leg midway up the blind that should be attached.(see photo 7-11)

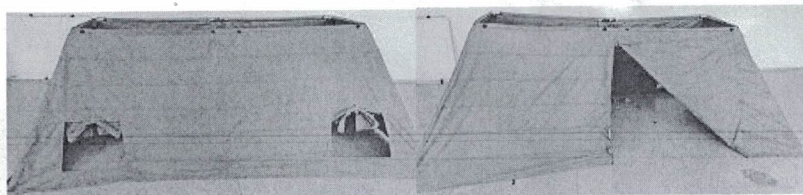


Photo 12

4. See photo 12 for a completed picture.

Tips

There are slits in the blind cover for the flip top lid (sold separately) make sure they are positioned in the slits in the canvas

Use the zippered opening for access to the blind DO NOT go over the top rail.

There are 2 dog doors one on each end.

Use the stakes provided to secure the blind to the ground. Grommets are provided where the stakes should go

The legs are telescoping and height can be adjusted with the legs. Full extension works best.

To fold the blind up just pull on each center hinge to release them and you can easily fold the blind and pack away in carry case

Your blind comes with stubble straps so you can match the cover where you are hunting. It is suggested to always mud the blind to take away the sheen from the fabric

Options include camouflage skins, available in corn, green wheat and snow cover and flip top lids. All accessories are available at Sillosocks.com. Assembly video will also be on the website next to the product.

