 




VENTRAY ELECTRIC GRILL

OWNER'S MANUAL

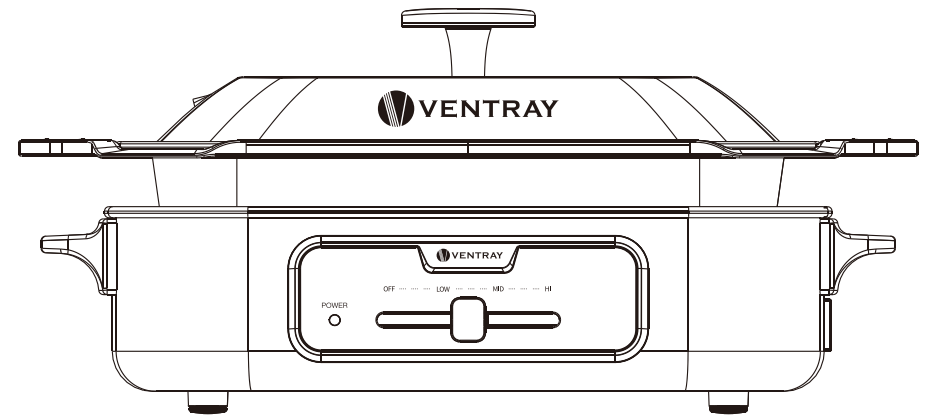

Please keep this manual for future references.
All pictures in this manual are for illustration purposes only.
The actual product may differ.

Household use only.

WWW.VENTRAY.COM



Thank you for choosing a VENTRAY professional kitchen appliance!

Following the instructions in this owner's manual, you are about to see how easy and quick it is to prepare delicious meals. Please read all safety information, warnings, and operational guides before getting started.

Important Safeguards ----- 6

Parts and Accessories ----- 8


Operating Instructions ----- 9

Cleaning and Care ----- 14

Specifications ----- 14

Product Registration ----- 14

IMPORTANT

 To avoid injury, read and understand the entire owner's manual before using this appliance.

IMPORTANT SAFEGUARDS

1. When using this electric grill, basic precautions should always be followed, including the following:
2. Read all instructions.
3. Do not touch the hot surface, use only the handles to move the appliance.
4. Close supervision is necessary when any appliance is used by or near children.
5. To protect against electric shock, do not immerse the cord, plug, or any parts of the machine in water or other liquids. Make sure the power connection inlet is dry before using.
6. Do not let the cord hang over the edge of the table or counter or touch the hot surface.
7. Do not operate appliances with the damaged cord or plug, after the appliance malfunctions or is damaged in any manner. Return the appliance to the nearest authorized service center for examination, repair, or adjustment.
8. Do not use other mismatched accessories, it may cause hazard or injury.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. When operating the machine keep at least 10cm of space on all sides of the machine to allow for adequate air circulation.
11. Unplug from outlet when not in use and before cleaning. Allow cooling before putting on or \ taking off parts, and before cleaning.
12. To disconnect, turn the control knob to the OFF position, then remove the plug. Always hold the plug, but never pull the cord. The plug must be removed from the machine before cleaning and maintaining the appliance.
13. Extreme caution must be used when moving an appliance containing hot oil or other hot liquid.
14. Do not use metal to touch any part of the electric grill when operating. This creates a risk of electric shock.
15. Be extremely cautious when removing the plate or disposing of hot grease or other hot liquid.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
17. Never leave the appliance unattended while broiling or toasting or other type of cooking.
18. Oversized foods and metal utensils must not be inserted into the plate as they may create a fire or risk of electric shock.
19. A fire may occur if the machine is covered or touching flammable or inflammable material, including curtains draperies, walls, and similar objects, when in use.
20. Do not store any item near the appliance during operation.
21. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.

IMPORTANT SAFEGUARDS

22. Do not place any of the following materials when using the electric grill: cardboard, plastic, paper, or anything similar.
23. Do not store any materials, other than recommended accessories on the plate.
24. Always wear protective, insulated gloves when inserting or removing any items from the hot plate.
25. This appliance is for household use only, do not use outdoor.
26. Do not use the appliance other than intended use.
27. This appliance is NOT to be used by children and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge.
28. Keep appliance away from children. Cleaning and user maintenance shall not be made by children without supervision.
29. If the power cord is damaged, it must be replaced by the After-sales Service Center or a similarly qualified person to avoid a hazard.
30. The appliance is incompatible with external timers and remote controlling systems.
31. Hot surface during operation. Do not touch the appliance to prevent burns. When opening with the lid on, take extreme caution to prevent burns by the steam released.

A: Heating plate

B: Housing of base

C: Handle

D: Power cord socket

E: Indication light

F: Switch

 
 
 
G: Inlet

H: Power cord

I: Lid handle


J: Steam hole

K: Steam Grill pan

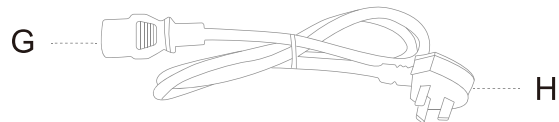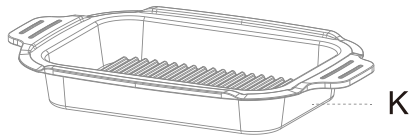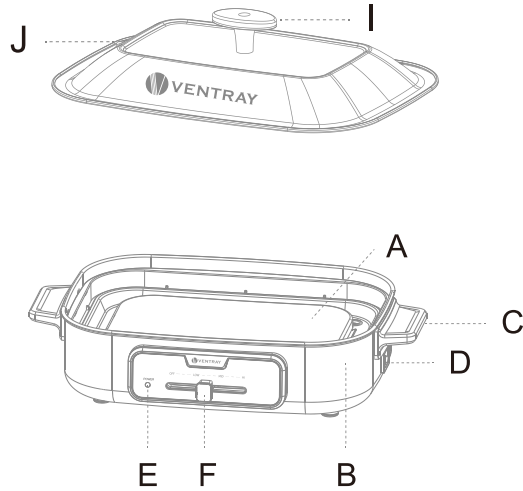


Before using your electric grill for the first time, be sure to:

 1. Remove all the plates/pot and lid from the packaging, wash them in water, and only use a soft cloth or cleaning sponges; not dishwasher friendly, only wash with soft cloth scrub. Let all plates, pots, and other parts dry before using.

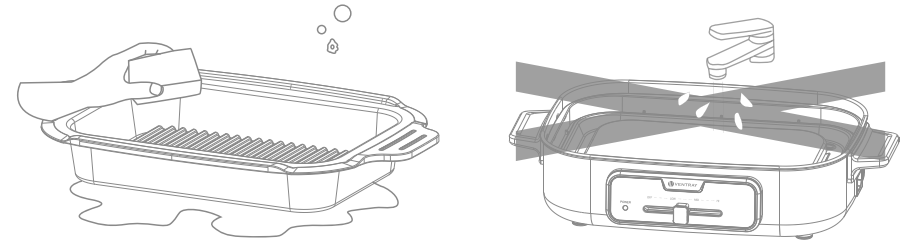


2. Place the machine on a flat stable surface and ensure a minimum of 10cm free space distance around the machine. This machine is not suitable for installation in a cabinet or outdoor use.

 
3. Make sure there is no water and other objects on/near the heating plate or machine. Each time only use up to two detachable plates or pots. Never put more than two plates in the electric grill while cooking.

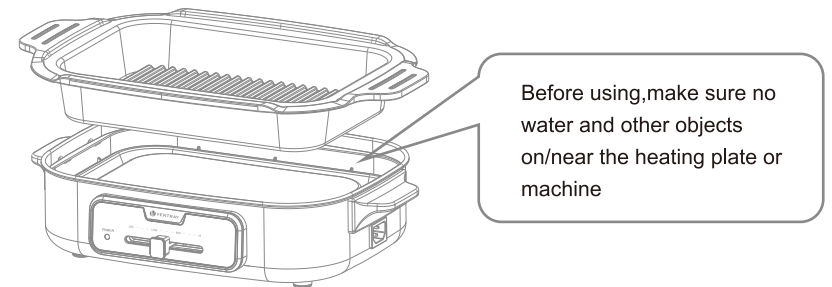

 4. Connect the power plug into the machine. Plug the power cord into the wall socket and you are ready to use your electric grill. (Note: Make sure the voltage which is indicated on the machine matches the local voltage before connecting the machine.)

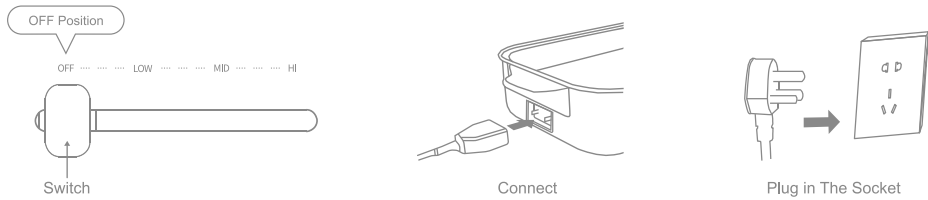


 
5. Preheat: Adjust the switch to the range from "LOW" to "HIGH", start preheating, the indicator light will light up. Please do not cover the lid while preheating.

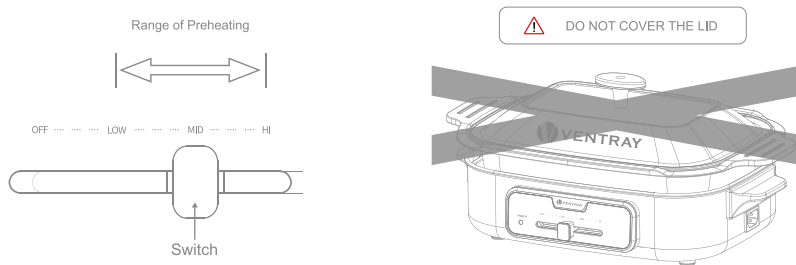

- 6. The electric grill may emit smoke and odors with first-time use under normal operating conditions, which will soon disappear after 5 minutes.
- 7. The indicator light will light up intermittently indicated because the thermostat is adjusting the temperature which is a normal operation.
- 8. During use, if you hear the sound of "ka ka", it is caused by the heating element, which is normal.

How to Use

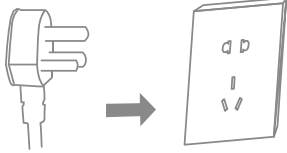
<p>1.Insert the power plug into the wall socket</p>	<p>2.Pre-heat the electric grill with the cooking pan. Here is the recommended time:</p>
 <p>Plug in The Socket</p>	<ul style="list-style-type: none"> • Steam grill pan: around 4min.
<p>3. Select the appropriate plate or pot before preheating, put the food inside the plate, then switch on the machine. Only use a wooden or silicone spatula to flip or stir the food.</p> <p> DO NOT USE METAL SPATULA OR SHARP APPLIANCE</p>	

Reference temperature fir the cooking modes:

Function	Temperature (°F)	Temperature (°C)	Suitable Food (For Reference)
LOW	212-266°F	100-130 °C	Pancake and cakes
MED	320-392°F	160-200 °C	Hamburger, Red bean cake
HIGH	374-482°F	190-250 °C	Barbecue, Grill, Takoyaki, Hot pot, Steam

- Above temperature is the surface temperature of plate or pot only, not lid cover and no food or water in the plate/pot.
- The heat insulation will be different in each plate and pot, please adjust the suitable temperature according to your actual need.
- Don't touch the lid, plate, pot, or any part of the appliance when cooking. Be careful of electric shock and high temperature. Before cleaning, please ensure all the cooking plates and pots have completely cool down.
- DO NOT clean the plate or pot at a high temperature with water or detergent directly, otherwise, it will damage the coating of the plate and pot and shorten the life of the protective- coating.

 4. After cooking, switch to the "OFF" position. Then remove the plug from the socket. Cool down the appliance and any plates used, take out the plate or pot with insulated gloves and use a soft cloth for cleaning.

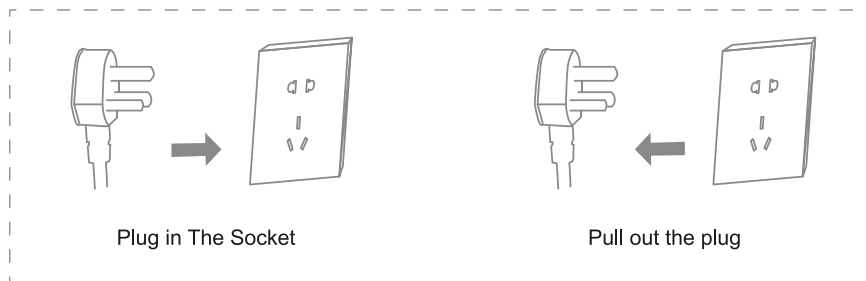

About Cooking Plates

1. Steam Grill Pan: Steaming + Grilling

- Put the steam grill pan on the base, preheating 4 - 5min.
- Place the food to be grilled or cooked on the plate, grill time varies among different food.
- Add some water to the groove at the edge of the plate, cover the lid until the food is fully cooked.
- When finished cooking turn the switch to the "OFF" position and let the device cool down before cleaning.

CLEANING AND CARE

1. It is important that you clean the machine after each use to prevent an accumulation of grease and avoid unpleasant odors.
2. The machine must cool down and unplug from the outlet before cleaning.
3. Do not immerse the machine in water or wash it under a waterspout.
4. Removable plates and pots can be washed, only use a soft cloth. The dishwasher is not recommended.
5. Clean the machine's outer surface of the appliance with a damp cloth.
6. Do not use abrasive cleaner or sharp utensils to clean the plates, pots and lid, as scratching may weaken it and cause shattering.
7. Let all removable accessories and surfaces dry thoroughly.

SPECIFICATIONS

Model:	VENTRAY EL-GRILL
Rated Voltage:	110V-120V, 50-60Hz
Rated Power:	1100W-1200W
Capacity:	4 Quart
N.W.:	3,45 kg / 7,6 lbs
G.W.:	4,65 kg / 10,25 lbs
Product Dimension:	383 x 260 x 165 mm / 15 x 10 x 6,5 in
Package Dimension:	435 x 305 x 270 mm / 17 x 12 x 10,6 in

PRODUCT REGISTRATION

WARRANTY REGISTRATION

Please visit
<http://www.ventray.com/warranty>
to register your product for manufacturer warranty coverage.