 


# urban ambiance

Installation Instructions: UHP3960


PART	DESCRIPTION	QUANTITY	
		UHP3960	
Α	Fixture	1	
В	Wicker shade	1	



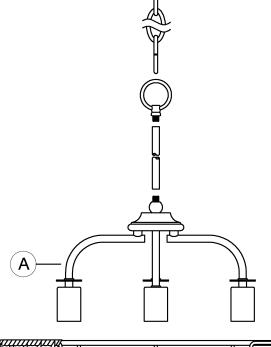

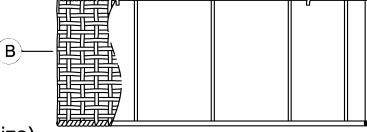

## HARDWARE CONTENTS (not actual size)

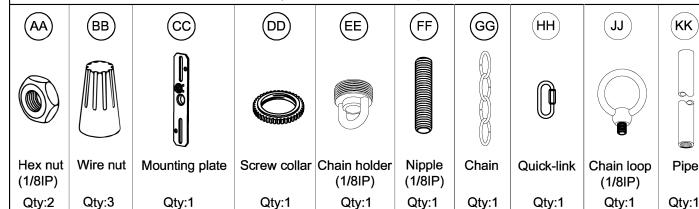



**Questions?** 

Qty:1

urban ambiance www.urbanambiance.com

Qty:1

(LL)

Canopy

Qty:1



## **Safety Information**

Please read and understand this entire manual before attempting to assemble, operate or install the product.

CAUTION: Read instructions carefully and turn electricity off at main circuit breaker panel before beginning installation.

CAUTION: Risk of fire. Min. 90°C supply conductors. Consult a qualified electrician to ensure correct branch circuit conductor.

WARNING: If any Special Control Devices are used with this fixture, follow instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.

CAUTION: All glass is fragile. Use care when handling glass shades and bulbs.


## Preparation

- 1. Before beginning installation, make sure all parts are included using the contents diagrams from page 1. If any part is missing or damaged, do not attempt to assemble, install or operate the product.
- 2. Estimated assembly time: 30 minutes.
- 3. Tools required for assembly (not included): Phillips screwdriver, pliers, wire stripper, safety glasses, electrical tape, ladder.

#### Care and Maintenance


Shut off main power supply before cleaning product or changing light bulbs. To clean, wipe with damp cloth. Do not use abrasive cleaners or cleaners that contain alcohol.


## Assembly Instructions

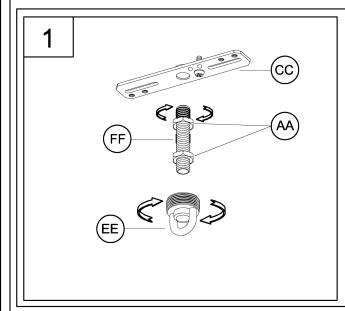

1. Screw threaded nipple (FF) into mounting plate (CC) several turns. Use one hex nut (AA) to secure parts tightly. Screw one hex nut (AA) and chain holder (EE) onto threaded nipple (FF). Tighten the hex nut against the top of the chain holder.


#### Hardware Used

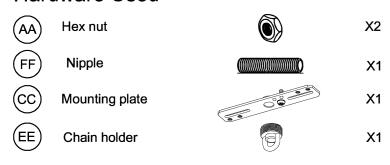

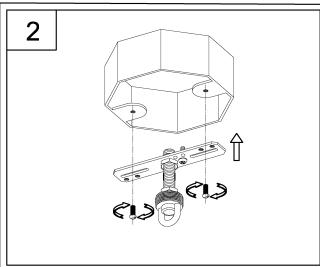


2. Attach assembled parts from step 1 onto outlet box using the mounting screws supplied with the outlet box (not included).

#### **ASSEMBLY INSTRUCTIONS**

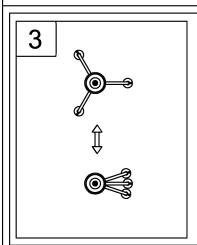


3. Adjust the arms by carefully turning them out from the center.

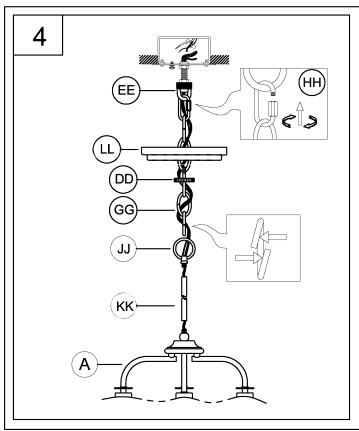


4. Pass the wires through the pipe (KK) and chain loop (JJ). Attach the pipe (KK) onto fixture (A) to secure it tightly. Weave wires through chain (GG). Pass wires and chain through screw collar (DD) and canopy (LL). Open one link of chain and attach this end to chain loop (JJ). Close the chain link. Attach the other end of the chain to chain holder (EE) using quick-link (HH) to secure tightly. Pass the wires through the chain holder/ threaded nipple/ mounting plate. NOTE: During this step, you may choose to shorten the chain

and electrical/ ground wires.

#### Hardware Used

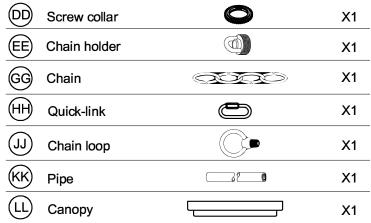

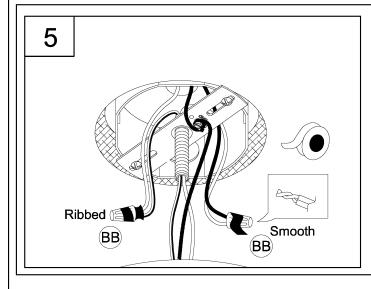


5. Strip 3/8" of insulation from the electrical wire ends. Using wire nuts (BB), connect RIBBED fixture wire to the WHITE supply wire from the outlet box; connect the SMOOTH fixture wire to the BLACK supply wire. Connect the fixture ground wire and supply ground wire using a wire nut or by fastening to the ground screw on the mounting plate. Push all wire connections into the outlet box.

ВВ Wire nut




X3

## **ASSEMBLY INSTRUCTIONS**

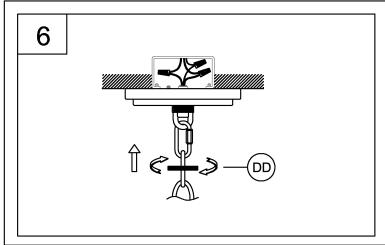

6. Tuck the wires into the outlet box and slip the canopy over the chain holder. Thread the screw collar (DD) onto the chain holder to secure the canopy tightly to the ceiling.

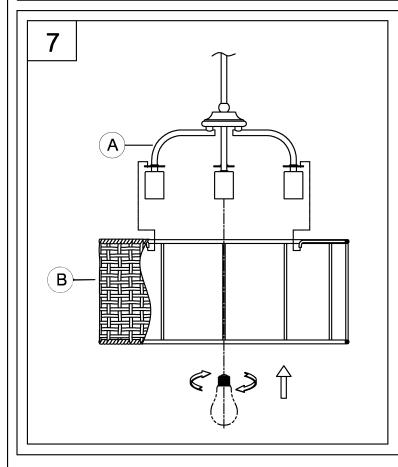

7. Place wicker shade (B) onto fixture (A). Screw lamps (not included) into fixture socket. Use 60-watt MAX incandescent medium base lamp, SBCFL or SBLED.