



Tools Required

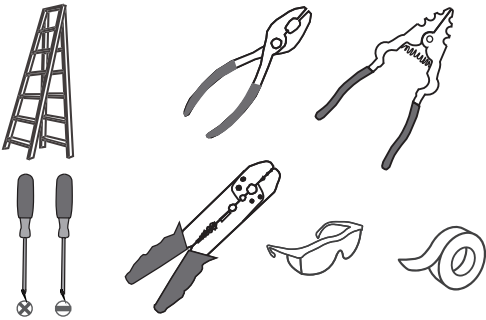

Light Source

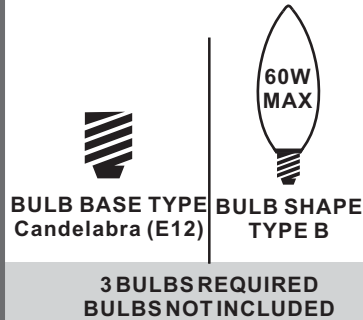

Fixture Height Adjustable 11.75" to 69"

⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.


Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents


Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.


PARTS BAG

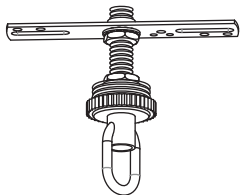


A Crossbar Assembly
x 1

 


B Outlet Box Screw
x 2

 


C Wire Connector
x 3

 

D Quick Link
x 2

 

E Fixture Chain
x 1

 


F Ceiling Canopy
x 1




N Lock Screw
x 4




G Fixture Loop
x 1

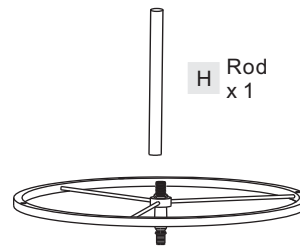

I Bridge
x 1

 


K Centre rod
x 1

 

M Socket Assembly
x 1



H Rod
x 1

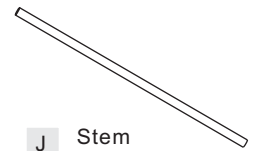

J Stem
x 4




L Ring
x 1

Table of Contents

Fixture Loop	Crossbar Assembly	Fixture Chain	Wiring	Ceiling Canopy	Bulb
STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6


STEP 1

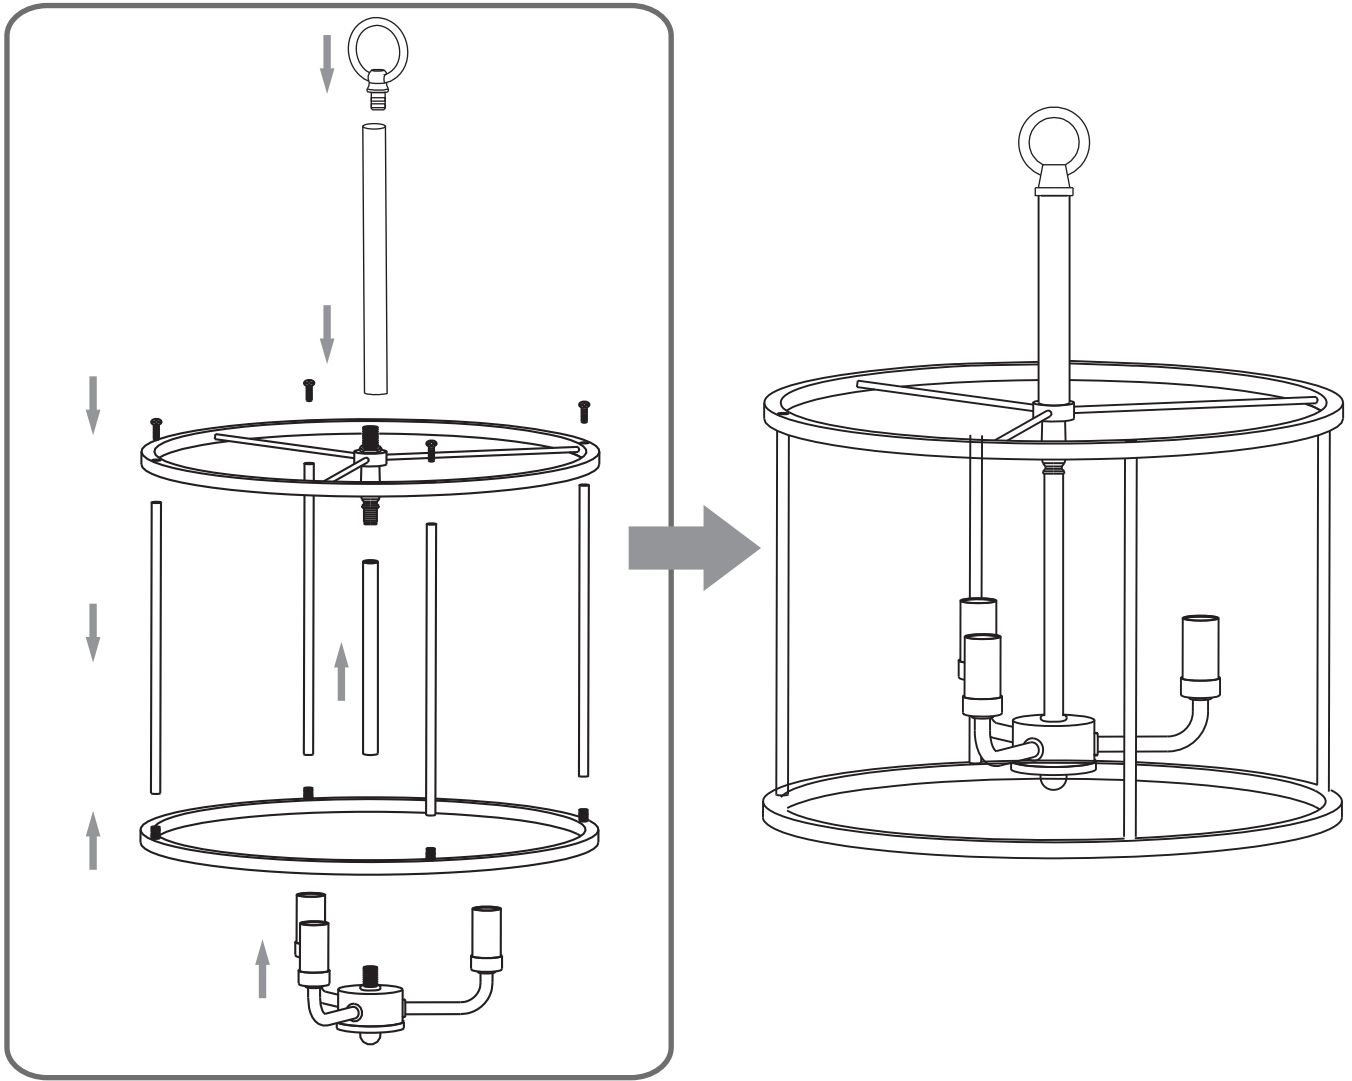

STEP 2


1

Step 1
Install crossbar assembly

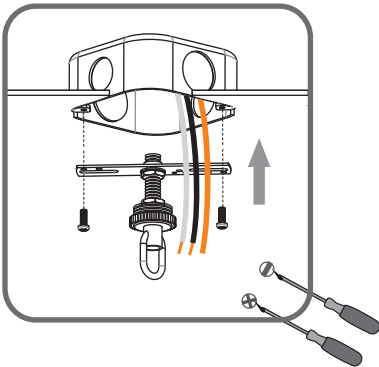


2

Step 2 - 3
Test fitting ceiling canopy to nipple

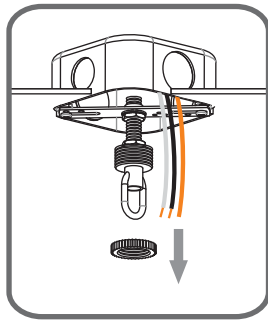


3

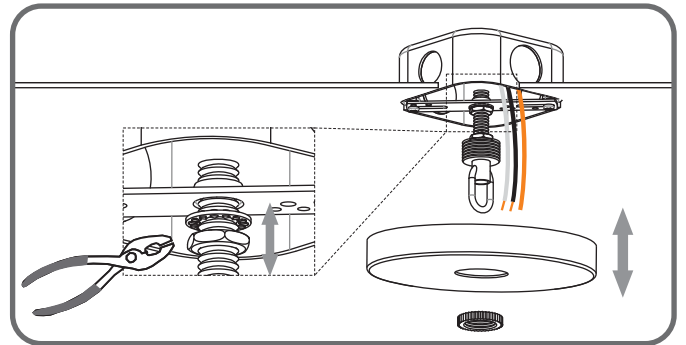

STEP 3


1

Step 1
Adjust fixture chain length

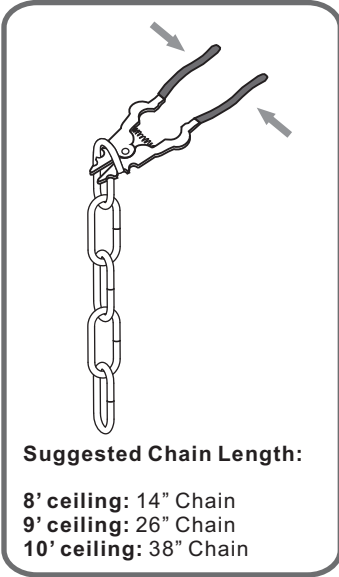


2

Step 2 - 3
Install Fixture Chain

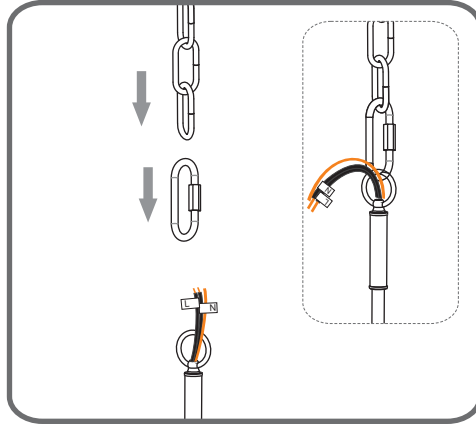


3

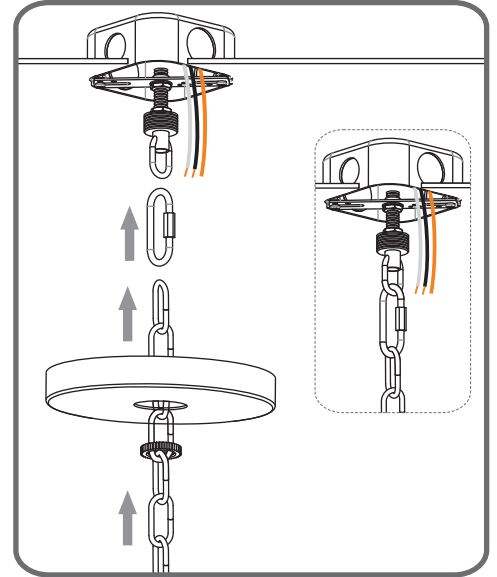


STEP 4

1


Step 1
Feed the fixture wires
through the loop

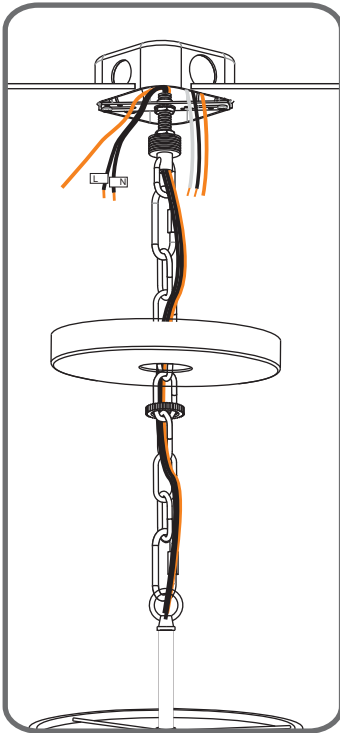

2

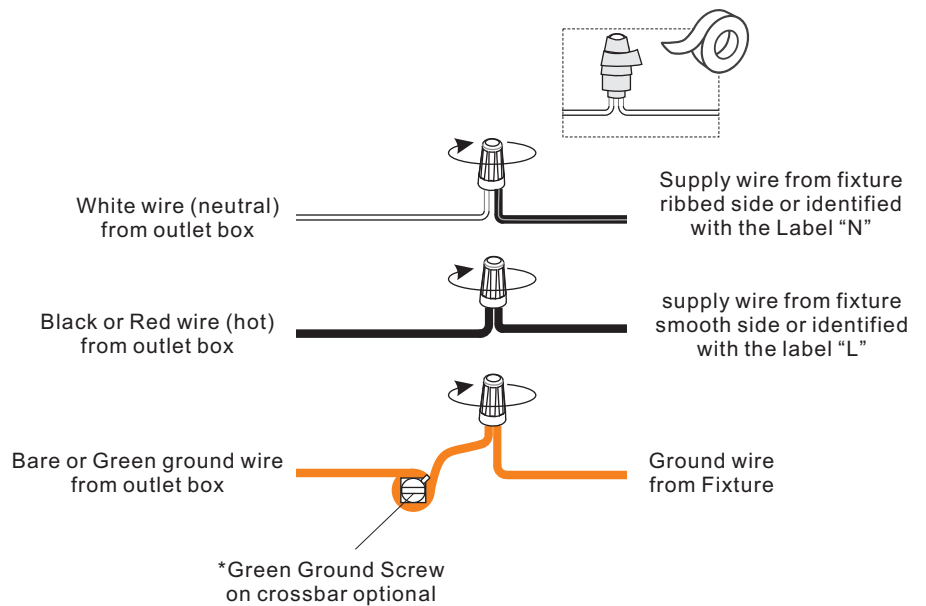

STEP 5

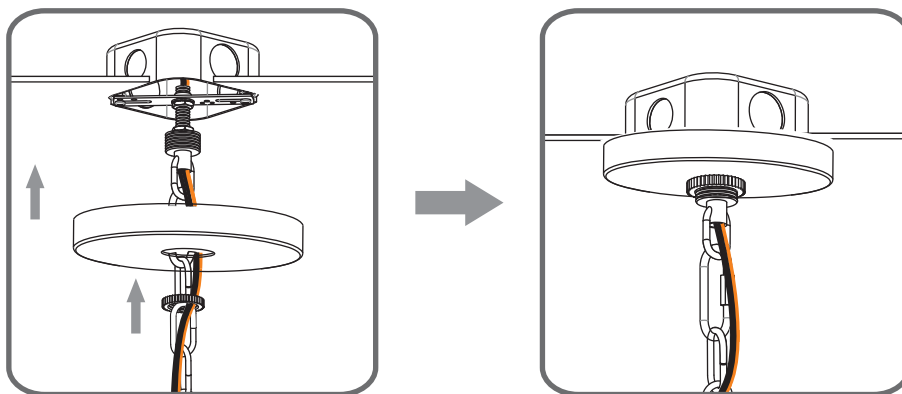

STEP 6

