 
 


Tools Required

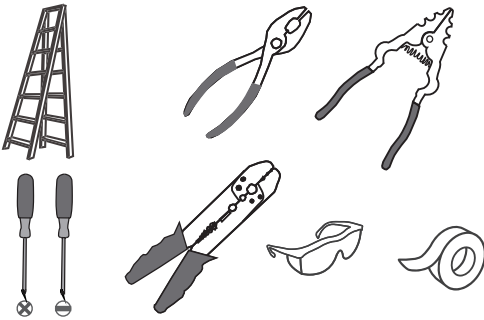

Light Source

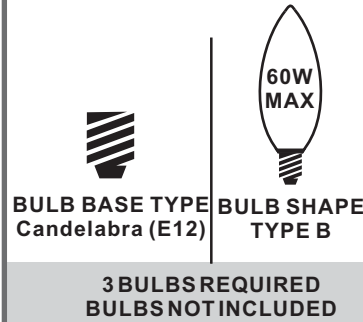

Fixture Height Adjustable 11.75" to 69"

⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.


Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.


PARTS BAG

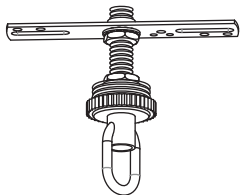


A Crossbar Assembly x 1



 B Outlet Box Screw x 2




C Wire Connector x 3

 

D Quick Link x 2



 E Fixture Chain x 1




F Ceiling Canopy x 1




N Lock Screw x 4




G Fixture Loop x 1

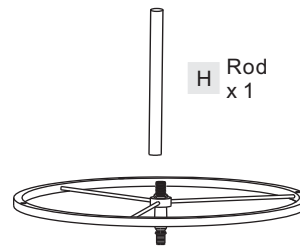

I Bridge x 1

 


K Centre rod x 1

 

M Socket Assembly x 1



 H Rod x 1

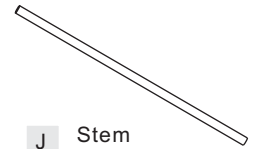

J Stem x 4



L Ring x 1


Table of Contents

Fixture Loop



STEP 1

 Crossbar Assembly

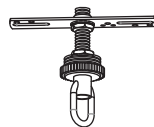


STEP 2

Fixture Chain



STEP 3

 Wiring

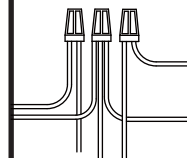

STEP 4

Ceiling Canopy




STEP 5

Bulb



STEP 6


STEP 1

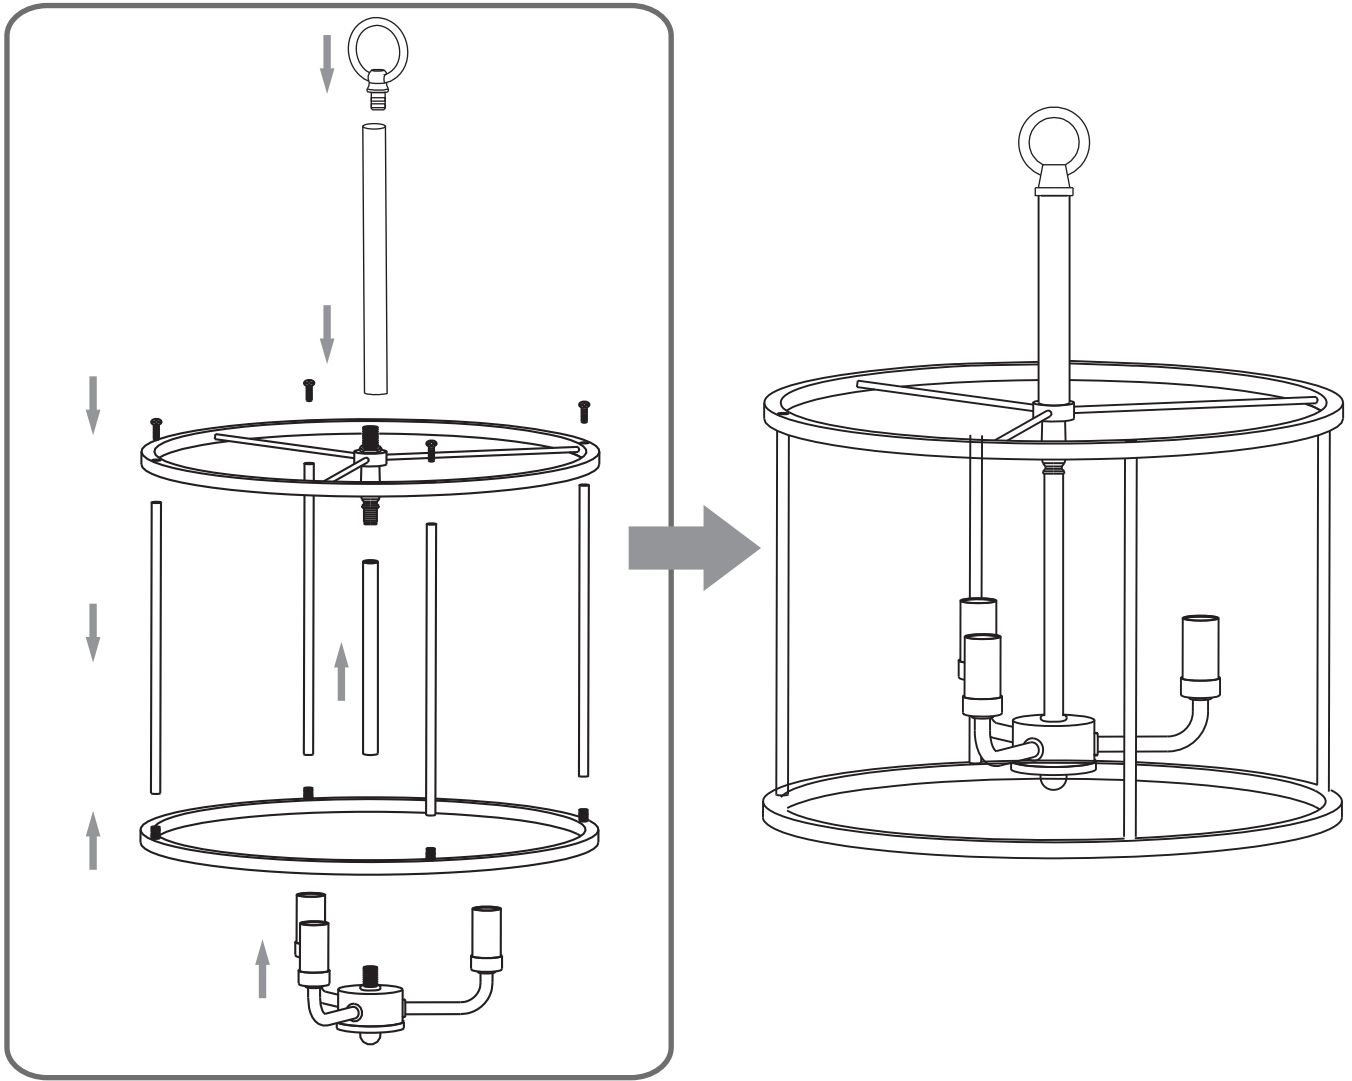

STEP 2


1

Step 1
Install crossbar assembly

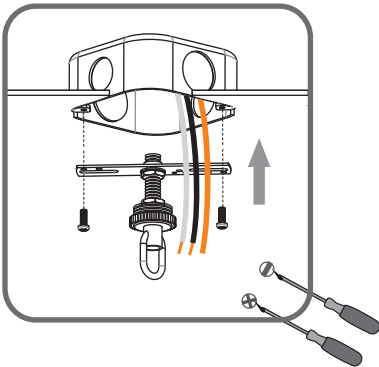


2

 Step 2 - 3
Test fitting ceiling canopy to nipple

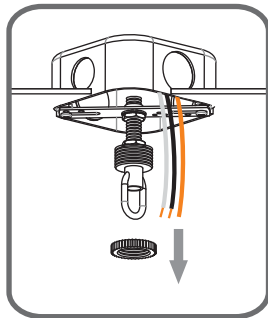


3

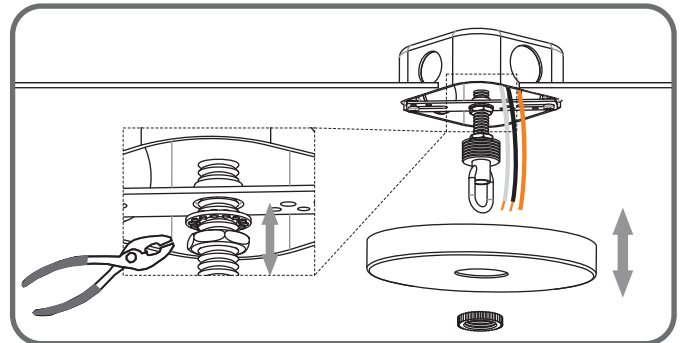 

STEP 3



1

Step 1
Adjust fixture chain length

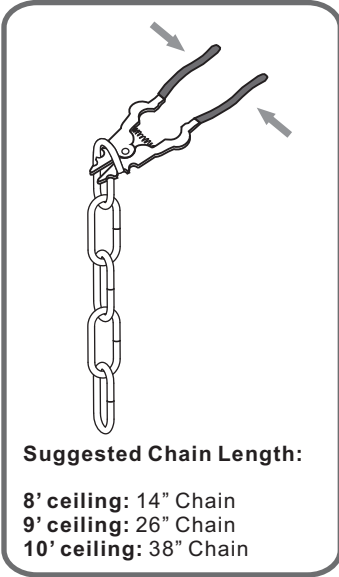

2

 
Step 2 - 3
Install Fixture Chain

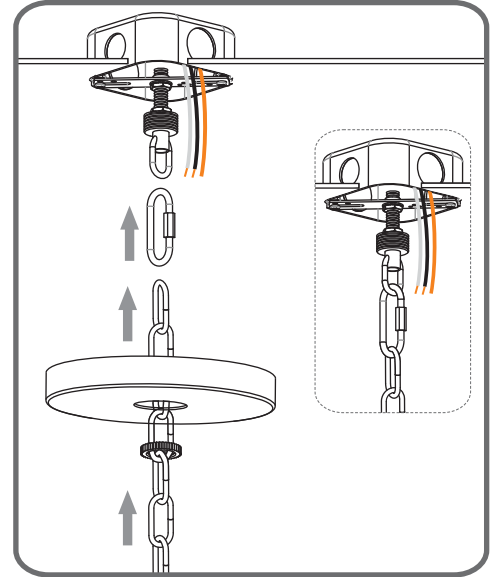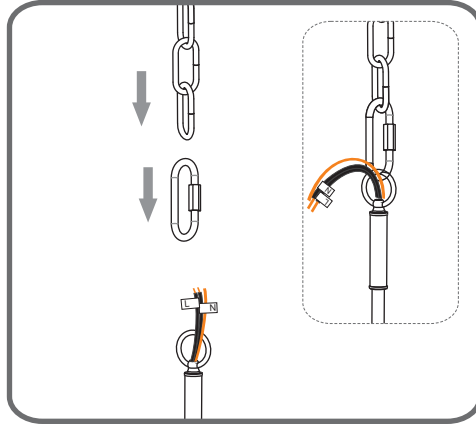


STEP 4

1

 
Step 1
Feed the fixture wires
through the loop

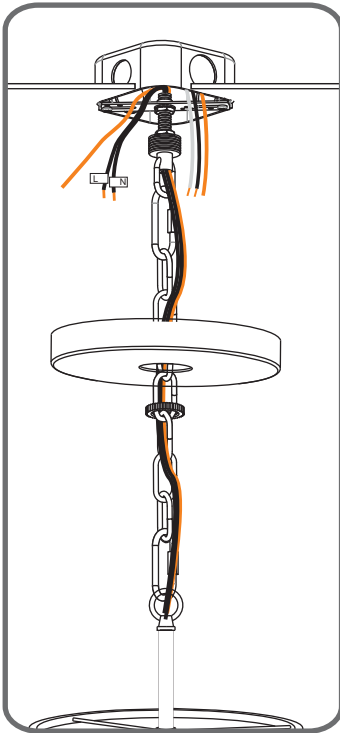

2

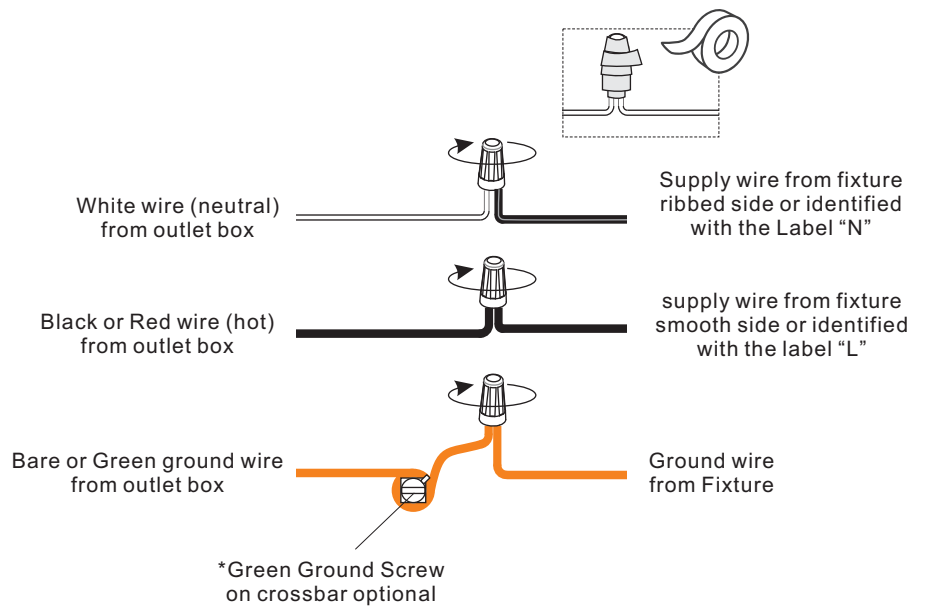 

STEP 5

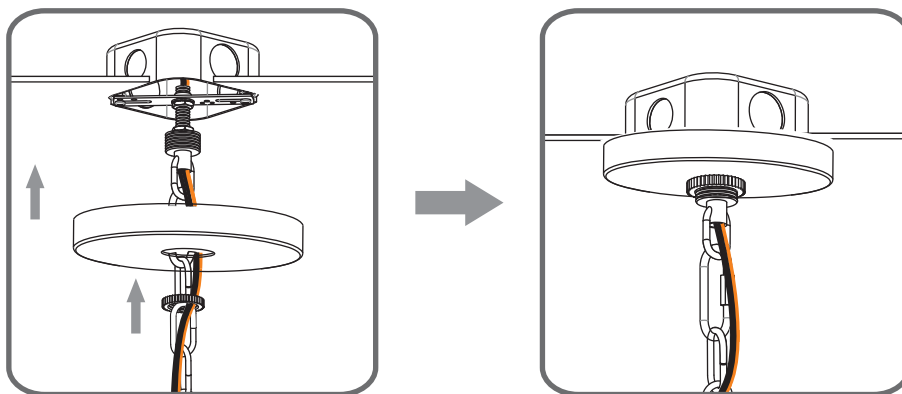

STEP 6

