



Tools Required

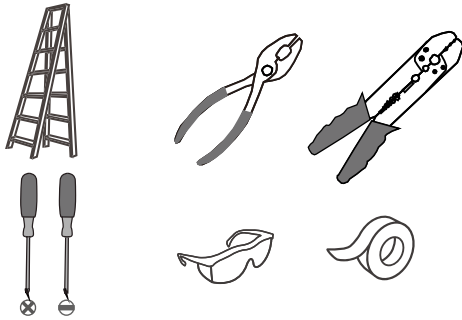

Light Source

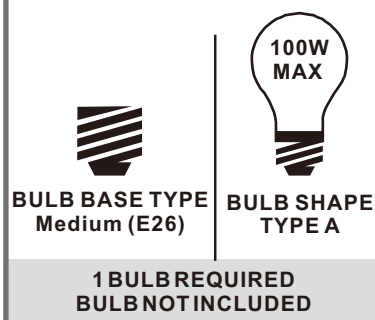

Fixture Height Adjustable 10.5" to 46.5"

⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.


Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

PARTS BAG

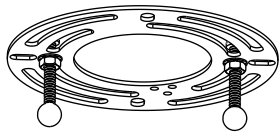


A Crossbar Assembly
x 1




B Outlet Box Screw
x 2



C Wire Connector
x 3

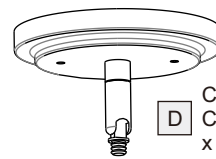

D Ceiling
Canopy
x 1

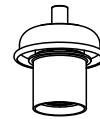


G Fixture
Body
x 1



E 6" L Rod
x 2


F 12" L Rod
x 2

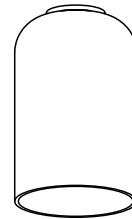

H Shade
x 1


Table of Contents

Crossbar Assembly

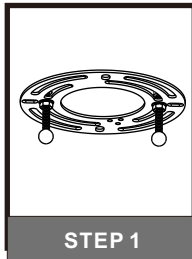


STEP 1

Downrod

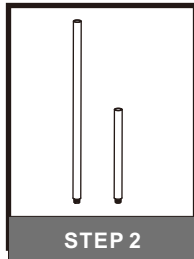


STEP 2

Wiring

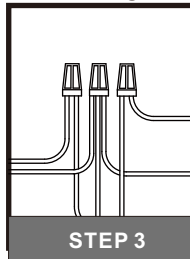


STEP 3

Ceiling Canopy

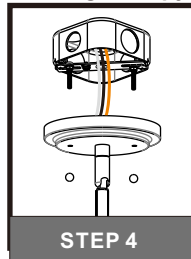


STEP 4

Shade & Bulb

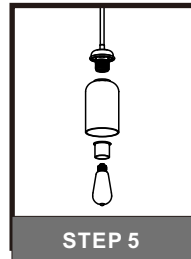

STEP 5


STEP 1

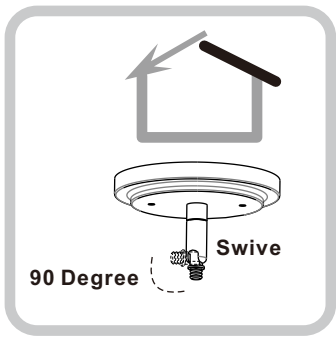



For angled ceilings,
Swivel opening towards wall.








1
Step 1
Install crossbar assembly

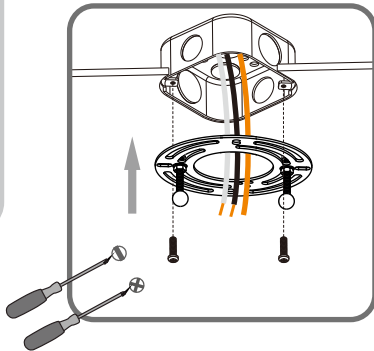



2
Step 2 - 3
Test fitting ceiling canopy to
mounting screws

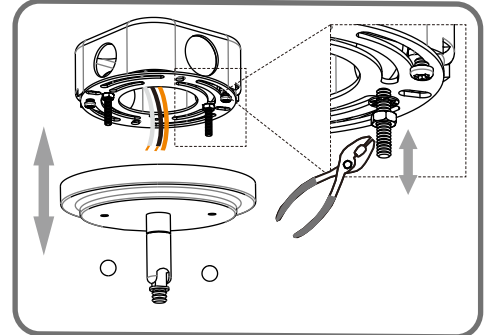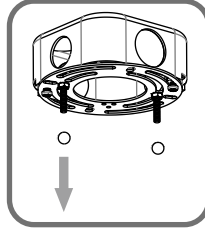


STEP 2

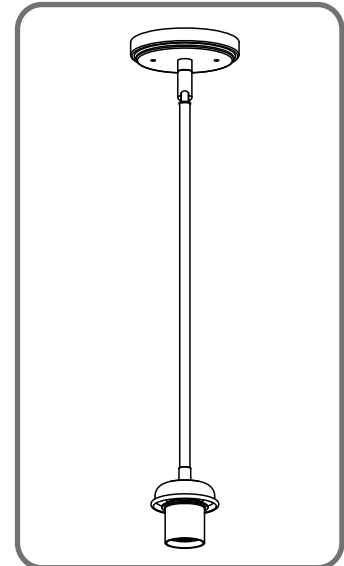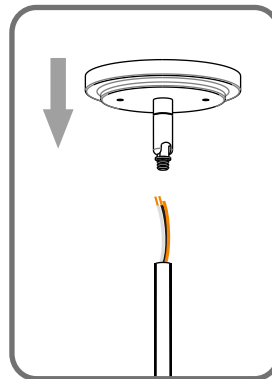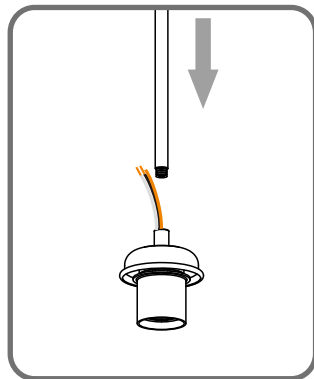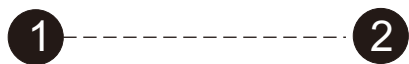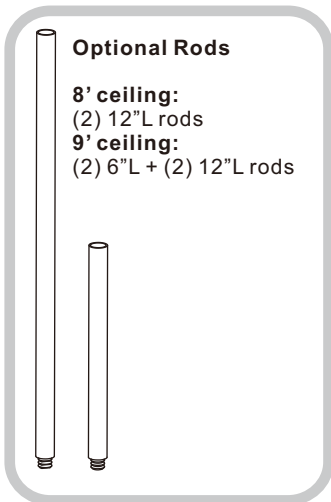

STEP 3

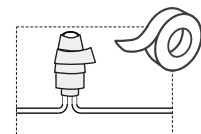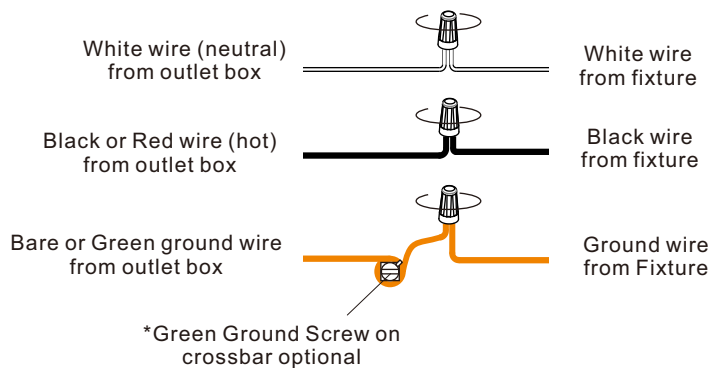

STEP 4

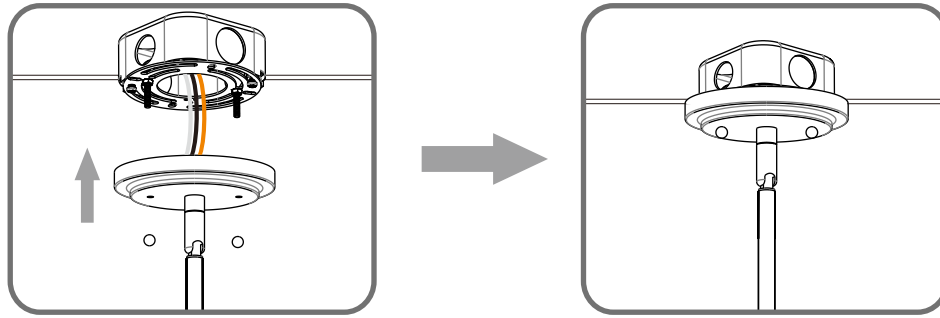

STEP 5

