

urban ambiance

Installation Instructions: UQL4072

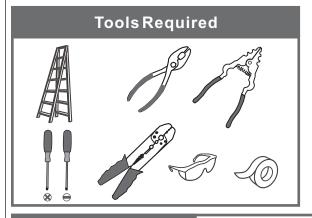

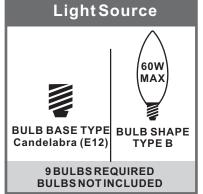

Fixture Height Adjustable 36.25" to 132.25"

△ Warnings and Cautions


Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

Turn off power to the fixture and allow the bulbs to cool before replacing.



Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

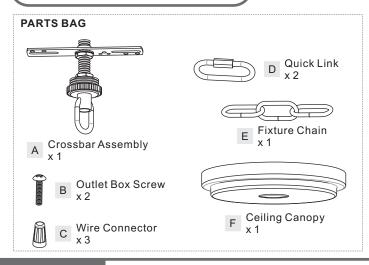


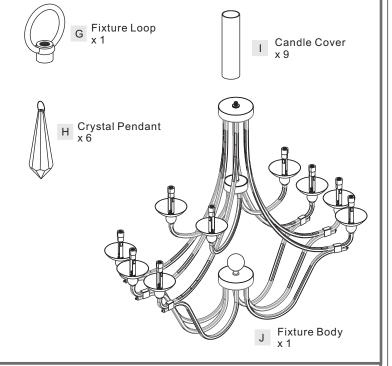


Table of Contents

  


 














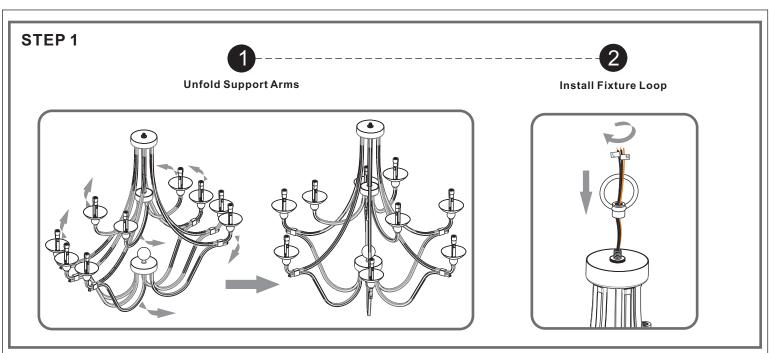

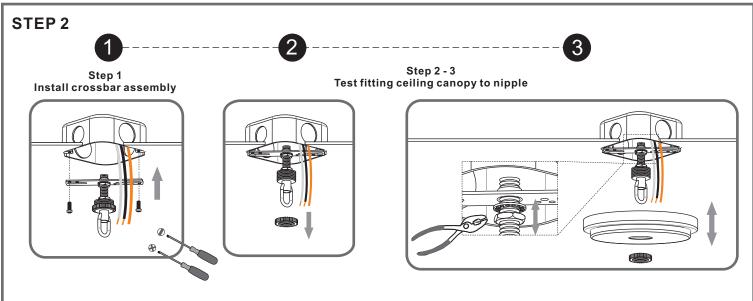








Step 1 Adjust fixture chain length



Step 2 - 3 Install Fixture Chain

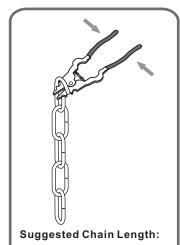

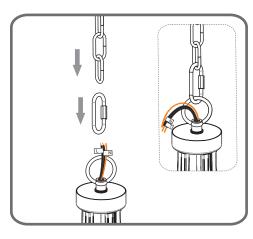

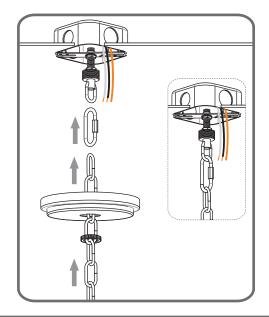



STEP 4



8' ceiling: 6.75" Chain 9' ceiling: 17.75" Chain 10' ceiling: 28.75" Chain

Feed the fixture wires through the loop

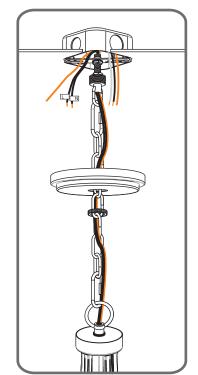

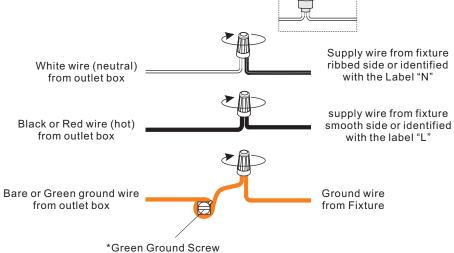


on crossbar optional

Ground wire from Fixture


with the Label "N"

with the label "L"

STEP 5

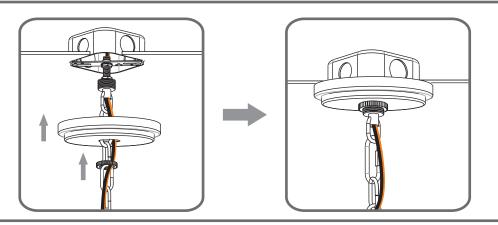

STEP 6

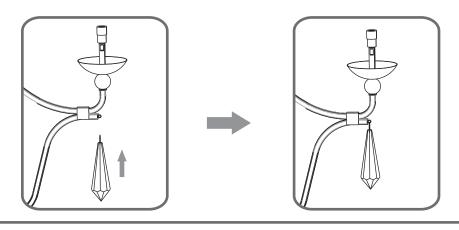

STEP 7

