



Because keeping you safe is our top priority...

Please take a moment to read through the following care and use instructions for your new apron.

We care a lot about your safety and satisfaction. That's why we've put together a few precautions for you to follow while using your NoCry Apron.

- The NoCry apron is tear and abrasion resistant, but not cut or puncture resistant. Make sure you don't place any sharp objects into the apron pockets without appropriate safety covers.
- You can wear the apron using your own belt or by using the included waist strap. If using the waist strap, the best way to adjust the apron is to first place the apron on the desired height of your waist and then adjust the width of the strap.
- Do not overburden yourself by placing too many heavy tools and objects in the apron at once. Make sure to watch your posture while working so that you do not overstrain your body.
- You can remove minor dirt/stains from your apron by using a soft brush. If the dirt/stains are stubborn use a washcloth and lukewarm water with a neutral detergent solution to clean it.
- Do not machine wash or use hot water to clean the apron. Avoid bleach (chlorine or peroxide) as this will discolor and damage the fabrics, edge binding and sewing thread. Avoid the use of alcohol or alcohol based products. Do not machine dry or iron the apron. After cleaning, hang it to drip dry.

If you have any questions or concerns about your apron, feel free to contact our customer support at wecare@nocry.com. We're always here to help.

Love your new NoCry apron?

Share an honest review of your experience on 

Your feedback will go a long way in helping us serve you better and grow as a company.

To Leave an Amazon Review go to **Amazon > Orders (top menu) > Write a product review**

Or, search for NoCry Apron on Amazon, and leave a review