



3 Ah 20V Battery Instruction Manual

We've tried to make this manual useful, simple, and understandable.

Please read it carefully, and keep it safe for future reference.



WHAT'S INSIDE THIS MANUAL

THE ABC'S OF BATTERY SAFETY	3
Safety symbol meanings	4
TECHNICAL SPECIFICATIONS	5
HOW TO USE NOCRY BATTERIES	6
How to remove or insert a battery	6
When to charge the battery	7
MAINTENANCE	7
BATTERY LIABILITY	8
RESPONSIBLE DISPOSAL	8
WARRANTY	9
HOW TO CONTACT NOCRY	10

THE ABC'S OF BATTERY SAFETY

Read all safety warnings and instructions *before* using your battery. They're pretty reasonable, and neglecting them may result in electric shock, fire, and/or serious injury. There are other (and much better) ways to get your adrenaline going.

Save this manual for future reference, review in between uses, and make sure that anyone who's going to use your new battery has read and fully understood all the information in here as well.

In case this manual disappears into the black hole that all manuals seem to fall into, you can get a digital copy of it at <https://nocry.com/pages/instructions>, or by letting us know at wecare@nocry.com.

So, let's get to it, shall we?

Your battery isn't waterproof or splash proof. Under no circumstances should you use it in damp or wet conditions, rain, spray with water, or immerse in liquid or risk the danger of explosion or electrocution. Zap.

Keep your battery away from open flames, sparks, fuel lines or any other ignition sources, or combustible materials.

Only use original NoCry batteries and fast chargers for powering all NoCry cordless power tools. Use of unoriginal batteries or unapproved fast chargers may lead to explosions. And who needs that?

There is **no need to open the battery** itself, so don't bother. You risk the danger of it short-circuiting, being electrocuted and it will also void your warranty, *really* not worth it.

Hazardous vapors may be emitted from the battery if it's damaged. If you smell fumes or feel other than your usual self, stop working, ventilate the area properly, and seek medical help. The vapors can irritate the respiratory system and are dangerous.

Under abusive conditions, liquid may leak from the battery; best to stay well clear. Liquid from the battery may cause irritation or burns. If you should make accidental contact, make sure to wash affected areas thoroughly with water. If liquid contacts eyes, seek immediate medical attention.

When a battery pack is not in use, keep it away from other metal objects such as paper clips, coins, keys, nails, screws etc. Shorting the battery terminals may cause burns or a fire.

When transporting a battery, be sure that the battery has been properly packaged and that the terminals are protected and well insulated.

NB! NoCry Work & Safety Gear and the manufacturing plant shall not be liable for any changes made to the battery, nor for any damage resulting from such changes.

Safety symbol meanings

These symbols are on your battery for a reason - to keep you aware and safe. Please take them into account.



This 20V battery conforms with the North American safety standards.



As this is a lithium-ion battery, do not throw it out with regular waste. Return exhausted batteries to your local collection or recycling point. See page 8 for how to dispose battery responsibly.



Do not expose or immerse this battery to moisture, rain or water.



Do not burn or expose this battery to heat or open flames.



RECY

Parts of this battery can be recycled and should be done so responsibly.



MAX.122°F

This battery has a max operating temperature of 122°F. This operating temperature should not be exceeded.

TECHNICAL SPECIFICATIONS

Model	NoCry NBP3.0Ah 20V
Battery	Lithium-Ion 20V 3000mAh
Battery max temp	122°F
Battery charging time	1.5 hours
Total weight	1.5lbs

HOW TO USE NOCRY BATTERIES

How to remove or insert a battery

To remove a battery...



1. Hold the power tool by the handle in one hand, and press and hold the unlock button with the other.

2. Gently slide the body of the tool away from the base of the battery. There's no need to exert any unnecessary force as you can damage the battery power contacts.

To insert a battery...



1. Line the connectors of the battery up with the base of the handle of your power tool.






2. Slide the tool and the battery towards each other. Ensure the contacts meet and make a 'click' noise.

3. Check the battery is securely attached to the power tool before using again.

When to charge the battery

Your battery comes partially charged on arrival, however we recommend fully charging it **before** using it in your power tool for the first time. If you experience any issues after charging, get in touch with us at wecare@nocry.com

The battery charge level indicator conveniently lets you know how much charge remains in your battery and is located on the back of the battery pack. Pressing the indicator button illuminates the four LED triangles showing you how much charge remains.

<i>Charge level indicator</i>	<i>Amount of charge remaining</i>
	0-10%
	10-25%
	25-50%
	50-75%
	75-100%

NB! Tools requiring a large power supply (like the angle grinder & nail gun) will sometimes appear to have stopped working, but the remaining charge indicators still light up - don't be alarmed, your tool works fine. The battery protects the tool by preventing the voltage falling below a certain level, causing the battery to show two or three remaining charge levels, when the tool is effectively flat. Charge the battery as normal when this occurs.

Be on the lookout for when your battery pack nears the end of its lifecycle: Should your power tool start acting strange or not performing as you know it should, it might be time to replace the battery.

When it's finally time to part ways (which should be after 200 charging cycles, or 1-2 years of regular use), please remember to properly dispose of the battery. See our 'responsible disposal' guide on page 8.

MAINTENANCE

Good news - there are no parts inside your battery that require professional maintenance. All that's needed is some good old fashioned TLC - love your tools and accessories and they will love you back.

For safety reasons and your overall peace of mind, we recommend having your battery pack given a once-over by an expert once every 12 months to ensure that it will continue to operate safely. We must mention that all (potentially deviating) national inspection and maintenance regulations must be observed.

BATTERY LIABILITY

This product is covered by an EU directive, valid since 01.01.1990, specifying that the manufacturer is only liable for products if all the parts originate from the manufacturer or are approved by them, and if the units are mounted and operated properly.

If accessories or spare parts from third parties are used, liability can be partially or completely inapplicable. So no using those shifty parts you picked up on the cheap. In extreme cases, the responsible authorities can prohibit the use of the entire unit.

We recommend you always buy original parts and accessories as compliance with all safety regulations is guaranteed, meaning you are covered and protected. Another weight off your mind.

RESPONSIBLE DISPOSAL

This product has been marked with a symbol relating to removing electric and electronic waste.

The Waste Electrical & Electronic Equipment Regulations (WEEE) requires that any product showing this marking must not be disposed of with other household or commercial waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate any such product from other waste types and recycle it responsibly at your local recycling facilities. Check with your local authority, recycling centre or retailer for recycling advice. Don't just chuck your battery in the trash or leave out on the street.

WARRANTY

All NoCry products are inspected and tested to ensure their quality before leaving the factory. If you're not happy with your NoCry product, please contact us within 30 days of receiving it at wecare@nocry.com to return it for free for a replacement product or to receive a full refund. The choice is yours.

Each NoCry electric product is warranted to be free of defects in material and workmanship for the period of FOUR years from the date of original purchase. Warranty does not cover normal wear and tear, abuse, altered products, modifications, and products that have been repaired or attempted to be repaired by others than NoCry. At NoCry's discretion, a defective product will be repaired or replaced.

This warranty gives you specific legal rights, but may be superseded by any other rights or warranties in effect, which may vary from state to state (or based on your local jurisdiction). If you think you might have a defective product, please contact us at wecare@nocry.com. Our customer care team will be happy to help and start the (free) procedure to determine whether your product is defective.

NoCry's warranty applies to ONLY products being sold by Authorized Resellers. We regretfully will not provide any warranty for products sold by any other sources. Proof of purchase will be required to obtain warranty. Please review the warranty carefully, and contact us if you have any questions.

HOW TO CONTACT NOCRY

We're glad to have you join the NoCry community, and we hope you are happy with your new NoCry Battery. If you have any questions or concerns, let us know by emailing wecare@nocry.com.

We'd also love to connect with you via social media. You can find us on Instagram, Facebook and Pinterest by searching "NoCry Work & Safety Gear".

Thumbs up or thumbs down for your experience with your NoCry 20V Battery?



If this is your response, know that at NoCry, we try to treat everyone like we'd treat our own mom. On her birthday, no less. So **please let us know what went wrong by sending us an email at wecare@nocry.com**. We'll be on the case right away.



If you're happy with your purchase, why not spread the word to others who are looking for a battery AND **help us serve you better and grow as a company**, by leaving a review on Amazon? To leave a review, go to Amazon > Orders (top menu) > Write a product review. Or search for the NoCry 20V Battery on Amazon, and leave your review that way.