


DIYCO™

Advance Digital Tools

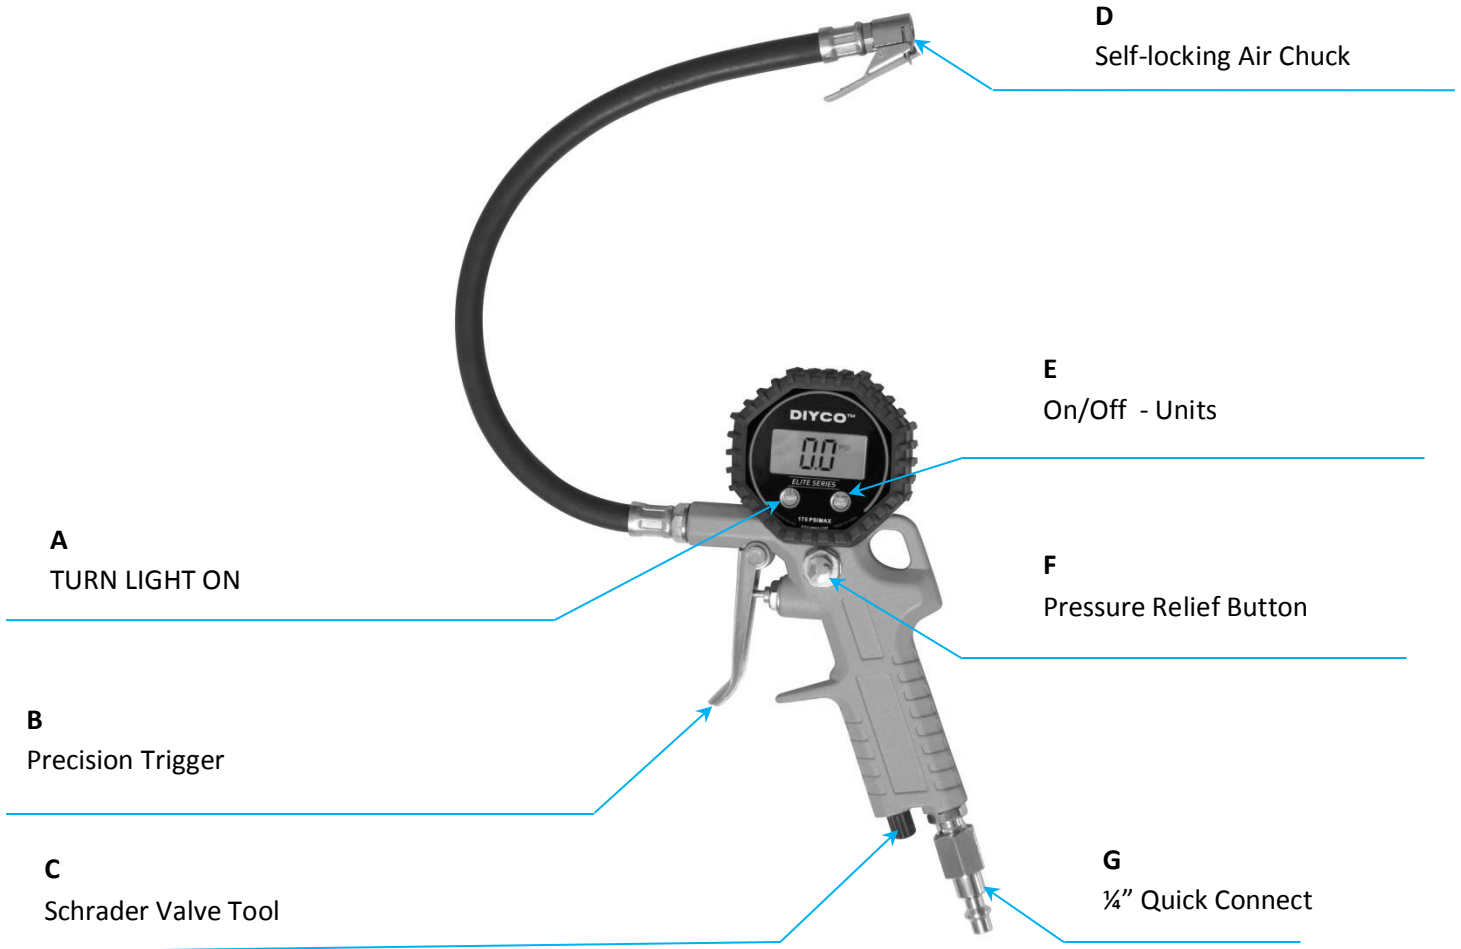

Caution: Safety glasses must be worn when operating this tool.

Please consult vehicle owner's manual for proper tire pressure specifications.

- 1.) Turn on gauge by pressing (E) on/off button. Toggle button until desire units of measure displays.
- 2.) Connect air hose to (G) quick connect. Insert (D) self-locking air chuck to tire valve stem. Make sure no air leaks. Note the pressure reading.
- 3.) TO INFLATE: pull on the trigger (B)
TO DEFLATE: press on the pressure relief valve (F)

Maximum operating pressure: 175 psi

For additional support visit us at www.diycopro.com

PRODUCT INSTRUCTION MANUAL