


How to Measure Main Fences

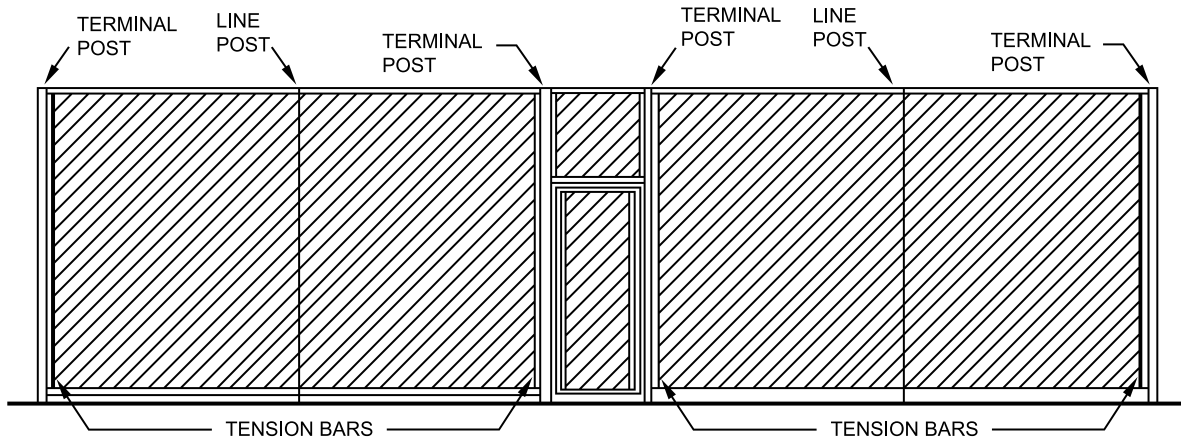

1. You should begin taking measurements at a terminal (corner) post and continue to the next terminal post. Do not hold the measuring tape up to the fence. This will create slack, which could cause your measurements to be inaccurate.
2. Measure the windscreen length from inside tension bar to inside tension bar. You may disregard line posts unless they are on the court side of the fence. For ease of handling, try to keep an individual curtain under 60'.
3. Measure the height of the windscreen from the bottom of the top rail to the top of the bottom rail. Keep in mind that windscreen is generally installed one or more feet from the top and bottom of the fence.
4. Mark each measurement on a diagram of each court. Send a copy of this diagram to us when you place your order so that each windscreen will be properly labeled when it is shipped to you. Also be sure to tag each panel before you remove your windscreen for storage each year.
5. Exact measurements are necessary (including feet and inches). Do not guess or round off dimensions. No two fences are identical.

How to Measure Gates and Transoms

1. The width of the gate should be measured from inside tension bar to inside tension bar. The height of the gate should be measured from the bottom of the top rail to the top of the bottom rail. Keep in mind that windscreen is generally installed one or more feet from the bottom of the fence.
2. The width of the transom should be measured from inside tension bar to inside tension bar. The height should be measured from the bottom of the top rail to the top of the rail that's over the gate opening.

