


ATTENTION!

This Ditting 1403 grinder requires **3 phase 220V** power to operate correctly. Please be sure that your power conforms to the diagram below.

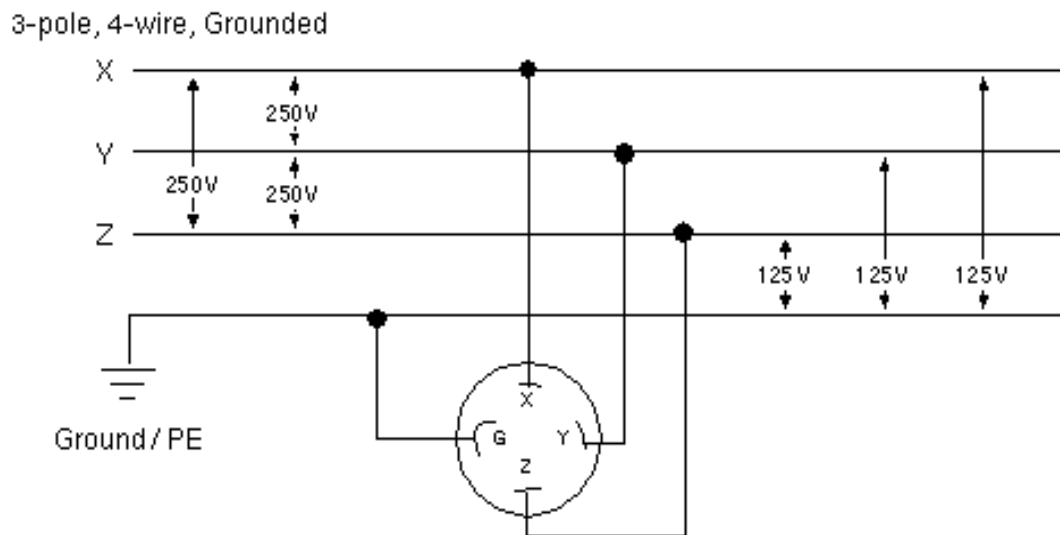

If your power is correct and the grinder operates but the rotational burr spins clockwise instead of counterclockwise, then you need to switch the position of any two hot lead wires, X, Y or Z (red, black, white) in the plug cap.

