

SELF-WATERING FABRIC POT BASE

WELCOME

Thank you for choosing AC Infinity. We are committed to product quality and friendly customer service. If you have any questions or suggestions, please don't hesitate to contact us. Visit www.acinfinity.com and click contact for our contact information.

EMAIL

support@acinfinity.com

WEB

www.acinfinity.com

LOCATION

Los Angeles, CA

MANUAL CODE SPA2304X1

PRODUCT

Self-Watering Fabric Pot Base Self-Watering Fabric Pot Base, XL

MODEL

AC-SPA5-4 AC-SPA9-4

UPC-A

819137022706 819137024182

MANUAL INDEX

Manual Index	Page 5
Product Warning	Page 6
Key Features	Page 7
Product Contents	Page 8
Assembly	Page 9
Maintenance	Page 10
Self-Watering	Page 11
Other AC Infinity Products	Page 14
Warranty	Page 15

PRODUCT WARNING







TO REDUCE THE RISK OF FIRE OR INJURY TO PERSONS. OBSERVE THE FOLLOWING:

- DO NOT stand on the product.
- 2. Perform regular maintenance to prevent mineral buildup or potential pest infestation.
- EXERCISE CAUTION when fusing frayed wick lines together. Improper use of lighters and other sources of fire may cause severe burns, injury, or death.


KEY FEATURES

SECURE STRUCTURE

The elevated plate raises your fabric pot to prevent buildup and drain excess water into the basin below.

ACTIVE MONITORING

Included reservoir meter displays the current hydration levels to avoid under or overwatering.

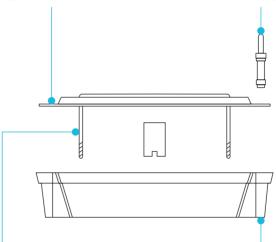


STEADY DELIVERY

Fully adjustable wick lines automatically supply water and nutrients from the drip tray up to your plant's roots.

HEAVY-DUTY BASIN

Load-bearing base and center column support fabric pots weighing up to one hundred pounds.

PRODUCT CONTENTS

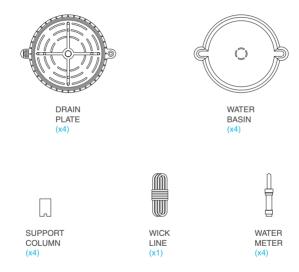


ASSEMBLY

STEP 1


Place the support column in the center of the water basin.

Make sure the support column's feet fit into the water basin's center divots.

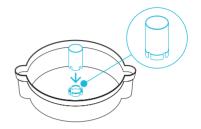

STEP 2


Place the water meter into the designated opening, then place the drain plate over the basin.

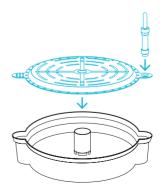

MAINTENANCE

MANAGING RUNOFF

 The drainage holes will deposit water runoff from the bottom and sides of the fabric pot to maintain a cleaner workspace and prevent waterlogging.




MANAGING RUNOFF

Drain excess water runoff when the meter indicates a full basin. Pour the water out through the spout at the opposite end of the meter.

This step is only necessary if you are not utilizing the self-watering feature.

It is recommended to clean the basin every two weeks to prevent minerals from building up and pests from nesting.

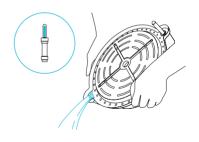


SELF-WATERING

PLANT PREREQUISITES

Your plant's roots must reach through to the bottom of your fabric pot for the self-watering action to function properly.

 You can confirm this by checking if your plant's leaves are level with your fabric pot's rim, or if any dried roots have penetrated the bottom.



FILLING THE RESERVOIR

Fill the basin with water and your preferred watersoluble nutrients.

When watering, lift your fabric pot off of the base and pour water directly into the reservoir. Leaving your fabric pot on top of the reservoir throughout the entire grow may cause the roots and wick lines to interlock, resulting in hindered water delivery.

Refill the basin whenever the water meter reads empty. It is recommended to clean and refill the basin every two weeks to prevent unwanted buildup and further protect against interlocking roots and wick lines.



 
SELF-WATERING

 
USING THE WICK LINES

Thread the wick lines through the drain plate's holes. Refer to the chart below. Make sure that the ends of the wick lines reach the basin floor.

You may reduce the amount of water being fed by using only one wick line. You may also increase the amount of water being fed by using more wick lines and threading them diagonally.

To keep the wick lines from fraying, you may light the ends to fuse the threads together.







FABRIC POT SIZE	WICK LINE LENGTH	NUMBER OF WICK LINES
1-3 GAL.	1.25 FT	2
5 GAL.	1.5 FT	2
7 GAL.	1.75 FT	2
10 GAI	2 FT	2

EXERCISE CAUTION when lighting wick line ends, as improper use of lighters and other sources of heat can cause severe injuries.


SELF-WATERING

PLACING YOUR FABRIC POT

Set your fabric pot on top of the drain plate. Lift up your fabric pot when making adjustments. Twisting and rotating the fabric pot while it is resting on the pot base will pull the wick lines away from the water and disrupt the self-watering action.

The wick lines will feed a steady stream of water and water-soluble fertilizer up to the lower third of your fabric pot and create a small buffer for air circulation.

Use of potting mixes containing peat moss and/or coco coir is recommended to best ensure water delivery up to your plant's roots.

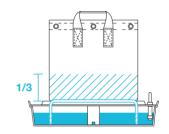

Replace wick lines that start to unravel, discolor, or stop delivering water.

AC INFINITY PRODUCTS

Advance Grow Tents

The CLOUDLAB series is a line of grow tents designed to create ideal growing conditions and facilitate indoor plant cultivation year-round. Features 2000D thick oxford canvas lined with inner diamond patterned mylar that maximizes grow light luminosity, and a reinforced frame with 150 lb. weight capacity. Includes a mounting plate to install your AC Infinity controller onto.



Fabric Pots

A set of gardening grow bags designed to create wider root networks and improve plant growth by air pruning roots while draining excess water. Features industry leading 500G thick nonwoven fabric sewn with metal rings to enable air-suspended hanging or twist tie pass-through for low stress plant training.



Trellis Nets

A tearproof grow tent net designed to improve lateral plant growth and provide weight-bearing support capable of handling heavier vegetation. Using versatile steel hooks, this durable trellis netting is crafted to securely clip onto grow tent's frames and withstand acute stretching.



WARRANTY

This warranty program is our commitment to you, the product sold by AC Infinity will be free from defects in manufacturing for a period of two years from the date of purchase. If a product is found to have a defect in material or workmanship, we will take the appropriate actions defined in this warranty to resolve any issues.

The warranty program applies to any order, purchase, receipt, or use of any products sold by AC Infinity or our authorized dealerships. The program covers products that have become defective, malfunctioned, or expressively if the product becomes unusable. The warranty program goes into effect on the date of purchase. The program will expire two years from the date of purchase. If your product becomes defective during that period, AC Infinity will replace your product with a new one or issue you a full refund.

The warranty program does not cover abuse or misuse. This includes physical damage, submersion of the product in water, incorrect Installation such as wrong voltage input, and misuse for any reason other than intended purposes. AC Infinity is not responsible for consequential loss or incidental damages of any nature caused by the product. We will not warrant damage from normal wear such as scratches and dings.

Contact our dealers department at dealers@acinfinity.com or (626) 838-4656 for more information about our dealers and distributors program. Contact our customer service department at support@acinfinity.com or 626-923-6399 for product and warranty assistance. Our business hours are Monday through Friday, 9:00 am to 5:00 pm PST.



If you have any issues with this product, contact us and we'll happily resolve your problem or issue a full refund!



