 


IN-WASH SMART REMOTE CONTROLER

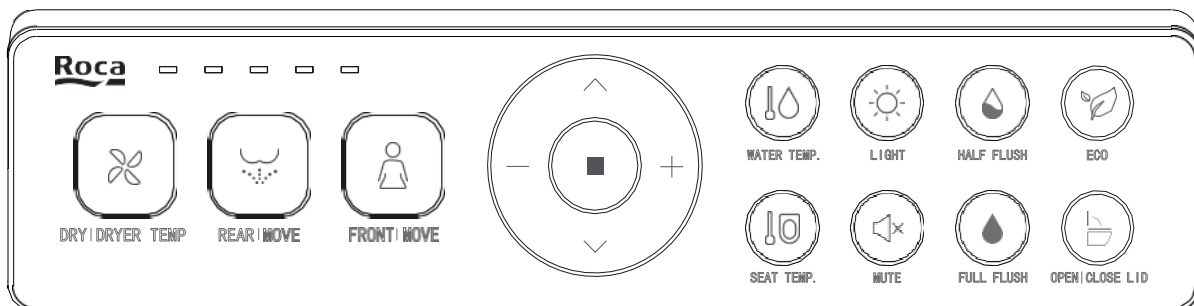

Please use the product correctly after reading this manual carefully.

This manual is attached with a letter of guarantee, so please keep it properly and take it out for reading when necessary.



Content

Installation preparation

- 01. Remote control installation _____ 01
- 02. Battery installation _____ 01

Usage instruction

 
- 01. Remote control illustration _____ 02
- 02. Rear/Front washing _____ 03
- 3. Drying/Dryer temperature _____ 04
- 4. Water volume adjustment _____ 04
- 05. Nozzle position adjustment _____ 04
- 06. Energy saving _____ 04
- 7. Water temperature adjustment _____ 05
- 8. Seat temperature adjustment _____ 05
- 09. Night light _____ 05
- 10. Half flush/Full flush _____ 05
- 11. Open/Close by remote control _____ 06
- 12. Quiet mode _____ 06
- 13. Water tank flush volume adjustment _____ 06
- 14. User code _____ 06
- 15. Other operations _____ 07

Installation Preparation

Remote control installation


Remote control holder installation 1 :

1. Drill two 6mm diameter holes in the wall at a distance of about 130.7mm, a depth of about 35mm.
2. Remove the double-sided adhesive tape on the back of the holder.
3. Install an anchor in each of the holes, stick the holder to the wall and secure with screws and then stick the patch with tape.

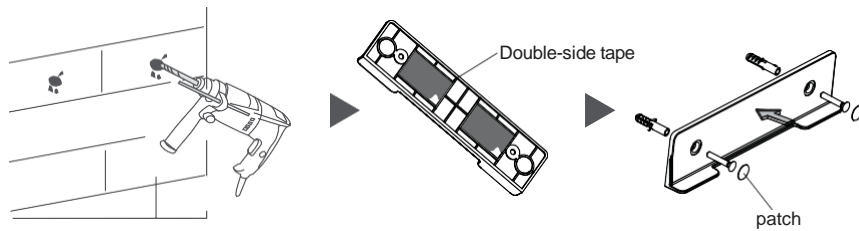


Remote control holder installation 2 :

 1. Clean and dry the pre-installation area of the holder.
2. Remove the double-sided adhesive tape on the back of the holder.
3. Stick the holder to the wall horizontally and then stick the patch with tape.

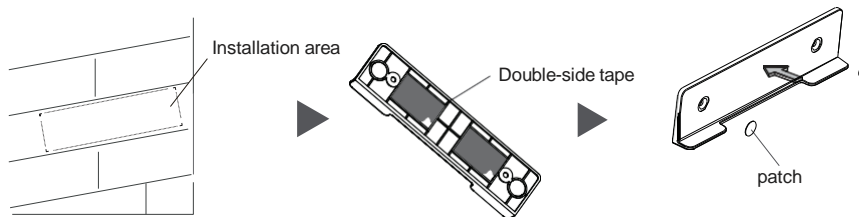

Battery installation

 1. Insert batteries into the remote control.
2. Put the remote control to the holder.

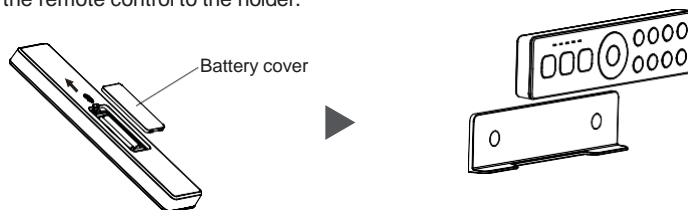


Notice:

1. Please ensure the remote control is within reach when a person on the seat.
2. Do not install and use the product in damp places such as shower room.
3. Do not place the product in a place where it is easily exposed to water.

Usage Instruction

 Remote control illustration

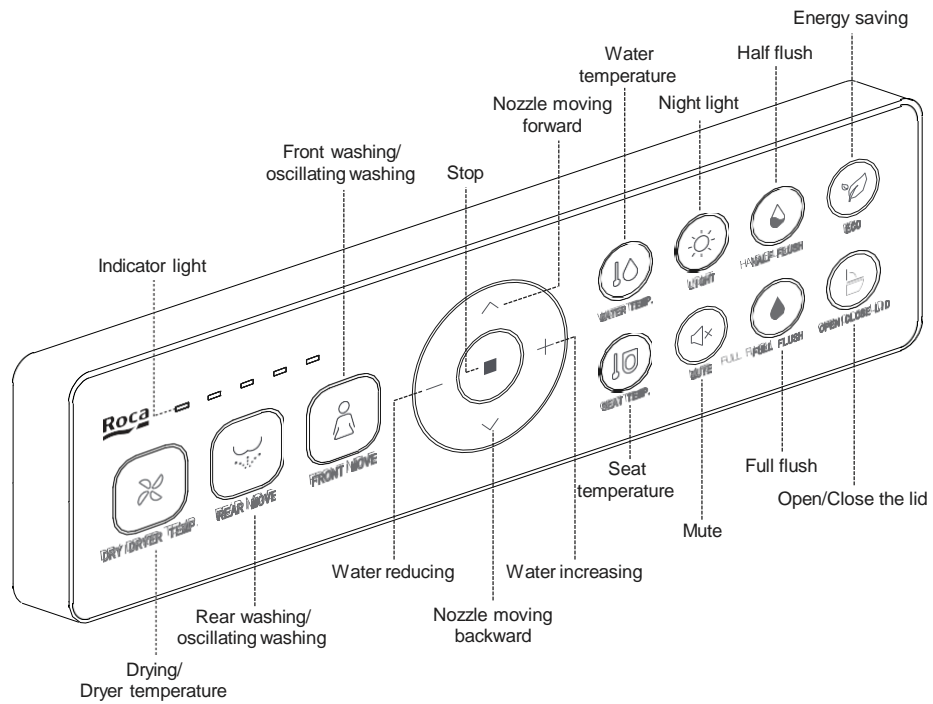




Usage Instruction

Notice :

  - Only when the user is seated and the buzzer beeps can the functions of front/rear washing and drying be activated.
- Please sit backward on the seat for correct washing position and to avoid splashing.
- The nozzle will continue to spray for 1-2 seconds after user stands up during washing, so please press "STOP" button before standing up.


 

REAR|MOVE




- Press "  " button, the indicator light is on showing current water temperature level, it starts rear washing; Press again "  " button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, while it will stop immediately if the user presses "  " button.

FRONT|MOVE



 - Press "  " button, the indicator light is on showing current water temperature level, it starts front washing; Press again "  " button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, while it will stop immediately if the user presses "  " button.

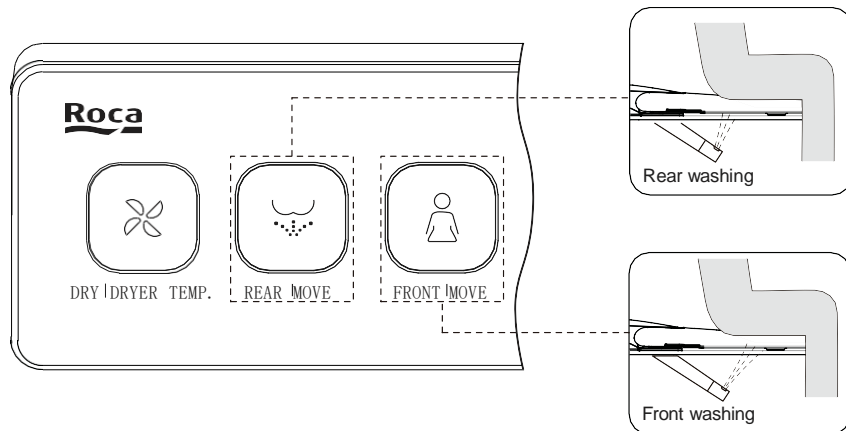


Usage Instruction

DRY|DRYER TEMP



① Press " " button, the indicator is on, showing current air temperature, it starts drying. The drying will stop automatically after one cycle or after user leaves.

 ② Under drying, press " " button to adjust the air temperature between 0-5 level, and the indicator light is on showing current air temperature level. When the indicator light is off, the temperature is at Level 0 (room temperature).

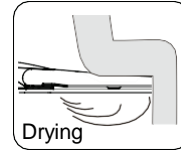


Water volume adjustment

· Press " + " or " - " button when it is under function of rear washing or front washing, the indicator light is on showing current water volume level, and water volume can be adjusted.

Nozzle position adjustment

 · Press " z " or " v " button when it is under function of rear washing or front washing, the indicator light is on showing current nozzle position, and nozzle position can be adjusted in 5 levels.

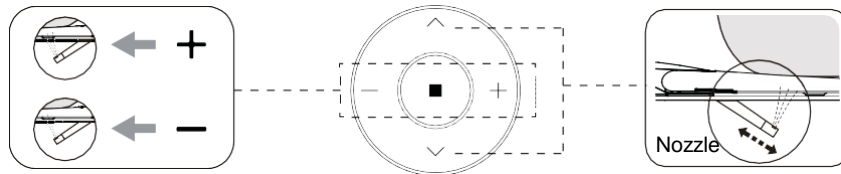

Energy saving



Short press " " button to enter energy saving mode, short press " " button again to exit energy saving mode.

Under energy saving mode, seat temperature is set to Level 1 for energy saving. (Note: If the seat temperature before energy saving is neutral, then it will be neutral as well.)

Remark


Energy saving mode will be suspended and the product will enter functional mode if the seat is used. The seat starts to heat immediately (without turning off the seat temperature), and the energy saving mode is restored once the seat is no longer being used.

 
Usage Instruction

Water temperature adjustment



WATER TEMP.


Short press "  " button to adjust the water temperature between 0-5 level. The indicator light is on showing current water temperature level. When the indicator is off, the temperature is at Level 0 (room temperature) .




Seat temperature adjustment



SEAT TEMP.



 
Short press "  " button to adjust the seat temperature between 0-5 level. The indicator light is on showing current seat temperature level. When the indicator is off, the temperature is at Level 0 (room temperature) .



Night light (Only for toilets with night light function)



   LIGHT

- Night light adjustment: Short press "  " button to turn on/turn off night light.
- Intelligent mode: Long press "  " button to enter into intelligent mode (Night light will be on or off by detecting the lightness of surroundings). If the product is on intelligent mode, short press "  " button to exit intelligent mode. (Factory setting: intelligent mode)




Half flush/Full flush



 
HALF FLUSH



FULL FLUSH

- Short press "  " button, the toilet starts half flushing.
- Short press "  " button, the toilet starts full flushing.
- Long press "  " button to turn on/off auto flush function.


When the auto flush function is turned on, toilet will automatically flush after detecting user leaving the seat.

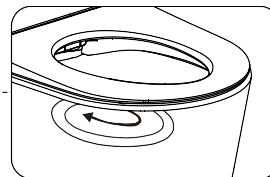


Usage Instruction

Open/Close by remote control



 
Short press "  " button to open or close lid.





Long press "  " button to turn on/off auto lid open/close function.

Quiet mode





Short press "  " button to turn on/off quiet mode.

Water tank flush volume adjustment

- Press and hold "  " button, and press the water volume " + " button to increase full flush volume by 1 level.
- Press and hold "  " button, and press the water volume " - " button to reduce full flush volume by 1 level.
- Press and hold "  " button, and press the water volume " + " button to increase half flush volume by 1 level.
- Press and hold "  " button, and press the water volume " - " button to reduce half flush volume by 1 level.

User code

- Radio frequency remote control
- ① Shut off the power supply of toilet.
- ② Press and hold "  " button, then press "  " button, the indicator light will flash.
- ③ Re-connect the power plug and press "reset" button.
- ④ The indicator stops flashing and stays on for 2 seconds, indicating that the remote control and the toilet are matched successfully. It beeps once when the self-inspection completes. Then the remote control is ready for use.

Usage Instruction

Other operations

Auto deodorization

- Press and hold "■" button and press "🌸" button to turn on/off auto deodorization function. The deodorization function will be automatically turned on when the user is seated, and will stop after user leaves. Under drying, deodorization will stop.

Sterilization function

- When no one seated and washing/drying is off, long press "🌸" button to turn on plasma sterilization function. This function will stop automatically after 2 hours. Under this mode, if any other button is pressed or user is seated, it will stop automatically.

Foot sensor function

- Long press "💧" button to turn on/off foot sensor function. Foot sensor is deactivated when the user is seated.

Foot sensor indicator

- Press and hold "■" button, and press "💧" button to turn on/off foot sensor indicator.

Remark:

- The buzzer will "BEEP" once when the user presses one button indicating that the main unit receives the signal and conduct the operation accordingly. If the buzzer doesn't sound, it means the main unit doesn't receive the signal, please adjust the remote control direction and repress the button.
- In case of power cut during nozzle spraying, the wand cannot be retracted, please wait until the power is restored. In case of a power cut for a long period, please push the wand softly back by hand. Do not push hard, to avoid damage to wand and electrical machine.



ROCA BATHROOM PRODUCTS INC
11190 Nw 25th Street Suite 110
Miami FL 33172
Site: www.us.roca.com
Phone: +1 (305) 849-2631