
# **3X4M DELUXE GAZEBO**ASSEMBLY INSTRUCTIONS

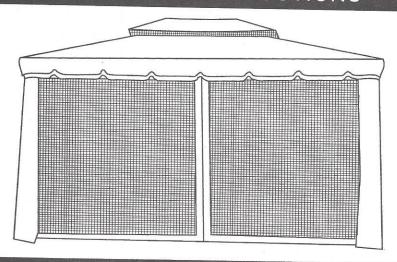

## BEFORE YOU START, here is some important information.

### 1. IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY


- Please check the underside of your gazebo and also the outer carton and make a note of the batch number and keep with these instructions for future reference.
- We suggest you spend some time reading through this leaflet and follow the simple step-bystep assembly instructions. For this assembly we suggest at least four people.
- 4. Because of the size of this gazebo we suggest that you assemble it in the area intended for use.
- 5. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
- Discard any surplus packaging with care and consideration for others and the environment. Keep plastic bags away from children and animals. Keep the Allen key and wrench for future use.
- 7. Keep fittings and small parts out of reach of children and animals.
- 8. Assemble this gazebo on a clean, flat and level surface. Seek assistance when lifting large or heavy items.
- 9. This gazebo is intended for use on a soft surface such as grass so that it can be anchored to the ground with the pegs provided. If the gazebo is used on a patio or decking it must be adequately fixed down so that it is secure in windy conditions.
- When assembling this gazebo be aware of the safety of yourself and others, including children and animals.
- 11. Assemble all parts loosely before tightening any bolts or fixings!
- 12. Insert 7 of the hooks, part S into each of the inside and outside runners of the long beams parts B1 and B2, a total of 14 hooks per long beam, using long beam connector H and bolts U1 to connect left long beam B1 and right long beam B2, please don't tighten the bolts, see fig 1.
- 13. Insert 5 of the hooks, part S into each of the inside and outside runners of the short beams parts C1 and C2, a total of 10 hooks per short beam, using beam connector H and bolts U1 to connect left short beam C1 and right short beam C2, please don't tighten the bolts, see fig 1.
- 14. Using corner connectors I and bolts U3 to connect long beams and short beams. Using bolts U1 to fix corner reinforces J into long beams and short beams, please don't tighten the bolts, see fig 1.
- 15. To assemble the roof frame, please refer to fig 2. Insert the long ribs D, short ribs E and double layer ribs G into rib connector K, connect the two connectors together by middle ribs F, using bolts U2 and nuts V to fix rib supportings L to long ribs D and double layer ribs G, please tighten the bolts and nuts.
- 16. Put canopy P on the ribs, but please don't pull it tightly.
- 17. Put double layer canopy O on the top, fit the roof canopy.
- Insert the long ribs D into corner connectors I, using bolts U1 to fix short ribs E to beams, see fig 3.


## 3X4M DELUXE GAZEBO ASSEMBLY INSTRUCTIONS


- 19. Using bolts U1 to fix foot plates N to legs A, see Fig 4A.
- 20. Insert the legs, part A into the corners of the roof frame, using bolts U1 to fix the legs A to the corner reinforces J, see fig 4. Tighten the bolts U3 in fig 1 into the legs A.
- 21. Using bolts U1 to fix the foot reinforces M to beams and legs A, see fig 4.
- 22. Put the tent pegs T through foot plates N into the ground, see Fig 4B.
- 23. Check that all the bolts and fixings are fully tightened, pull the canopy P to the ribs end and make a cover the beams, hang the mosquito nets R on the inside plastic hooks S, hang the sidewalls Q on the outside plastic hooks S.
- 24. Do not use the gazebo until all the bolts and fixings are tight, do not overtighten.
- 25. Periodically check the tightness of any bolts or fixings.
- 26. Do not modify or alter the gazebo in anyway.
- 27. Do not climb or stand on any part of the gazebo or allow children to stand or play on or around this gazebo.
- 28. This gazebo is designed for private and domestic use only in the garden. This gazebo is not designed or intended for commercial use e.g. pubs, clubs, restaurants or hotels etc.
- 29. Take care when using this gazebo near other outdoor products such as barbecues, candles, and heaters.
- 30. This gazebo should not be used in very windy conditions or thunder storms.
- 31. This gazebo does not provide complete protection from the sun /UV light.

	CODE	PARTS	QTY.
PARTS LIST	Α	LEG	4
	B1	LEFT LONG BEAM	2
	B2	RIGHT LONG BEAM	2
	C1	LEFTSHORTBEAM	2
	C2	RIGHT SHORT BEAM	2
	D	LONG RIB	4
	E	SHORT RIB	6
	F	MIDDLE RIB	2
	G	DOUBLE LAYER RIB	4
	Н	BEAM CONNECTOR	4
	- 1	◆ CORNER CONNECTOR	4
	J	CORNER REINFORCE	4
	K	RIB CONNECTOR	2
	L	RIB SUPPORTING	8
	M	● FOOT REINFORCE	8
	N	FOOT PLATE	4
	0	DOUBLE LAYER CANOPY	1
	Р	CANOPY	1
	Q	SIDEWALL	4
	R	MOSQUITO NET	4

	CODE		QTY.	
HARDWARE LIST	S	<b>D</b> o	PLASTIC HOOK	96
	T		TENTPEG	12
	U1	@###@	M6 X 15MM BOLT	92
	U2		M6 X 25MM BOLT	8
	U3		M6 X 40MM BOLT	16
	V	8	NUT	8
	W	E==3	WRENCH	1
	Х		ALLEN KEY	2

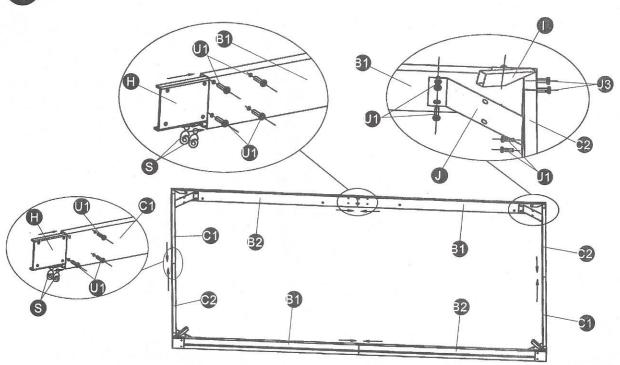

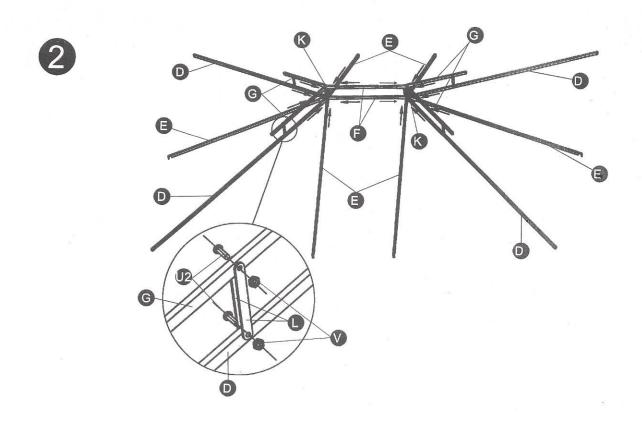

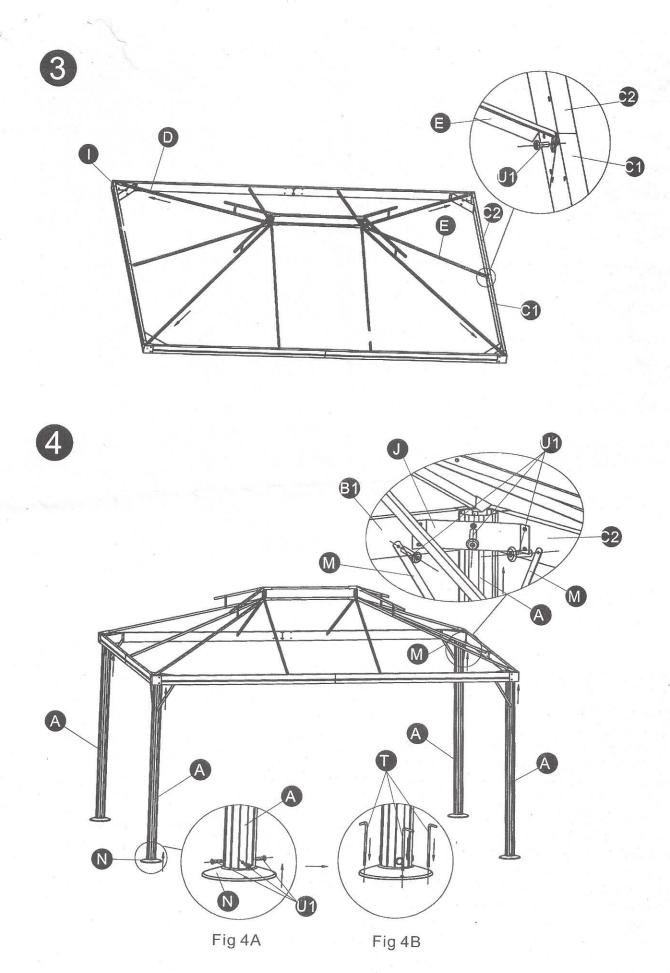

### **CARE AND MAINTENANCE**

 To clean, wipe with mild soap and water, rinse thoroughly. Do not use bleach, acid, solvents or Abrasive cleaners on this item. Spot check a small area first. Dry completely.

2. If the painted finish should become chipped or scratched exposing bare metal, remove any

oxidation and treat with a touch up paint.

3. If the gazebo is not to be used for long periods or during the winter, we recommend that it be moved to a sheltered or unexposed area, the canopy and curtains should be removed and stored indoors, please ensure they are clean and dry before doing this.

### **COMMITMENT TO QUALITY**

It is our intention that you fully enjoy the functions of this product. Should you experience any problems, please contact our customer service advisors, quoting the product name and item number GSET400.

Tel: 020-8532-5820

email: customerservices@liloleisure.com

Carefully made in China for Li-Lo Leisure Products Ltd., Sterling House, Langston Road, Loughton, Essex,  $IG10\ 3TS$ , UK.

2009