

# 2.4m x 2.4m Pop-Up Gazebo

catalogue no. 651/1524

Assembly Instructions - Please keep for future reference



**Important:** This Gazebo **MUST** be opened, erected and dismantled by 2 people at least.

## Dimensions

Width: 2.4m  
Depth: 2.4m  
Height: 2.5m



**Important:** Make sure all the guy ropes and pegs are used, otherwise the gazebo will be unstable!

**Important** – Please read these instructions fully before starting assembly

Product for Argos Ltd, Avebury, Milton Keynes, MK9 2NW

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 08 00



## Safety and care advice

**Important** – Please read these instructions fully before starting assembly

- Check you have all the components, fittings and tools listed on page 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- **Do not Assemble or Dismantle during strong winds.**
- This unit is not a permanent fixture - **Do not use or leave erected in windy conditions.**
- Follow all safety and fire precautions when in or near this Gazebo.
- Please note that this Gazebo is Shower proof and not Waterproof.
- Practice assembling and dismantling the Gazebo before use to familiarise yourself with the components and fittings.
- Take note of all the components and fittings and ensure you don't forget anything when dismantling.
- Before each use check you have all the components and fittings, and that none of them are damaged.

### Positioning:

- Ensure the ground is level, free from debris and sharp objects that could damage the fabric. Avoid pitching under trees but make use of any natural wind breaks such as hedge rows etc. **Heavy winds and rain could damage the Gazebo.**
- Try to locate the Gazebo at least 5 - 10 meters away from any other campers where possible.

## Fire precautions and safety



**The canopy and sides of this Gazebo are not fire proof, follow the fire precautions and safety at all times.**

- Do not use naked flames in or around the Gazebo - **there is no cooking area within the Gazebo.**
- Do not store cooking apparatus, BBQs etc within the

Gazebo as it may cause a fire hazard.

- Do not smoke or allow smoking in or around the Gazebo.

## Care and storage

- Take care when dismantling the Gazebo. Follow the assembly instructions in the reverse order and do not force the frame.
- Never remove the pegs by pulling on the guy ropes, fabric or Gazebo legs.
- Ensure all parts of the Gazebo are **completely dry before repacking.** If necessary unpack the parts when you return home and allow to dry completely before repacking and storing.
- All parts should be cleaned and packed separately. **When completely dry** gently remove any dirt and debris from the fabric with a soft brush.
- **Never use abrasive cleaners or detergents.**

 
## Components

If you have damaged or missing components or fittings,  
call the Customer Helpline: 0845 640 08 00

Please check you have all the parts listed below



1 Tent bag

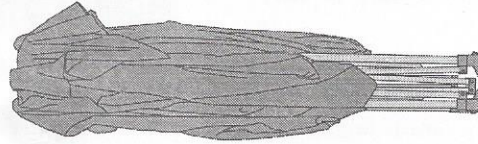

2 Gazebo

## Fittings

 


Peg x 8



Guy rope x 4

## Tools required



Rubber mallet

# Assembly Instructions

## Step 1

### Opening the Gazebo

**Note:** At least 2 people are required for this procedure.

**a & b:** Stand the Gazebo 2 upright.

With people at diagonally opposite corners, carefully pull the Gazebo partly open.

Move to each side, carefully pulling the frame apart until it has expanded as shown in diagram b.

**c & d:** Lift the canopy to reveal the framework.

 
 
 
With people at opposite sides, push up and down on the frames where shown.

Move to each side, carefully pushing (compressing) the frame together until it has expanded as shown in diagram d.



**Important:** This Gazebo **MUST** be opened and erected by 2 people at least.

Do not force the frame, if it does not erect easily re-check the assembly instruction steps.

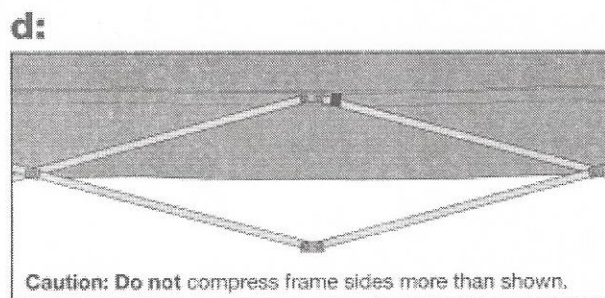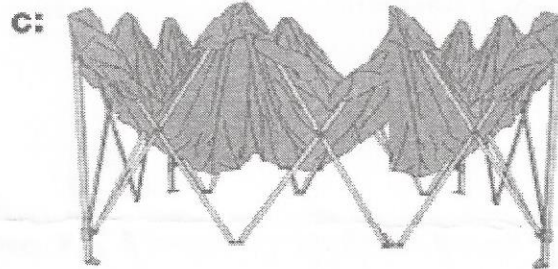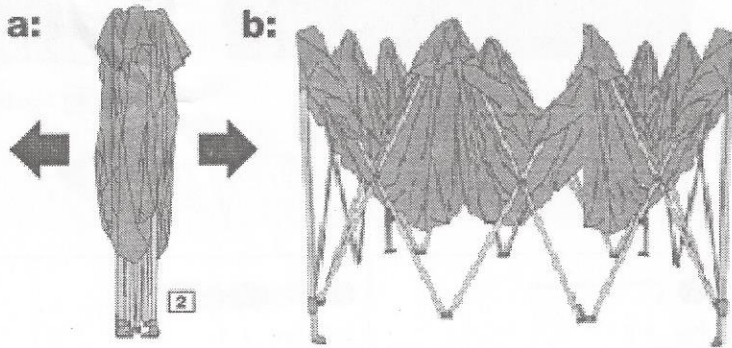

## Step 2

### Locking and extending the Gazebo frame

 
**Note:** At least 2 people are required for this procedure.

**a:** In one corner at a time, lock the Gazebo frame **2** in position by sliding the corner bracket up until the spring clip engages into the bracket.


Pull and extend each leg until the spring clips engage into the hole in the outer tubes.

**b:** From inside, check that each of the frame sides are as shown.

**Do not** compress more than shown or the frame can be damaged.

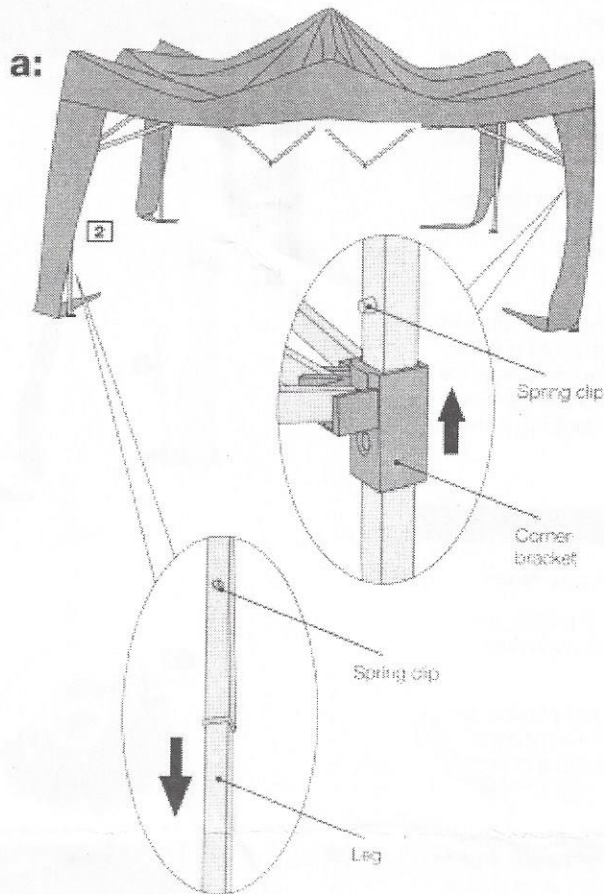

**b:**

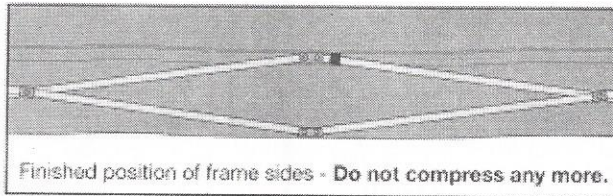 


### Step 3

#### Fitting the legs

**a:** Secure the Gazebo **2** to the ground at each corner. Insert a peg **A** through the hole in each frame leg into the ground (insert at an angle).

Take care not to bend the pegs, use a rubber mallet to help insert if required.

 **b:** Attach the hooks on the end of the canopy legs to the holes at the end of the frame legs, the canopy cover can be tightened by moving the hooks to a lower hole.

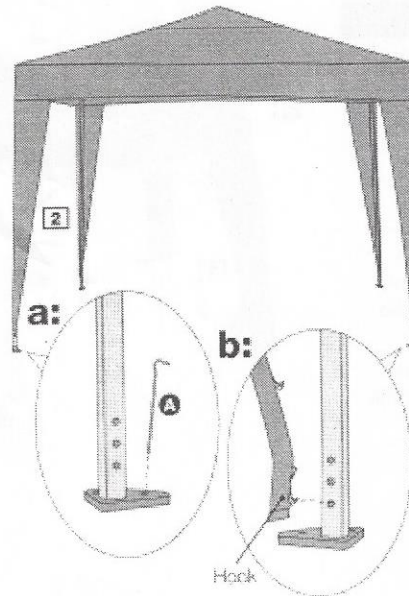


### Step 4

#### Attaching the guy ropes

**Note:** At least 2 people are required for this procedure.

**a:** Attach the end of each guy rope **B** to a 'D' ring at each corner of the canopy cover.

 **b:** Use the pegs **A** to secure the other end of the guy rope to the ground (insert at an angle).

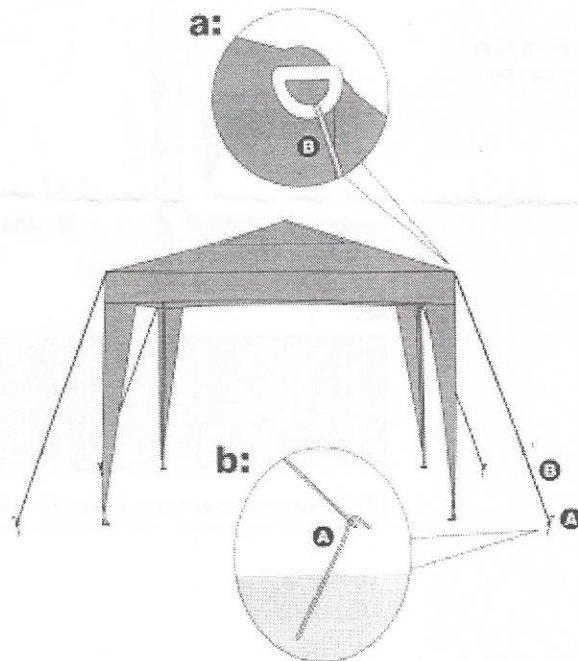

**Caution:** Do not over tighten the guy ropes as this can damage the fabric seams.


## Step 5
 
### Drainage holes

There are drainage holes on each side to allow rainwater to drain off the the canopy.

**Note:** Do not block or obstruct these holes as this could cause rain water to collect on the canopy and cause a hazard.

**The assembly is now complete.**

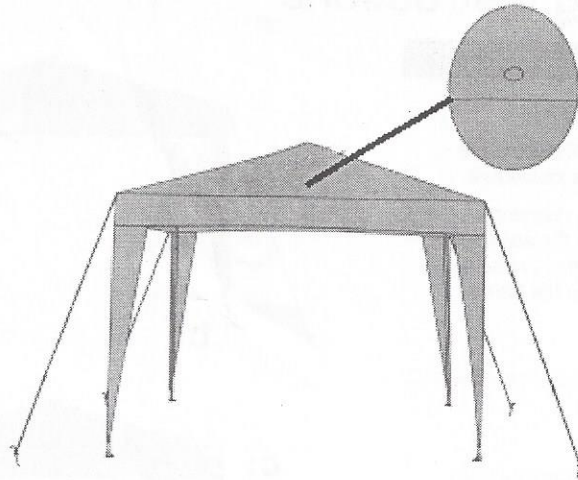

# Folding Instructions

## Step 6

### Folding the Gazebo

**Note:** At least 2 people are required for this procedure.

Take care when dismantling the Gazebo. Follow the assembly instructions in the reverse order and do not force the frame.

**a:** Remove the guy ropes and pegs.

**b:** Unhook the canopy from the frame legs and remove the pegs.


**c:** Push in the spring clips and slide up the frame legs.

 
 
 
 
**d:** Push in the spring clips and (slightly) lower the corner brackets.

**e:** With people at diagonally opposite corners, carefully lift and push the gazebo together.

**Do not force the frame.**

Repeat at each corner until the gazebo is fully folded.

Store all of the components and fittings in the tent bag  provided.

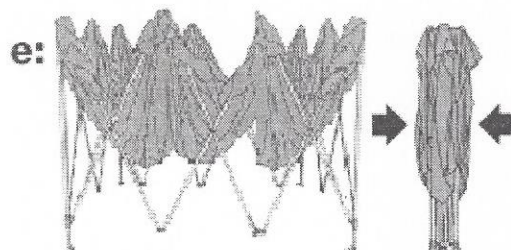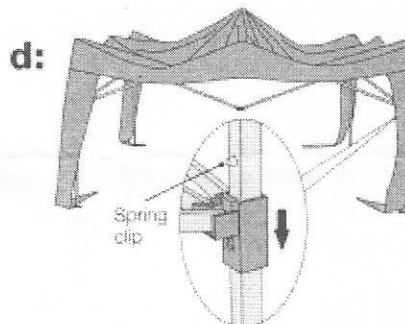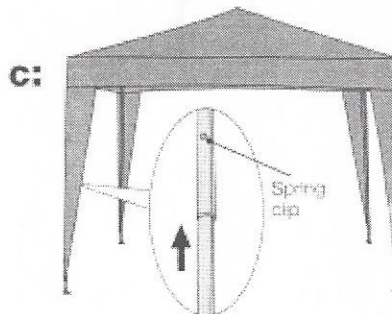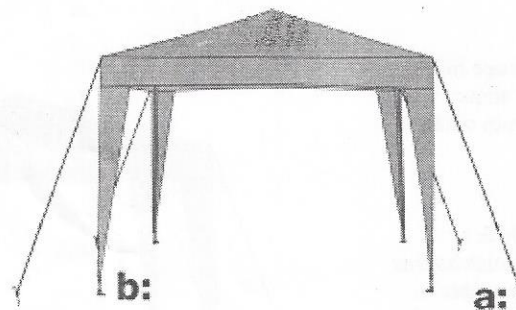

Product for Argos Ltd, Avebury, Milton Keynes, MK9 2NW

If you need help or have damaged or missing parts, call the Customer Helpline: 0845 640 08 00