

FAQ: Adjusting Flush Valve*



Please turn your water off and empty the tank before starting!
This makes it easier to reach the parts needed.

Remove the flush valve. If you twist the unit slightly and lift up the whole piece should pop right out.

Before adjusting any dials, turn the unit over and check the seal on the very bottom. Make sure it is not damaged in any way.

There is a small “ledge” you can fit your thumb on near the long, blue, plastic piece that looks like a ruler. Push this piece down all the way down until you see the number 1. The piece should “click” in.

To the left of that ruler piece, there is a small switch the size of your thumb. Make sure this is pushed all the way up. The arrow should be pointing at the “10.”

You can then replace the flush valve, turn you water on and give a few test flushes.

These settings are the settings for the maximum flush power.

*For all models except SM-1T803

