

FAQ: Fill Valve Adjustment



Please be sure to have your water off and tank empty before you make these adjustments!

The float on your fill valve can be adjusted by twisting the little screw on the end of the arm, above the float.

If that is insufficient, you can make larger adjustments by reaching on the side of the fill valve and flipping the switch (it is about the size of your thumb). This will “unlock” the fill valve and you should be able to slide the unit up or down to fit your needs.

This is the first step. Please let us know if this does not work for you.

It may be hard to flip at first. But, this will allow you to make larger adjustments with your fill valve.

If this does not work, you may need to check the seal on your flush valve.

