

FAQ: Uninstalling Flush Valve



Please turn your water off and empty the tank before starting!
This makes it easier to reach the parts needed.

You can remove your flush valve from its housing by twisting and gently pulling up.

Once removed, you will be able to see there is a metal piece, held in by a screw.

It is extremely important that no parts or pieces fall into the toilet when you do these next steps. The items will be irretrievable and may cause flushing issues.

You can tie a string to the metal bar, or hold it up with a coat hanger to prevent it from falling.

Once the screw in the center is loosened, you should be able to remove the housing from the toilet.

To install your new valve, you will follow these steps in reverse.

