



Enclosed

- 1/2-inch wide Velcro® (frontside)
- Narrow Bumper (frontside)
- 1-inch wide Velcro (backside)
- Wide Bumper (backside)

Installation Instructions

Clean Vacuum

Dirt will prevent Velcro from adhering well. Thoroughly clean vacuum areas shown in Figures 1 and 2 with a non-bleach and non-oil-based cleaning solution, such as rubbing alcohol.

WARNING

- Do not block or cover vacuum's light and docking sensors with Velcro or bumper, as this will prevent vacuum from correctly mapping rooms and docking at charging station.
- Do not cover or seal-shut vacuum's dust bin basket & release button or ventilation system.
- Bumper must completely cover Velcro to prevent dirt from attaching to adhesive.

Install Velcro

- **Figure 1:** Cut and attach 1/2-inch Velcro to vacuum's frontside top & bottom edges as shown.
- Figure 2: Cut and attach 1-inch Velcro to backside as shown.

Install Bumper Guard

- Figure 3: Begin at lower portion of vacuum. Attach NARROW bumper strip to Velcro and cut bumper where Velcro ends on opposite side of vacuum.
- Figure 4: If vacuum has a sensor on top edge, cut the remaining NARROW bumper strip in half as shown. If sensor is **not** present, **do not** cut bumper strip.
- Figure 5: Attach NARROW bumper strip(s) to Velcro on top portion of vacuum. If necessary, cut off excess bumper material.
- Figure 6: Cut WIDE bumper strips to lengths that will fully cover each Velcro strip on backside of vacuum. Attach WIDE bumper strips to Velcro.

Care Instructions

Remove dust and debris with a lint-roller.



Figure 1 IN FRONT OF SENSOR



Figure 2



Figure 3



Figure 4





Figure 6