

In case controls are located on the side of the speaker, it is necessary to position the speaker in such a way so that the controls are next to the plastic buckles. This will help to avoid accidental button presses.

