

User's Manual


Please read this manual before using the product




Thank you for choosing TREBLAB FX100!

This speaker provides superior sound quality and mobility combined with rugged construction and the convenience of hands-free wireless operation.

WHAT'S IN THE BOX

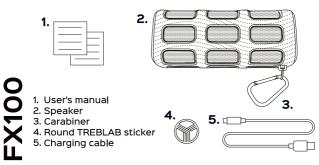

BUTTONS AND PARTS

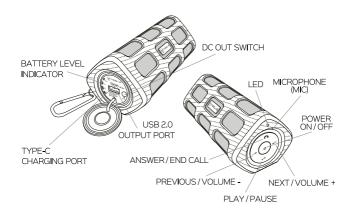

Function	Operation
Function	Operation
Power ON	Press and hold the POWER button for 3 seconds
Power OFF	Press and hold the POWER button for 2 seconds
Play/Pause	Press the PLAY/PAUSE button
Volume +	Press the VOLUME + button
Volume -	Press the VOLUME - button
Next track	Press and hold the VOLUME + button
Previous track	Press and hold the VOLUME - button
Change EQ preset	Shortly press the POWER button
Answer/End a phone call	Press the PHONE button during the incoming call
Reject a phone call	Press and hold the PHONE button during the incoming call
Voice assistant activation	Press twice the PHONE button while speaker connected to smart device
TWS mode	Press and hold the PHONE button on one of the FX100 speakers while both of them are turned on and not paired
Disconnect	Press the PLAY/PAUSE button for 2 seconds

SETTING UP YOUR FX100

Turn ON

Press and hold the **POWER** button for 3 seconds. You will hear the "POWER ON" and voice prompt and the BLUE and RED LED light will start flashing.

Turn OFF

Press and hold the **POWER** button for 2 seconds. You will hear the 'POWER OFF voice prompt, and the BLUE LED will flash three times and will turn OFF.

WIRELESS PAIRING

Make sure TREBLAB FX100 is charged.

- 1. Turn on your speaker by pressing and holding the **POWER** button for 3 seconds. You will hear the "POWER ON voice prompt and the LED light will start flashing RED and BLUE indicating that the speaker is in pairing mode.
- 2. Activate the Bluetooth mode on your smart device.
- 3. Select TREBLAB FX100 from the available Bluetooth devices list. Keep it within 3 feet /1 meter from the speaker while pairing.
- 4. If necessary enter the passcode 0000.
- 5. Once FX100 is successfully paired and connected, you will hear the "CONNECTED" voice prompt and the LED will light up BLUE.

REPAIRING

After the initial pairing, the speaker will automatically connect to the previously paired device when turned on again. If the reconnection does not happen automatically, the speaker will start looking for any other previously paired device within the effective distance range. **TREBLAB FX100** can save up to 6 recently paired devices.

TRUE WIRELESS STEREO (TWS) - PAIRING TWO SPEAKERS

- Place two FX100 (BT5.0 version) speakers near each other (the distance should not be over 3 feet/1 meter).
- Power on both speakers. You will hear the "POWER ON" voice prompt. If the speakers connect to any of the previousely paired devices, press and hold the PLAY / PAUSE button on both speakers for 2 seconds until you hear the "DISCONNECTED" voice prompt.
- Press and hold the **PHONE** button on any of the speakers. This speaker
 will be the main one. After some time you will hear the "LEFT CHANNEL" and
 "RIGHT CHANNEL" prompts from TWS connected speakers.
- Connect the main speaker to the smart device by selecting TREBLAB FX100 from the available Bluetooth devices list

NOTE: While the speakers are TWS paired, you can manage their functions using the buttons on both of them. You can disable the TWS mode by turning off one of the speakers.

AUDIO PLAYBACK

When music is played the BLUE LED will flash slowly. When music is paused, you will see a steady BLUE light.

To pause and resume the playback when connected wirelessly, press the ${\bf PLAY/PAUSE}$ button

To adjust the volume, press the ${\bf VOLUME}$ + or the ${\bf VOLUME}$ - button while listening to music.

To change the track on ${\bf FX100}, \ {\bf press}$ and hold the ${\bf VOLUME}$ + or the ${\bf VOLUME}$ -button.

PHONE CALLS

TREBLAB FX100 can be used to make and receive phone calls when connected wirelessly. Audio playback will be paused during the calls.

To Answer a call:	Press the PHONE button
To Reject a call:	Press and hold the PHONE button for 2 seconds during the phone call
To End a call:	Press the PHONE button during the phone call

NOTE: For the better call quality, speak into the microphone.

CHARGING

The **FX100** speaker comes with a 5600mAh rechargeable battery.

One full battery charge provides up to 35 hours of playtime at a moderate

volume. When the battery is running low, you will hear a voice prompt.

TREBLAB EX100 may be used while charging and while it is used as a power.

TREBLAB FX100 may be used while charging and while it is used as a power bank.

 
To charge the speaker, plug one end of the supplied cable into the Type-C charging port under the rubber cover at the side of the speaker. Plug the other end of the charging cable into a standard USB port or a wall adaptor. It takes up to 4.5 hours to fully charge the speaker.

Be sure to use 5V, 2A adapter or charger. Using a power source with lower power will increase the overall charging time. If the speaker is left unused, even the fully charged battery will lose its charge over time. We recommend charging **TREBLAB FX100** fully at least twice a month to maintain the sufficient battery life.

The **FX100** speaker is equipped with charge level indicators - LEDs. The current charge level is displayed while charging, when the speaker is used as a power bank and after the **DC OUT** button is pressed.

1. Charge level is between 0% and 25%: the 25% indicator is ON (flashing during the speaker charging).

- 2. Charge level is between 25% and 50%: the 50% indicator is ON (flashing during the speaker charging).
- 3. Charge level is between 50% and 75%: the 75% indicator is ON (flashing during the speaker charging).
- 4. Charge level is between 75% and 100%: the 100% indicator is ON (flashing during the speaker charging).



POWER BANK MODE

TREBLAB FX100 inbuilt battery can be used as a power bank to charge your smartphone or tablet.

- 1. Connect your device to the speaker by plugging your device's charging cable into the USB 2.0 output port at the side of **FX100**.
- **2.** Press the **DC OUT** button to start charging, LEDs that correspond to the current battery charge level will light up.
- 3. There is no LED indication signal when the smart device is fully charged. Please pay attention to your device's battery charge indicator during the charging time.

TROUBLESHOOTING

Problem	Solution
Not powering on	Make sure the speaker is charged. Charge for 10 hours for a full charge, if necessary. Press and hold the POWER button for 3 seconds.
Not pairing	Make sure the speaker is not paired with any other. Disconnect the speaker from your device by pressing and holding the PLAY/PAUSE button for 2 seconds and remove TREBLAB FX100 from your device's pairing list. Try to pair again.
Not finding a wireless driver on your laptop	Make sure your laptop supports a Bluetooth connection. If it doesn't, you will need an external wireless USB adapter compatible with your laptop. For further details, consult with your laptop manufacturer.
Frequent disconnection and noise	Make sure that the distance between your device and the speaker is less than 33 feet/10 meters. Make sure that nothing is blocking the signal between your device and FX100 . Check if the speaker is running out of power.

RECYCLING

The speakers can be recycled, and they should be in order to keep our planet clean. Where should you bring them?

In the US, there are a couple of options:

 Best Buy has a recycling program. Just take the broken speaker with you next time you visit a Best Buy store. This link will help you find the best location: https://www.bestbuy.com/site/store-locator/

2. Check for other possible locations near you on these websites (just enter your ZIP to find a location):

https://www.call2recycle.org https://search.earth911.com https://recyclenation.com/find

https://www.cta.tech/Consumer-Resources/Greener-Gadgets

In Canada, please visit the link below for help:

https://thinkreuse.net

https://www.call2recycle.ca

In UK, please visit the links below for help:

https://www.recycle-more.co.uk/ https://www.recyclenow.com/local-recycling

SAFETY RULES

- Don't disassemble or modify your speaker for any reason. Doing this may cause the speaker to malfunction or become combustible. The damage to your device can void the manufacturer's warranty.
- Make sure the speaker is completely dry before charging.
- Clean only with a dry cloth.
- Avoid exposing TREBLAB FX100 to extreme temperatures (below 37°F / 3°C or above 112°F / 45°C). Extreme temperatures can cause the deformation of the FX100 components and reduce the battery life and the lifespan of your new speaker.
- Don't put the device's LED lights close to humans' or animals' eyes.
- Do not use FX100 during a thunderstorm. Thunderstorms can cause serious malfunction and increase the risk of electric shock

SPECIFICATIONS Battery:

Up to 35 hours playtime (moderate volume) 5600mAh, 3.7V, rechargeable, Li-Ion

Input 5V/1A, Output 5V/2.1A

Charging time: Up to 4.5 hours

Wireless connection version: 5.0. HFP, A2DP, AVRCP, GAVDP, AVDTP, SPP. AVCTP

Signal Range: 33ft / 10m Output power: 10W x 2

Frequency response: 80Hz-20KHz Water resistance: IPX7

Power/Charging ports: USB 2.0, Type-C

Voice assistant activation: Supported by the double press of the **PHONE** button

Dimensions: 2.75 x 2.75 x 7 inches / 70 x 70 x 180mm

Weight: 1.52lbs / 689a

THANK YOU

We truly appreciate that you chose **TREBLAB** as your trusted brand of Bluetooth speakers and sincerely hope you enjoy the great sound and seamless usability **TREBLAB FX100** provides. We love making our customers happy by providing true value with our products. If for any reason you are not completely satisfied with your purchase or have any questions, please visit www.treblab.com/contact_us. We care about our customers most of all and are always here to serve you.

1 YEAR WARRANTY

Parts and Labor Warranty.

Please visit www.treblab.com to register YOUR product.

Manufactured by: Productech Corp





