



Portable wireless speaker

**HD-Max**




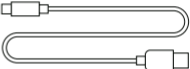 


## User's Manual

Please read this manual  
before using the product

# Thank you for choosing TREBLAB HD-Max!

 
This speaker provides superior sound quality and mobility, combined with rugged construction and the convenience of hands-free wireless operation.

 
## WHAT'S IN THE BOX

- 1. TREBLAB HD-Max speaker
- 2. Carrying strap with bottle opener
- 3. User's manual and quick start guide
- 4. Type-C charging cable
- 5. TREBLAB logo sticker
- 6. 3.5mm audio cable

HD-Max

# BUTTONS AND PARTS

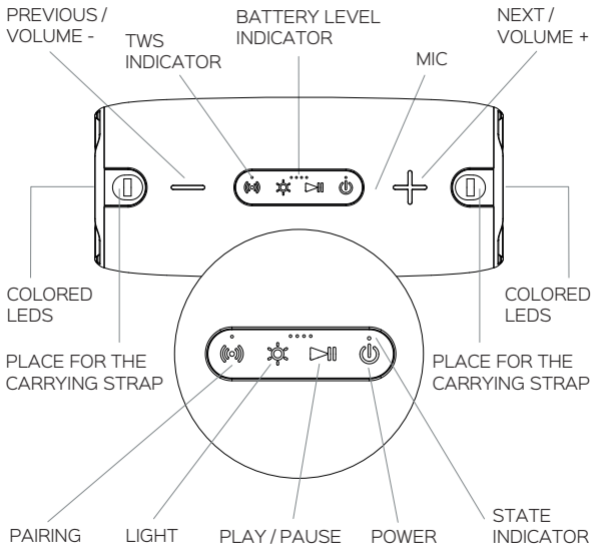

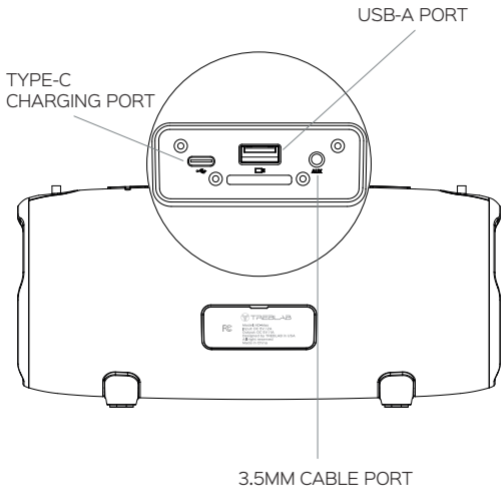

## SPEAKER FUNCTION

Function	Operation
Power ON	Press and hold the <b>POWER</b> button for 3 seconds.
Power OFF	Press and hold the <b>POWER</b> button for 3 seconds.
Play/Pause	Press the <b>PLAY / PAUSE</b> button.
Volume +	Press the <b>VOLUME +</b> button.
Volume -	Press the <b>VOLUME -</b> button.
Previous track	Press and hold the <b>VOLUME -</b> button for 2 seconds.
Next track	Press and hold the <b>VOLUME +</b> button for 2 seconds.
Sound mode	Press the <b>PAIRING</b> button to switch between Balanced / Treble Boost / Bass Boost modes
Answer a phone call	Press the <b>PLAY / PAUSE</b> button during an incoming call.
Reject a phone call	Press and hold the <b>PLAY/PAUSE</b> button for 2 seconds during incoming call.

End a phone call	Press the <b>PLAY / PAUSE</b> button when on a call.
Voice assistant	Press and hold the <b>LIGHT</b> button for 2 seconds.
Enter / exit TWS pairing mode	Double-press the <b>PAIRING</b> button.
Switch between LED modes / turn off LEDs	Press the <b>LIGHT</b> button.
Switch between inputs (wireless / USB / AUX)	Press the <b>POWER</b> button (when the speaker is on).
Enable power bank feature (in off state)	Double-press the <b>POWER</b> button.
Disable power bank feature (in off state)	Press the <b>POWER</b> button when the power bank feature is enabled.
Disconnect	Press and hold the <b>PAIRING</b> button for 2 seconds.
Factory reset	Simultaneously press and hold the <b>VOLUME +</b> and <b>VOLUME -</b> buttons for 3 seconds.
Turn off/on sound prompts	Simultaneously press and hold the <b>POWER</b> and <b>PAIRING</b> buttons for 1.5 seconds.

# SETTING UP YOUR SPEAKER

## Turn ON

Press and hold the **POWER** button for 3 seconds. You will hear the sound cue, the battery level indicators will light up and the BLUE status indicator will start flashing.

## Turn OFF

Press and hold the **POWER** button for 3 seconds. You will hear the sound cue, and all the lights will go off.

## WIRELESS PAIRING

Make sure **TREBLAB HD-Max** is charged and that the 3.5mm audio cable or USB flash drive is not plugged in.

- Turn on your speaker by pressing and holding the **POWER** button for 3 seconds. You will hear the sound cue, the battery level indicators will light up and the status indicator will start flashing BLUE, meaning that the speaker is in pairing mode.
- Activate the wireless communication function on your device (smartphone, tablet, laptop).
- Select **TREBLAB HD-Max** from the available devices list. Keep it within 3 feet /1 meter of the speaker while pairing.
- If necessary, enter passcode 0000.
- Once **HD-Max** is successfully paired and connected, the LED will stop flashing and stay BLUE.

## RE-CONNECTING

After the initial pairing, the speaker will automatically connect to the previously paired device when turned on again. If reconnection does not happen automatically, the speaker will start looking for any other previously paired device within the effective distance range. **TREBLAB HD-Max** can remember up to 8 recently paired devices.

## TRUE WIRELESS STEREO (TWS) - PAIRING TWO SPEAKERS

The TWS technology allows you to use two speakers paired wirelessly to create a wireless dual-channel system, delivering a true stereo sound effect. While using this function, one speaker (Primary, left channel) is paired with a smart device, the other (Secondary, right channel) speaker is paired with the Primary speaker.

- Turn ON both speakers and make sure that none of them is connected to any device (both speakers' status indicators should blink BLUE). To disconnect, press and hold the **PAIRING** button for 2 seconds.
- Select the speaker that will connect to the device (Primary) and double-press the **PAIRING** button on it. The TWS indicator on it should start blinking BLUE.



- Place the Primary and Secondary speakers near each other (the distance should not be over 3 feet/1 meter). The Secondary speaker should connect to the Primary one automatically. The TWS indicator on both speakers will be steady BLUE.
- Pair the Primary speaker with your device.

To interrupt the TWS function, double-press the **PAIRING** button on either speaker. The TWS indicator on the Primary speaker will go off indicating the connection is lost.

## **AUDIO PLAYBACK**

To pause and resume playback when connected wirelessly, press the **PLAY** button.

To adjust the volume, press the **VOLUME +** or the **VOLUME -** button while listening to music.

To change the track on the **HD-Max**, press and hold the **VOLUME +** or the **VOLUME -** button for 2 seconds.

## **3.5MM AUDIO CABLE CONNECTION**

You can connect **TREBLAB HD-Max** to compatible devices using the supplied 3.5mm audio cable.

Turn on the speaker. You will hear the sound cue and the status indicator will start flashing BLUE.

Plug one end of the 3.5mm audio cable into the 3.5mm cable port on the back of the speaker (under the rubber cover). Plug the other end into the 3.5mm jack on your device. You will hear the sound prompt and the status indicator will be steady BLUE. Now you can play music and audio.

To mute the audio, press the **PLAY / PAUSE** button.

**NOTE:** On-device control is not supported for the NEXT, PREVIOUS and PAUSE functions when using the 3.5 mm audio cable. Phone calls management using the **PLAY / PAUSE** button is not supported as well. You will need to make adjustments using your smart device.

## USB MODE

The **TREBLAB HD-Max** speaker can play music from the USB flash drives up to 512GB. All you need to do is to copy music to the memory stick (in folders or just to the root), insert it into the USB-A port on the back of the speaker (under the rubber cover). You will hear the sound prompt and the state indicator will turn BLUE.

To start playing from the USB flash drive, press the **PLAY / PAUSE** button.

The playlist is arranged according to song addition date (the older tracks play first).

## SOUND MODES

**TREBLAB HD-Max** speaker supports three audio modes: Balanced, Treble Boost and Bass Boost.

In the Treble Boost mode, treble is enhanced which ensures higher volume at open spaces. The Balanced mode will be suitable for indoor application. In the Bass Boost mode, low frequencies are enhanced for better listening experience. To switch between the modes, double-press the **PLAY/PAUSE** button when the speaker is ON.

- **Balanced mode** – the BLUE state indicator blinks once every 10 seconds while playing.
- **Treble Boost mode** – the BLUE state indicator blinks twice every 10 seconds while playing.
- **Bass Boost mode** – the BLUE state indicator blinks thrice every 10 seconds while playing.

**NOTE:** To change the sound profiles in TWS mode double-press the **PLAY/ PAUSE** button on any speaker. The changes will apply for both speakers.

## PHONE CALLS

**TREBLAB HD-Max** can be used to make and receive phone calls when connected wirelessly. Audio playback will be paused during calls.

To answer a call: Press the **PLAY / PAUSE** button during an incoming call.

To end a call: Press the **PLAY / PAUSE** button when on a call.

To reject a call: Press and hold the **PLAY / PAUSE** button for 2 seconds during an incoming call.

**NOTE:** For better call quality, face the microphone when you speak.

## CHARGING

When the battery is running low, you will hear a sound signal.

**TREBLAB HD-Max** may be used while charging in Wireless Mode, 3.5mm audio cable and USB modes.

To charge the speaker, plug one end of the supplied cable into the TYPE-C charging port under the rubber cover on the back of the speaker. Plug the other end of the charging cable into a wall adapter or USB port on a laptop. It takes up to 5.5 hours to fully charge.

Once plugged in, the charging indicators will start flashing slowly

showing the current battery level (for more details, please check the **BATTERY LEVEL INDICATION** section)

Unplug **HD-Max** from the charging cable and the cable itself from the power source when not in use.

If the speaker is left unused, even the fully charged battery will lose its charge over time.

We recommend fully charging the **HD-Max** speaker at least twice a month to maintain sufficient battery life.

## **BATTERY LEVEL INDICATION**

The **HD-Max** speaker is equipped with the battery level indicators - LEDs.

The current charge level is displayed while charging, when the speaker is on and when the speaker is used as a power bank.

- Charge level is between 0% and 25%: one LED is ON (flashing during the speaker charging or in the power bank mode).
- Charge level is between 25% and 50%: two LEDs are ON (flashing during the speaker charging or in the power bank mode).
- Charge level is between 50% and 75%: three LEDs are ON (flashing during the speaker charging or in the power bank mode).
- Charge level is between 75% and 100%: four LEDs are ON (flashing during the speaker charging or in the power bank mode).

## POWER BANK MODE

**TREBLAB HD-Max** built-in battery can be used as a power bank to charge your smartphone or tablet.

1. Connect your device to the speaker by plugging your device's charging cable into the USB-A port under the rubber cover at the side of the speaker.
2. If the speaker is in off state, double-press the **POWER** button to start charging. In case the speaker is on, it will start charging instantly after you connect the device to the USB-A port.
3. To disable the power bank feature when the speaker is off, press the **POWER** button.

**NOTE:** There is no LED indication signal when the smart device is fully charged. Please pay attention to your device's battery charge indicator during the charging time.

## TROUBLESHOOTING

Problem	Solution
<b>Not powering on</b>	Make sure the speaker is fully charged. Charge for 2 hours, if necessary. Press and hold the <b>POWER</b> button for 3 seconds.

### **Not pairing**

Make sure the 3.5mm audio cable or USB flash drive is not plugged in.

Make sure the speaker is not paired with any other device, as it can only pair with one device at a time.

Press the **VOLUME +** and **VOLUME -** buttons simultaneously and hold for 3 seconds. This will force the speaker to forget previously paired devices. Repeat the steps for pairing as previously described.

Alternatively, disconnect the device from your speaker and remove **HD-Max** from your device's pairing list. Try to pair again.

### **Not finding a wireless driver on your laptop**

Make sure your laptop supports wireless connections. If it doesn't you will need an external wireless USB adapter compatible with your laptop. For further details, consult with your laptop manufacturer.

### **Frequent disconnection and noise**

Ensure that the distance between your device and the speaker is less than 30 feet/10 meters.

Ensure that nothing is blocking the signal between your device and the **HD-Max**.

Check if the speaker is running out of power.

## SAFETY RULES

- Don't disassemble or modify your speaker for any reason. Doing this may cause the speaker to malfunction or become combustible. The damage to your device can void the manufacturer's warranty.
- Do not let your device get wet - liquids can cause serious damage. Water damage to your device can void the manufacturer's warranty.
- Make sure the speaker is completely dry before charging.
- Clean only with a dry doth.
- Avoid exposing **TREBLAB HD-Max** to extreme temperatures (below 37°F/3°C or above 112°F/45°C). Extreme temperatures can cause the deformation of the **HD-Max** components and reduce the battery life and the lifespan of your new speaker.
- Don't put the device's LED lights close to humans' or animals' eyes.



## SPECIFICATIONS

<b>Speaker size:</b>	2 x 3mm, 2 x 75mm
<b>Water resistance:</b>	IPX7
<b>Charging port:</b>	TYPE-C
<b>Audio port:</b>	3.5mm jack
<b>Dimensions:</b>	12.2 x 5.39 x 5.59 inches / 310 x 137 x 142 mm
<b>Weight:</b>	4.77 lbs / 2165 g

# RECYCLING

The speakers can be recycled, and they should be in order to keep our planet clean. Where should you bring them?

In the **US**, there are a couple of options:

<https://www.call2recycle.org>

<https://search.earth911.com>

<https://recyclenation.com/find>

<https://www.cta.tech/Consumer-Resources/Greener-Gadgets>

In **Canada**, please visit the links below:

<https://thinkreuse.net>

<https://www.callerecycle.ca>

In the **UK**, please visit the links below:

<https://www.recycle-more.co.uk/>

<https://www.recyclenow.com/local-recycling>

## THANK YOU

We truly appreciate that you chose **TREBLAB** as your trusted brand of wireless speakers and sincerely hope you enjoy the great sound and seamless usability **TREBLAB HD-Max** provides.

We love making our customers happy by providing true value with our products. If for any reason you are not completely satisfied with your purchase or have any questions, please visit [https://treblab.com/contact\\_us](https://treblab.com/contact_us).

We care about our customers most of all and are always here to help you.



TREBLAB

## 1 YEAR WARRANTY

### Parts and Labor Warranty

Please visit [www.treblab.com](http://www.treblab.com) to register YOUR product.

Manufactured by Productech

Portable wireless speaker

**HD-Max**



Made in China



WARNING: Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

