



HD Max

Wireless speaker

User's Manual

 
Please read this
manual before
using the product

Thank you for choosing TREBLAB HD Max!


This speaker provides superior sound quality and mobility, combined with rugged construction and the convenience of hands-free wireless operation.

WHAT'S IN THE BOX


1.

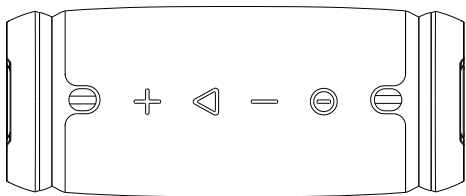

 2.



 3.



4.

 


5.

6.



7.



HDMax

1. TREBLAB HD Max speaker
2. Carrying strap
3. User's manual
4. Type-C charging cable
5. Round TREBLAB logo sticker
6. Insert card
7. 3.5 mm audio cable

BUTTONS AND PARTS

PLACE FOR THE
CARRYING STRAP

 
POWER ON / OFF

PREVIOUS /
VOLUME -

PLAY / PAUSE

NEXT /
VOLUME +

PLACE FOR THE
CARRYING STRAP

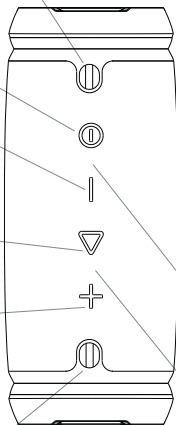

LED


MICROPHONE
(MIC)

USB 2.0 OUTPUT PORT
PORT

HARD RESET

3.5 MM CABLE
PORT

 TYPE-C
CHARGING
PORT

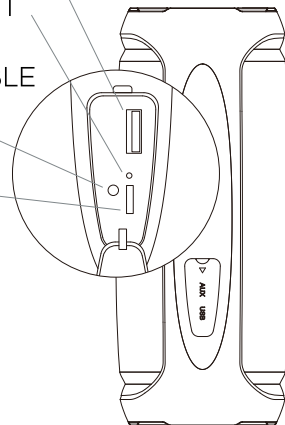

SPEAKER FUNCTION

Function	Operation
Power ON	Press and hold the POWER button for 3 seconds.
Power OFF	Press and hold the POWER button for 3 seconds.
Play / Pause	Press the PLAY / PAUSE button.
Volume +	Press the VOLUME + button.
Volume -	Press the VOLUME - button.
Sound mode	Double-press the PLAY / PAUSE button to change Outdoor/Indoor/Bass Boost sound profile.
Answer a phone call	Press the PLAY / PAUSE button.
Reject a phone call	Press and hold the PLAY / PAUSE button for 2 seconds.
End a phone call (hang up)	Press the PLAY / PAUSE button.
Redial	Press and hold the PLAY / PAUSE button for 2 seconds.
Next track	Press and hold the VOLUME - button for 2 seconds.
Previous track	Press and hold the VOLUME + button for 2 seconds.

Switch between Wireless/ 3.5 AUX mode	Press the POWER button.
Factory reset	Press and hold the VOLUME + and the VOLUME - buttons simultaneously for 5 seconds.
Hard reset	Press the HARD RESET button under the rubber cover.
Mute sound (in AUX mode only)	While connected via AUX cable, press the PLAY/PAUSE button.

SETTING UP YOUR HD Max

Turn ON

Press and hold the **POWER** button for 3 seconds. You will hear the sound cue, the battery level indicators will light up and the BLUE LED light will start flashing.

Turn OFF

Press and hold the **POWER** button for 3 seconds. You will hear the sound cue, and the RED LED will light up and go OFF. The battery level indicators will be ON for another 10 seconds and will go OFF as well.

WIRELESS PAIRING

Make sure **TREBLAB HD Max** is fully charged and that the 3.5 mm audio cable is not plugged in.

- 1.** Turn ON your speaker by pressing and holding the **POWER** button for 3 seconds. You will hear the sound cue, the battery level indicators will light up and the LED will start flashing BLUE, meaning that the speaker is in pairing mode.
- 2.** Activate the Bluetooth mode on your device (smartphone, tablet, laptop).
- 3.** Select **TREBLAB HD Max** from the Bluetooth devices list. Keep it within 3 feet/1 meter of the speaker while pairing.
- 4.** If necessary, enter passcode 0000.
- 5.** Once **HD Max** is successfully paired and connected, the LED will stop flashing and stay BLUE.

REPAIRING

After the initial pairing, the speaker will automatically connect to the previously paired device when turned ON again. If reconnection does not happen automatically, the speaker will start looking for any other previously paired device within the effective distance range. **TREBLAB HD Max** can remember up to 8 recently paired devices.

TRUE WIRELESS STEREO (TWS) - PAIRING TWO SPEAKERS

The TWS technology allows you to use two speakers paired wirelessly to create a wireless dual-channel system, delivering a true stereo sound effect. While using this function, one speaker (Master, left channel) is paired with a smart device, the other (Slave, right channel) speaker is paired with the Master speaker.

- Select the Master speaker and pair it to the smart device following the steps from the WIRELESS PAIRING section. Then turn this speaker OFF.
- Turn OFF the Bluetooth on the smart device.
- Place the Master and Slave speakers near each other (the distance should not be over 3 feet /1 meter).
- Turn ON both speakers. You will hear the sound prompt, and the LED indicator will flash BLUE.
- Double click the **POWER** button on the Master speaker. The LED indicator will start flashing BLUE and GREEN, indicating pairing with the Slave speaker.
- Once paired, you will hear the sound prompt, and one of the speakers' LED indicator will slowly flash BLUE. The other speaker's LED will turn BLUE.
- Turn ON the Bluetooth on the Wireless device. The speakers will connect automatically.

- Now you can use the speakers in stereo mode. Kindly note that the maximum distance between speakers should not exceed 33 feet | 10 meter.

To disable the TWS function and disconnect the Master and Slave speakers, press and hold the **VOLUME +** and **VOLUME -** buttons simultaneously on the Slave speaker for 5 seconds until the BLUE LED light flashes, indicating the connection is lost.

AUDIO PLAYBACK

To pause and resume playback when connected wirelessly, press the **PLAY** button.

To adjust the volume, press the **VOLUME +** or the **VOLUME -** button while listening to music.

To change the track on the **HD Max**, press and hold the **VOLUME +** or the **VOLUME -** button for 2 seconds.

3.5 MM AUDIO CABLE CONNECTION

You can connect **TREBLAB HD Max** to compatible devices using the supplied 3.5 mm audio cable.

Turn the speaker ON. You will hear the sound cue and the LED light will start flashing BLUE.

Plug one end of the 3.5 mm audio cable into the 3.5 mm cable port on the side of the speaker (under the rubber cover). Plug the other end into the 3.5mm jack on your device.

The LED will turn GREEN. Now you can play music and audio.

To mute the audio, press the **PLAY / PAUSE** button.

NOTE: On-device control is not supported for the NEXT, PREVIOUS and PAUSE functions when using the 3.5 mm audio cable. Phone calls management using the **PLAY / PAUSE** button is not supported as well. You will need to make adjustments using your smart device.

SOUND MODES

TREBLAB HD Max speaker supports three audio modes: Outdoor, Indoor and Bass Boost.

In the Outdoor mode, treble is enhanced which ensures higher volume at open spaces. Indoor mode will be suitable for indoor application. In the Bass Boost mode, low frequencies are enhanced for better listening experience. To switch between the modes, double-press the **PLAY / PAUSE** button when the speaker is ON.

NOTE: The sound modes switching does not work when the speaker is connected using the 3.5 mm audio cable. To change the sound profiles in TWS mode double-press the **PLAY / PAUSE** button on any speaker. The changes will apply for both speakers.

PHONE CALLS

TREBLAB HD Max can be used to make and receive phone calls when connected wirelessly. Audio playback will be paused during calls.

To answer / end a call:

Press the **PLAY / PAUSE** button.

To reject a call:

Press and hold the **PLAY / PAUSE** button for 2 seconds.

To redial:

Press and hold the **PLAY / PAUSE** button for 2 seconds.

NOTE: For better call quality, face the microphone when you speak.

CHARGING

One full battery charge provides up to 5 hours of playing time at maximum volume, and up to 20 hours at 30% volume. When the battery is running low, you will hear a sound signal.

TREBLAB HD Max may be used while charging in both Bluetooth and 3.5 mm audio cable modes.

To charge the speaker, plug one end of the supplied cable into the TYPE-C charging port under the rubber cover at the side of the speaker. Plug the other end of the charging cable into a standard USB port. It takes up to 5.5 hours to fully charge.

If the speaker is turned OFF, the LED light will turn on RED. If the speaker is turned ON and connected to the device, the PURPLE LED will light up. The RED light will turn OFF or the PURPLE light will go BLUE when the speaker is charged.

Be sure to use a 5V DC, 0.5-2 A adaptor or charger. Using the power source with lower power will increase the overall charging time. Maximize the battery lifespan by charging your speaker through a computer's USB port.

Unplug **HD Max** from the charging cable and the cable itself from the power source when not in use.

If the speaker is left unused, even the fully charged battery will lose its charge over time.

We recommend fully charging the **HD Max** speaker at least twice a month to maintain sufficient battery life.

BATTERY LEVEL INDICATION

The **HD Max** speaker is equipped with the battery level indicators - LEDs. The current charge level is displayed while charging, when the speaker is used as a power bank and after the **POWER** button is pressed in OFF state.

- Charge level is between 0% and 30%: one LED is ON (flashing during the speaker charging or in the power bank mode).
- Charge level is between 30% and 70%: two LEDs are ON (flashing during the speaker charging or in the power bank mode).
- Charge level is between 70% and 100%: three LEDs are ON (flashing during the speaker charging or in the power bank mode).

POWER BANK MODE

TREBLAB HD Max inbuilt battery can be used as a power bank to charge your smartphone or tablet.

1. Connect your device to the speaker by plugging your device's charging cable into the USB 2.0 output port under the rubber cover at the side of the speaker.
2. If the speaker is in OFF state, press the **POWER** button to start charging. In case the speaker is ON, it will start charging instantly after you connect the device to the USB 2.0 output port.
3. There is no LED indication signal when the smart device is fully charged. Please pay attention to your device's battery charge indicator during the charging time.

TROUBLESHOOTING

Problem	Solution
Not powering on	Make sure the speaker is fully charged. Charge for 2 hours, if necessary. Press and hold the POWER button for 3 seconds.

Not pairing

Make sure the 3.5 mm audio cable is not plugged in.

Make sure the speaker is not paired with any other device, as it can only pair with one device at a time.

Press the **VOLUME +** and **VOLUME -** buttons simultaneously and hold for 3 - 5 seconds. This will force the speaker to forget previously paired devices. Repeat the steps for pairing as previously described.

Alternatively, disconnect the device from your speaker and remove **HD Max** from your device's pairing list. Try to pair again.

Not finding a wireless driver on your laptop

Make sure your laptop supports wireless connections. If it doesn't you will need an external wireless USB adapter compatible with your laptop. For further details, consult with your laptop manufacturer.

Frequent disconnection and noise

Ensure that the distance between your device and the speaker is less than 30 feet/10 meters.

Ensure that nothing is blocking the signal between your device and the **HD Max**.

Check if the speaker is running out of power.

SAFETY RULES

- ❗ Don't disassemble or modify your speaker for any reason. Doing this may cause the speaker to malfunction or become combustible. The damage to your device can void the manufacturer's warranty.
- ❗ Do not let your device get wet - liquids can cause serious damage. Water damage to your device can void the manufacturer's warranty.
- ❗ Make sure the speaker is completely dry before charging.
Clean only with a dry doth.
- ❗ Avoid exposing **TREBLAB HD Max** to extreme temperatures (below 37°F / 3°C or above 112°F / 45°C). Extreme temperatures can cause the deformation of the **HD Max** components and reduce the battery life and the lifespan of your new speaker.
- ❗ Don't put the device's LED lights close to humans' or animals' eyes.
- ❗ Do not use **HD Max** during a thunderstorm. Thunderstorms can cause serious malfunction and increase the risk of electric shock.

SPECIFICATIONS

Battery:	Up to 20 hours playtime (30% volume) Up to 5 hours (100% volume) 12000mAh 3.7V, rechargeable Li-Ion Input 5V/0.5A-2A Output 5V/2.1A
Charging time:	5.5 hours
Bluetooth version:	4.2
Supported profiles:	HFP, A2DP, AVRCP, GAVDP, AVDTP, SPP, AVCTP
Frequency response:	80 Hz - 16 kHz
Signal range:	33 ft / 10 m
Speaker size:	2 x 31 mm , 2 x 70 mm
Output power:	50W
Water resistance:	IPX6
Charging port:	TYPE-C
Audio port:	3.5 mm jack
Dimensions:	4.72 x 4.72 x 12.4 inches/120 x 120 x 315 mm
Weight:	5.62 lbs/2550 g

RECYCLING

The speakers can be recycled, and they should be in order to keep our planet clean. Where should you bring them?

In the **US**, there are a couple of options:

1. Best Buy has a recycling program. Just take the broken speaker with you next time you visit a Best Buy store.

This link will help you find the best location:

<https://www.bestbuy.com/site/store-locator/>

2. Check for other possible locations next to you on these websites (just enter your ZIP to find a location):

<https://www.call2recycle.org>

<https://search.earth911.com>

<https://recyclenation.com/find>

<https://www.cta.tech/Consumer-Resources/Greener-Gadgets>

In **Canada**, please visit the links below:

<https://thinkreuse.net>

<https://www.call2recycle.ca>

In the **UK**, please visit the links below:

<https://www.recycle-more.co.uk/>

<https://www.recyclenow.com/local-recycling>

THANK YOU

We truly appreciate that you chose **TREBLAB** as your trusted brand of wireless speakers and sincerely hope you enjoy the great sound and seamless usability **TREBLAB HD Max** provides. We love making our customers happy by providing true value with our products. If for any reason you are not completely satisfied with your purchase or have any questions, please visit https://treblab.com/contact_us. We care about our customers most of all and are always here to help you.



TREBLAB

1 YEAR WARRANTY
Parts and Labor Warranty

Please visit www.treblab.com
to register YOUR product.

Manufactured by Productech

HDMax

WIRELESS SPEAKER



Made in China

RoHS **CE** **FC**  



**WARNING: Cancer and Reproductive
Harm - www.P65Warnings.ca.gov**