



TREBLAB

# FX100

## USER'S MANUAL

WIRELESS  
BLUETOOTH  
SPEAKER




# FX100

1. TREBLAB FX100
2. User manual
3. USB charging cable
4. 3.5 mm audio cable

# Thank you for choosing TREBLAB FX100 – Wireless speaker powered by latest BLUETOOTH® 4.1 technology!

Expect superior sound quality and rugged construction combined with hands-free wireless operation. Please read this manual before using the product.

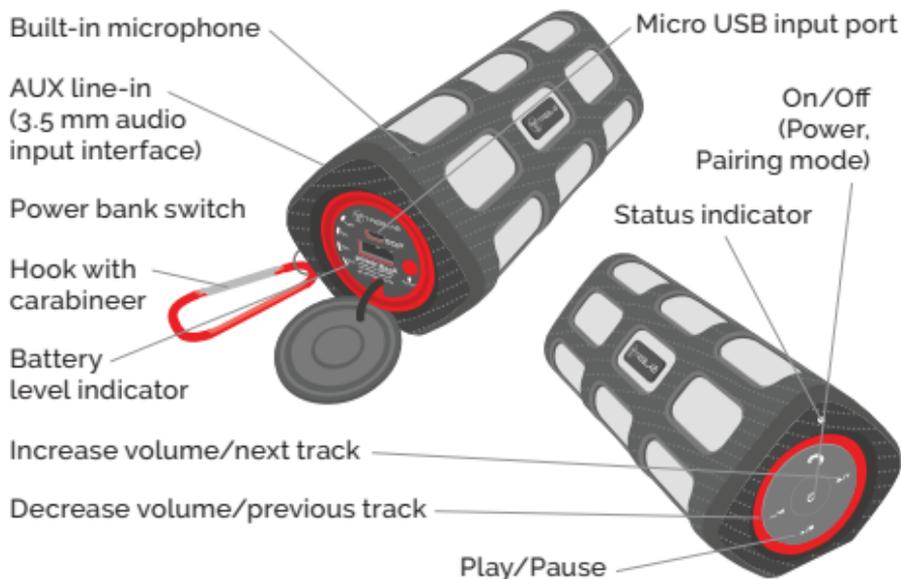

## Function

Power On  
Power Off  
Answering Call  
End Call  
Reject  
Pause / Play  
Volume+ / Volume-  
Previous song / Next song

## Operation

Long press the power button  
Long press the power button  
Short press one time  
Short press one time  
Short press one time  
Short press one time  
Long press  
Short press

## SETTING UP YOUR FX100

### POWER ON/OFF

To turn on your **FX100**, long press and release the power button. The LED bulb will light up and an audio cue will indicate the system is on. To turn the **FX100** off, long press and release the power button. Audio cue will indicate the system is off.

### BLUETOOTH®

1. Pairing: For Bluetooth® pairing, press and hold the power button for 6 secs. The Bluetooth® LED will blink RED/BLUE rapidly indicating device is in pairing mode.
2. Using your Bluetooth® enabled device scan/search for available Bluetooth® devices
3. Select **TREBLAB FX100** from the device list.
4. Once **FX100** is successfully paired and connected, the LED will blink BLUE every 3 secs.
5. Disconnect by holding the power button for 6 secs.

### RECONNECTING

After the connection is lost, the **FX100** will try to reconnect automatically to any previously paired devices. If reconnection does not happen automatically, please go through the "pairing" instructions above.

### AUX INPUT

To play audio using the supplied audio cable, plug the cable from the audio device to the "LINE IN" jack on the side of the **FX100**.

## VOLUME

To adjust volume of the **FX100**, long press the volume up "+" and volume down "-" buttons on the top surface of the **FX100**.

## CHANGE TRACKS

To change tracks on the **FX100**, short press the volume up "+" and volume down "-" buttons on the top surface of the **FX100**.

## AUDIO PLAY AND PAUSE

To pause and resume playback when connected through Bluetooth®, short press the "Power" button.

## PHONE CALLS

**FX100** can be used to make and receive phone calls when connected through Bluetooth® (audio playback will be paused during calls). Answer/End Call: short press the "Power" button.

## POWER BANK USAGE


**FX100** is equipped with a power bank, which can be used to charge your smartphone or tablet.

Connect your device to the speaker's power bank by plugging your charging cable into the USB port on the back side of the **FX100**. Press the "DC OUT" button to start charging.



The power bank is equipped with charge level indicator LED's.

Press the "DC OUT" button to activate the indicator. LED's that correspond to the current charge level will light up.

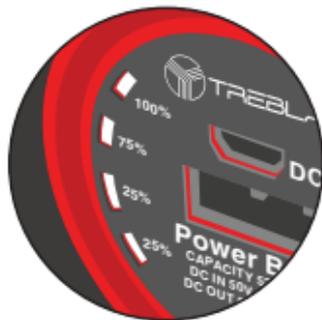

## CHARGING AND BATTERY

To obtain optimum power capacity, the **FX100** should be charged using the provided USB cable in your packaging box. To charge the **FX100**, plug the USB side of the cable into a power source and the Micro USB side into the port on the back of the **FX100**.

The speaker is equipped with charge level indicator LED's. The current level of charge is displayed while charging.

1. Charge level is between 0% and 25%: the 25% indicator will begin to flash.
2. Charge level is between 25% and 50%: the 50% indicator will begin to flash.
3. Charge level is between 50% and 75%: the 75% indicator will begin to flash.
4. Charge level is between 75% and 100%: the 100% indicator will begin to flash.

## IMPORTANT CHARGING AND BATTERY INFORMATION

Do not charge your speaker longer than for 6 hours at a time, as this will lead to a reduction of battery capacity and void your manufacturer's warranty.

Unplug the **FX100** from the charging cable and the cable itself from the power source when not in use.

If left unused, a fully charged battery will lose its charge over time. We recommend fully charging the **FX100** twice a month to ensure sufficient battery life.

Do not leave the speaker exposed to extreme heat or cold because this will reduce the capacity and lifespan of the battery.

Do not place the speaker close to fire as the batteries may explode. Batteries may also explode if damaged.

To charge the **FX100** use only the cable provided in the packaging box.

Make sure the speaker is completely dry before charging.

## IMPORTANT SAFETY INFORMATION

Never disassemble or modify your speaker for any reason. Doing so may cause the speaker to malfunction or become combustible. Damaging the speaker will void your manufacturer's warranty. Do not use excessive force when operating the speaker. Do not let the speaker drop onto a hard surface.

Avoid exposing the speaker to extreme temperatures (below 37F/3Co or above 112F/45Co). Extreme temperatures may cause the deformation of the protective cover and reduce lifespan of the **FX100**.

Avoid putting LED lights close to the eyes of humans and animals.

Do not use the speaker outdoors during a thunderstorm. Thunderstorms may cause malfunction and increase the risk of electric shock.

## **TROUBLESHOOTING**

### **❓ The LED does not come on when turning the speaker on**

This can happen when the battery has lost charge. Charge the **FX100** for at least 30 minutes and the problem should be solved.

### **❓ Can't connect the speaker to your device**

1. Turn off the **FX100**.
2. Go to the Bluetooth® menu on your source device and delete all saved devices from the list by clicking on "Forget this device".
3. Turn the Bluetooth® on your source device OFF then back ON; **TREBLAB FX100** will be deleted.
4. Power OFF your source device then and then turn it back ON.
5. Power ON the **FX100**.
6. Enter the device into the pairing mode and follow the instruction for connecting.

## ❓ My device is asking for a password

If prompted for a password, enter **0000** on your device.

## ❓ Frequent disconnection and noise

1. Ensure the **FX100** is fully charged.
2. Ensure that the distance between your device and the speaker is less than 30 feet / 10 meters.
3. Ensure that nothing is blocking the signal between your device and the **FX100**.
4. Check if the music is paused.
5. Check if the volume level is set both on the source device and on the speaker.
6. Check if the speaker is running out of power.

## TECHNICAL SPECIFICATIONS

- Bluetooth® version 4.1 + EDR
- Bluetooth® profiles A2DP, AVRCP
- Operating distance 30 feet / 10 meters
- Battery life Up to 35 hours
- Charging time Up to 6 hours
- Output power 2x5W
- Battery capacity 7000mAh
- Frequency range 80Hz- 20KHz
- Audio input AUX
- Charging port type Micro USB

## TREBLAB FX100 MEETS IP4 WATERPROOF STANDART

**SUITABLE:** 

- Splashing
- Snow
- Accidental short rain

**UNSUITABLE:** 

- Swimming
- Diving into water
- Snorkeling or Scuba Diving
- All kinds of watersports
- Showering
- Incidental exposure to water of up to 3 feet/ 1 meter for up to 30 minutes

We really appreciate that you chose **TREBLAB** as your trusted brand of Bluetooth® speaker and sincerely hope you enjoy the great sound and comfort **TREBLAB** provides. We love making our customers happy by providing true value with our products.

If for any reason you are not completely satisfied with your purchase, let us know immediately and we will do everything to make sure you are happy.

## **1 YEAR WARRANTY**

### **Parts and Labor Warranty.**

Please visit [www.treblab.com](http://www.treblab.com)  
to register YOUR warranty.

Manufactured by:  
Productech Corp [www.treblab.com](http://www.treblab.com)

Contact us: [support@treblab.com](mailto:support@treblab.com)  
+1 (315) 883-2603



TREBLAB

# FX100

WIRELESS BLUETOOTH  
SPEAKER



Made in China