

Follow these steps!

1



Remove adhesive and attach it to a clean surface.

2



Use Allen Key to loosen the screw on the clasp. Determine the desired wire length and tighten the screw.

3



Insert the pin from the clasp into the pull box to **activate the alarm**.

4



Insert the pin into the clasp and the unit will beep once, it is now active.

5



To **deactivate the alarm** place the magnetic lock detacher on the unit, Push the red button and a beep will sound. The alarm is now off.

6



To **remerchandise** hold the magnetic detacher to the tether. Push the pin in to release the catch, then pull.

Replacing the battery

1



The unit will let off a short chirp of the alarm to indicate a low battery.

2



Hold the magnetic detector against the unit.

3



Press the red button so that the unit deactivates.

4



With the magnetic detector still in place, twist the base counter clockwise.

5



The battery compartment will twist off.

6



Remove the red battery cover and replace the battery CR-2032