



1. Download the Danalock app
 Go to Google Play or App Store and download the Danalock App.
 When the app is installed you create a user profile by pressing the blue ring. You will use this profile each time you sign into the app.
 You will need to finish setting the Danalock up in the app after mounting it on the door.

2. Get your tools together
 To install the Danalock, you'll need a Phillips screwdriver and tape, preferably masking tape.
 Should you need to remove or readjust the lock, a pen tip or paper clip will be needed.

3. Check door alignment
 Ensure that your door is properly aligned before beginning installation.
 You should be able to lock your door without pushing, pulling, or lifting the door.

Thumb-turn must move and lock smoothly.

4. Secure outside keyhole
 Before removing your existing lock, use tape to secure the outside keyhole. This will keep it in place as you remove the screws on the inside.

5. Remove inside thumb-turn
 Remove the inside thumb-turn, leaving just the deadbolt and tailpiece remaining.
 Set aside the screws. You'll reinstall them in step 7.

6. Select a backplate
 Find the backplate that matches the brand of your existing lock.

A Omnia Weslock | **B** Schlage Weiser | **C** Baldwin Emtek Kwikset



7. Fasten backplate

Fasten the appropriate backplate where the thumb-turn was using the two original screws, with the arrow on the label pointing up.

The notches on the backplate must be facing out with the tailpiece centered exactly in the middle hole.

8. Select tailpiece adapter

Select the tailpiece adapter that matches the shape of your existing lock's tailpiece.

<p>Baldwin Defiant Emtek Omnia Weiser Weslock</p>	<p>Baldwin Kwikset</p>	<p>Schlage Depends on the length of your tailpiece.</p>
---	----------------------------	---

9. Insert adapter into Danalock

Insert the selected tailpiece adapter into your Danalock and press until it clicks in place.

10. Check direction of the Danalock

With the battery cover facing down, proceed to the next step.

11. Fit and fasten Danalock

Fit the Danalock onto the backplate with the tailpiece sliding into the adapter and the backplate notches into the back of the lock. Turn the Danalock clockwise until it clicks to fasten it to the backplate. NOTE: if you need to unfasten and retry, see "Uninstall instructions" at the end of the manual.

12. Activate batteries

Pull out the plastic tab to activate the batteries.

A light will flash to confirm the Danalock is ready.

13. Complete setup in the Danalock app

Next you need to press "Menu" in the top right corner, and the press "Add lock". A guide will lead you through the installation and configuration of your Danalock.

Uninstall instructions

Pull out the plastic tab. If at any time you need to unfasten this Danalock from your door, insert a pen tip into the hole at the top inner edge of the lock and press while turning the lock counter-clockwise until the lock releases.

This will not reset the lock or disconnect it from your account, but the lock may need to be re-calibrated if fastened to your door again.

