

WEBLEY & SCOTT EMPIRE SERIES PARTS LIST

Part.No	Description	Part.No	Description
1	Thread protector	28	Sear pin
2	Barrel	29	Trigger pin
3-7	Receiver assembly	30	Safety lever pin
3	Receiver	31	Safety lever spring
4	Bolt stop	32	Safety lever screw
5	Bolt stop screw	33	Actuator
6	Bolt stop spring	34	Safety lever
7	Receiver plug screw	35	Sear stopper pin
A(8-13)	Bolt sub-assembly	36	Trigger spring
8	Bolt body	37	Trigger & Rear pillar housing screw
9	Extractor	38	Front pillar housing screw
10	Extractor pin/Ejector pin	39	Link retaining circlip
11	Extractor spring	40	Collar
12	Ejector	41	Lever rotating pin
13	Ejector spring	42	Guide bar
14-18	Firing pin assembly	43	Link
14	Firing pin	44	Pillar (Front)
15	Main spring	45	Lever (Front)
16	Firing pin retaining pin	46	Torque spring (Front)
17	Bolt Sleeve	47	Pillar (Rear)
18	Cocking piece	48	Lever (Rear)
B(19-36)	Trigger assembly	49	Torque spring (Rear)
19	Trigger housing	D(50-52)	Magazine assembly
20	Sear	50	Magazine follower
21	Trigger	51	Magazine spring
22	Actuator pin	52	Magazine
23	Retaining circlip	53	Trigger guard
24	Retaining hinge, safety lever	54	Front guard screw
25	Trigger adjusting screw	55	Rear guard screw
26	Actuator spring	56	Stock
27	Lock nut		

EMPIRE SERIES

