



PART No.	DESCRIPTION	No.OFF	PART No.	DESCRIPTION	No.OFF
H9	JOINT WASHER	1	H48	SEAR	1
H10	PASSAGE SCREW JOINT	1	H49	SEAR SPRING	1
H11	PASSAGE SCREW	1	H50	TRIGGER GUARD	1
H15	BARREL CATCH PLUNGER	1	H51	FULCRUM PIN LONG	6
H16	SPRING -TRIGGER & BRL CATCH	2	H55	SAFE SHAFT	1
H17	BARREL CATCH	1	H56	SAFE SPRING	1
H18	BARREL CATCH FULCRUM PIN	1	H57	SAFE LEVER	1
H22	PISTON	1	H62	STOCKSIDE L.H	1
H23	PISTON WASHER	1	H63	STOCKSIDE R.H	1
H24	SPRING GUIDE	1	H64	STOCKSIDE NUT	1
H25	LINK FULCRUM	1	H65	STOCKSIDE FIXING SCREW	2
H26	BARREL FULCRUM PIN	1	H116	BODY (NOT SUPPLIED AS A SPARE PART	1
H27	MAINSRING	1	H118	.177 BARREL & HOUSING ASSY	1
H35	LONG LINK	1	H119	.22 BARREL & HOUSING ASSY	1
H36	LINK SPRING	1	H120	.177 BARREL & LINKS ASSY	1
H37	INTERMEDIATE LINK	1	H121	.22 BARREL & LINKS ASSY	1
H38	SMALL LINK	1	H122	REARSIGHT BASE	1
H39	FULCRUM PIN SHORT	3	H123	REARSIGHT LEAF	1
H46	TRIGGER - PRECISION CAST	1	H124	REARSIGHT FIXING SCREW WASHER	2
H47	TRIGGER ADJUSTING SCREW	1	H125	REARSIGHT FIXING SCREW	2
			H126	FOREND	1