



The Webley Rebel

Owner's Manual


Please read this manual before using your airgun

Guarantee

Each Webley Rebel is fully guaranteed against faulty workmanship and defective materials for a period of 1 year from the original date of purchase, provided it has not been misused or tampered with in any way. Should it become necessary, consult the dealer from whom it was purchased. This guarantee does not affect your statutory rights. Register your warranty at www.webley.co.uk Warranty applies to UK residents only. If not UK resident and the gun was purchased outside the UK please refer to your retailer / distributor.

USE, CARE AND MAINTENANCE OF THE WEBLEY REBEL AIR RIFLE.

Nomenclature

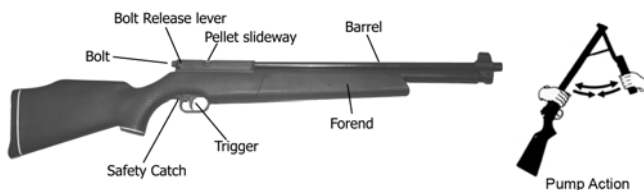

The Webley Rebel is a single shot variable power pump up air rifle. Webley Rebel air rifles are designed for use with .177(4.5mm) waisted lead pellets.

The rifle incorporates many special design features which includes:

1. A bolt action cocking and loading system.
2. Variable power . The number of pumps will increase power up to the set power limit or 8 pumps Which is the highest. Extra pumps will not increase power.
3. A Manual Safety Catch
4. A precision rifled barrel to ensure pinpoint accuracy.
5. A dovetail incorporated in the barrel housing to fit optional telescope sight.
6. A Synthetic Ambidextrous, custom style stock.

THE BASIC SAFETY RULES ARE:

1. Treat every rifle as if it is loaded.
2. Never point the rifle at anyone, or allow anyone to point a rifle at you, even if you know it is not loaded.
3. Always carry the rifle so that the direction of the muzzle is under control, even if you stumble.
4. Always be sure of your target and what lies behind it before firing your rifle.
5. Never leave a loaded rifle unattended.
6. Beware of targets that tend to cause ricochets.

OPERATING INSTRUCTIONS.

Safety Catch. The Manual Safety Catch is located at the rear of the trigger guard just behind the trigger. When the button is pushed from the left side of the airgun, protruding to the right side, the trigger is blocked and the safety is the SAFE position.

When ready to fire the shot push the Safety Catch from the right side of the airgun over to protrude on the left side. Always have the Safety Catch in the SAFE position until you are ready to fire the shot.

To load the Webley Rebel.

1. Push the safety catch into the SAFE position.
2. Holding the gun firmly, open the forend all the way until it stops.
3. Place your hands so that they can not be pinched, close the forend to its original position. The load will increase with every pump.
4. Repeat 2 & 3 to achieve your desired power.

Loading Pellets.

1. With the Safety Catch in the SAFE position and the airgun pointing in a SAFE DIRECTION push the bolt release lever downward and the spring loaded bolt will move backwards into its rear position.
2. Place a lead pellet of the correct calibre into the exposed pellet slideway with the nose of the pellet pointing towards the barrel.
3. Push the forward the bolt as far as it will go.
4. The rifle is now ready.

Adjusting the open rearsight

Although the Webley air rifles are fitted with different types of open sights the method of zeroing the rifles is exactly the same. Always take the same point of aim during adjustment, regardless of the resultant point of impact. Shoot at least five pellets between adjustments, using the average of the group for reference.

Vertical adjustment.

To correct a rifle shooting high, turn the rear sight vertical adjusting screw clockwise to lower the leaf. To correct a rifle shooting low turn the vertical adjusting anti-clockwise to raise the leaf.

Horizontal adjustment.

To correct a gun shooting to the right, turn the rear sight horizontal adjusting screw anti-clockwise to move the blade to the left. To correct a gun shooting to the left, turn the horizontal adjusting screw clockwise to move the blade to the right.

Additional Safety Measures & Warnings

- This airgun will fire if cocked, loaded, safety disengaged and trigger pulled.
 - Air guns are not toys. Never let young children use an airgun unsupervised. Adult supervision is strictly required during use. Misuse or careless use may cause serious injury or death.
 - Learn how your air gun operates and safe gun handling procedures before loading and using it.
 - ALWAYS USE EYE & HEARING PROTECTION AND MAKE BYSTANDERS USE THE SAME. Failure to do so may result in eye injuries and permanent hearing loss.
 - Do not point at anything you do not intend to shoot even though the gun is unloaded. Always keep the gun pointed in a safe direction.
 - Never pull a gun toward you by the muzzle.
 - Always aim at a safe target, taking care that it does not conceal any other object.
 - Before you fire, consider where the pellet will travel should you miss your intended target, thus ensuring no damage or harm could result.
 - Be sure of your target before you pull the trigger. Never shoot at sounds.
 - When shooting, always have a safe shooting range, that is; have a safe area for shooting, a safe distance between you and the target, and a safe backstop to trap the pellets and hold the target.
 - Do not fire at a target, which allows ricochets or deflections.
 - Do not fire into or at water.
 - Do not fire at or near powerlines or insulators. Be especially careful in wooded areas where powerlines may not be as visible.
 - Do not load the gun until you are ready to shoot.
 - Always keep your fingers away from the trigger & muzzle during cocking and handling.
 - Do not walk, run or jump when carrying a loaded or cocked air gun. A loaded or a cocked gun should never be carried inside a vehicle, house, camp or public place. Never climb a tree or fence or jump a ditch with a loaded gun. In such a case, first unload it and hand the gun to a friend or place it on the ground on the other side of the obstacle before crossing yourself.
 - When transporting the gun, keep it unloaded and 'on safe'.
 - Always keep the gun 'on safe' until you are ready to shoot even if the gun is unloaded.
 - Do not put the gun away loaded and unattended.
 - Always check to see if the gun is 'on safe' and unloaded when getting it from another person or from storage.
 - ALWAYS KEEP THE AIR GUN AND/OR PELLETS OUT OF THE REACH OF CHILDREN.
 - Keep the airgun and pellets in separate places, better if under lock and key.
- WARNING: Lead pellets. Do not inhale dust or put pellets in mouth. Wash hands after handling. This product contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm.
- Do not attempt to disassemble or tamper with your gun. Use a competent gunsmith. Many air guns contain powerful springs, which can cause serious injury if released in an uncontrolled manner.

For information on all Webley and Webley & Scott products visit: www.webley.co.uk