



MOUNTAIN
ACTIVE CO.

RAYSEEKER

USER MANUAL




WELCOME



Our mission is to create stylish, versatile and highly functional life accessories for people like us.

Here is our manual to help set up your Rayseeker new watch. The process should only take you a few minutes.

HOW TO SET THE TIME

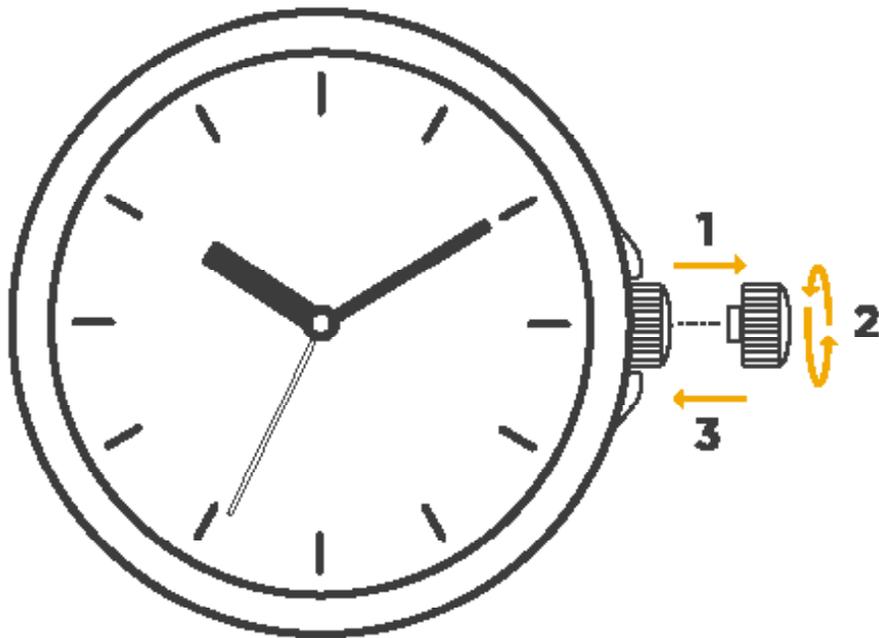

1 Pull the crown out to the 1st click position when the second hand is at the 12 o'clock position.

2 Turn the crown to set the hour and minute hands

3 Push the crown back to the normal position.

FEATURES OF THE SOLAR WATCH

This watch is a solar-powered watch containing a solar cell underneath the dial to convert any form of light into “electrical energy” and store the power in a secondary battery. Unlike conventional quartz watches, this watch does not use a silver oxide battery, thus eliminating the need for battery replacement.

Expected running time from full charge to stoppage will be around 2 months.

HOW TO CHARGE AND START THE WATCH

CHARGING

When you start the watch or when the energy remaining in the secondary battery is very low, charge it sufficiently by exposing the watch to light.



It is not necessary to charge the watch fully. It is important, however, to charge the watch sufficiently, especially in the case of initial charging.

Caution when charging the watch, do not place it too close to fluorescent lamp or other light sources as the watch temperature will become extremely high, causing damage to the parts inside the watch.

To prevent energy depletion

- Avoid covering the watch face with your clothing while wearing it.
- When the watch is not in use, leave it in a brightly lit place for as long as possible. Make sure that the watch temperature does not exceed 50°C.

GUIDELINES FOR CHARGING TIME

The below table provides only general guidelines.

(Dial transparency rate is 40%)

Illumination (Lx)	Source of light	Environment	A (Approx. Hours)	B (Approx. Hours)	C (Approx. Hours)
700	A Flurescent Lamp	Inside the Office	-	45	132
3,000		30W 20cm	60	4	33
10,000	Sunlight	Cloudy	20	1.5	11
100,000		Fine Weather	5	15 minutes	2.5

WATER RESISTANCE RATINGS

All our watches are tested to 10 ATM/100M/300FT

This means they are suitable for

1. Rain, splashes
2. Showering, swimming
3. Surfing, Snorkeling, Spearfishing*

WATCH CARE

*Rinse watch with soap and water after exposure to salt water or sand.

Replace the battery at least every two years (except solar, which never needs replacing). Dead or low batteries left in a watch may leak and destroy the movement of your watch. If you have a water resistant watch, know that the water resistancy is attained using rubber or plastic seals which will deteriorate under normal conditions and reduce the water resistancy of your watch. These seals should be checked by an authorized jeweler at least every two years to ensure the rated water resistancy. Do not expose your watch to extreme temperatures (over 60°C or 140°F, under -10°C or 14°F). No hot tubs or saunas. Avoid extreme shocks.

WARRANTY INFO

Mountain Active Co offers a 1 year limited warranty from the date of purchase on defects in workmanship. This means that if the materials in your watch aren't right or if the watch isn't put together correctly, we will repair or replace it, at our discretion.

The warranty does not cover normal wear, tear and aging to mineral crystals, watch case, strap and batteries, nor does it cover loss or theft. You will void your warranty if you open your caseback, push the buttons underwater, or forget to push in the crown and expose your watch to moisture.

PROBLEMS?

Email team@Mountainactive.com and we'll do all we can to resolve the problem.

COUNTRY OF ORIGIN

Mountain Active Co watches are designed in Australia and Made in China.