

## **HEADREST COVER**

- 1) Remove headrest from the seat. (A sharp, firm upward pull is required.)
- 2) Remove the spring clip from the end of the tube.
- 3) Unscrew the two phillips screws securing the plastic plate and then remove the plate. Clean the plate and screws for re-use.
- 4) The cover is held in place with staples into ply strips in the headrest frame. Remove the staples and the foam / cover will lift off the frame.
- 5) Clean / refurbish the stalk/ frame as necessary
- 6) Remove the old cover from the moulded chipfoam. Retain the plastic bag covering the foam as this makes the new cover slip over the foam easily.
- 7) Fit the new cover over the foam and straighten all seams and piping.  
**NOTE:** At the base of the foam, thickest side faces front.
- 8) Insert the frame into the foam slot. (Make sure it is the correct way round) It can be glued into place.
- 9) Pull the cover over the front of the headrest and tack or staple it in place, trimming round the stalk.
- 10) Repeat the procedure with the rear of the cover.
- 11) Slide the plastic plate over the stalk and screw into place.
- 12) Replace the spring clip
- 13) Insert stalk into headrest hole and your seat is complete.

**HAPPY MOTORING!**