

How to activate Audio on an Active Deterrence IP Camera.





PLEASE NOTE: You will need to use Internet Explorer to follow this guide.



| | ▼ Ø | - ロ × の ☆ 隠 © | |
|--|-----|------------------|---|
| Image: state | | | 1, Type the IP ADDRESS of your NVR into Internet Explorer and press the return / enter key on your keyboard. Enter in your USERNAME and PASSWORD and press the LOGIN button |







| A | | | | | | | | | | | | | |
|--------|----------------------------|---|---|---|---|---|---|--|--|--|---|-------------------------------------|--|
| ı List | Camera Lis | st | Update | | | | | | | | | | |
| | IP Address | | | | | Search | | | | | Uniniti | ialized | Initializ |
| | | | | | | | | | | | | | |
| Name | | NO. | Live S | tatus | IP Address | Port | Device N | Name | Manufa | cturer | Туре | | MAC Address |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | | | | | | | | | | | | | |
| | Search Device | Add | Manual Add | Modify/IP | | | | | | | Filter | None | |
| | Search Device | Add | Manual Add | Modify IP | | | | | | | Filter | None | |
| | Search Device | Add Camera Lin | Manual Add | Modify IP | | | | | | | Filter | None | |
| | Search Device Added Device | Add Camera Lin Channel | Manual Add ked Info Modify | Modify IP | Status | IP Address | Port | Device Name | Remote CH No | Manufacturer | Filter 🚺 Carnera Narne | None Webpage | Туре |
| | Search Device Added Device | Add Camera Lin Channel 1 | Manual Add ked Info Modify | Modify IP Delete | Status | IP Address 192.168.1.110 | Port 37777 | Device Name 6G04D38PA | Remote CH No | Manufacturer Private | Filter M Camera Name Channel1 | None Webpage | Type ITC237-PW6 |
| | Search Device Added Device | Add Camera Lin Channel 1 2 | Manual Add ked Info Modify | Modify IP Delete 亡 | Status | IP Address 192.168.1.110 10.1.1.66 | Port 37777 Port2 | Device Name 6G04D38PA 5L09D33PA | Remote CH No 1 | Manufacturer Private Private | Filter M Camera Name Channel1 Channel2 | None Webpage @ | Type ITC237-PW6 IP Carnera |
| | Search Device Added Device | Add Camera Lin Channel 1 2 3 | Manual Add ked Info Modify | Modify IP Delete 面 面 | Status • • | IP Address 192.168.1.110 10.1.1.66 192.168.1.199 | Port 37777 Port2 37777 | Device Name 6G04D38PA 5L09D33PA 6H04D9FRA | Remote CH No 1 1 1 | Manufacturer Private Private Private | Filter Camera Name Channel1 Channel2 Channel3 | None Webpage © © | Type ITC237-PW6. IP Camera IP Camera |
| | Search Device Added Device | Add Camera Lin Channel 1 2 3 4 | Manual Add ked Info Modify I I I I I I I I I I I I I I I I I I I | Modify IP Delete 面 面 面 | Status • • • • | IP Address 192.168.1.110 10.1.1.66 192.168.1.199 10.1.1.68 | Port 37777 Port2 37777 Port4 | Device Name 6G04D38PA 5L09D33PA 6H04D9FRA 4A02C14PA | Remote CH No 1 1 1 1 1 1 | Manufacturer Private Private Private Private | Filter Camera Name Camera Name Channel1 Channel2 Channel3 Channel4 | None Webpage © © © | Type ITC237-PW6 IP Camera IP Camera IP Camera |
| | Search Device Added Device | Add Camera Lin Channel 1 2 3 4 5 | Manual Add ked Info Modify | Modify IP Delete 面 面 面 面 | Status • • • • • • • • • • • • • | IP Address 192.168.1.110 10.1.1.66 192.168.1.199 10.1.1.68 10.1.1.69 | Port 37777 Port2 37777 Port4 Port5 | Device Name 6G04D38PA 5L09D33PA 6H04D9FRA 4A02C14PA 4A02C14PA | Remote CH No 1 1 1 1 1 1 1 1 | Manufacturer Private Private Private Private Private Private | Filter Camera Name Channel1 Channel2 Channel3 Channel4 Channel5 | None Webpage © © © © | Type ITC237-PW6 IP Camera IP Camera IP Camera IP Camera |

3, Find your camera in the bottom list and click the **BLUE E ICON** next to your camera to link directly to the camera. Once you have clicked, a new tab will appear in internet explorer.

<u>TIP</u>: This will also work for cameras that are plugged directly into the POE ports of the NVR



| | and server | |
|---------------------------|------------------|---|
| Waiting for 192.168.1.101 | sedicit | |
| | Forgot password? | 4, Click onto the NEW TAB that the NVR opened up and input your USERNAME and PASSWORD for the camera and click the LOGIN button The username and password is usually the same as the NVR |





5, Once logged into your camera click on the **SETTING** button



| A (a) (a) (b) (b) (c) (c) (c) (c) (c) (c) (c) (c) (c) (c | 1.199/ | - C Search | — □ × _ 命☆感® | |
|---|---|---------------|----------------------|---|
| Setting | × | | | |
| SPRO | | Live Playback | Setting Alarm Logout | |
| Camera Conditions Video Network Event Storage System Information | Audio Encode Main Stream Imable Encode Mode G.711A Sampling Frequency 8000 Sub Stream Encode Mode G.711A Sampling Frequency 8000 Sampling Frequency 8000 Attribute Audioin Type Microphone Volume Image: Speaker Volume Image: Speaker Volume Image: Speaker Volume | | | 6, Click onto CAMERA and then AUDIO on the right hand side and then click onto AUDIO. Change the Audio In Type to MIC and ensure there is a TICK in MAIN STREAM and |
| | Default Refresh Save | | | SUB STREAM and click SAVE. |
| | | | | |
| | | | | |