


JET TWIN 1000855US

DIMENSIONS

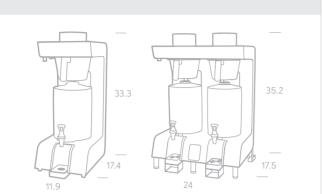

- Single (1.5 gallon) or Twin (3 gallon) options
- Pre-set recipe and volume options for morning, afternoon and evening
- Variable batch volumes
- Basket safety lock during brewing

- Operator friendly and easy-to-use
- Vacuum insulated urn for energy-efficiency and temperature retention
- Two power options

PRECISE, PROGRAMMABLE BATCH BREWER FOR HIGHER VOLUME REQUIREMENTS.






ACCESSORIES	NAME ORDER CODE	DIMENSIONS (D x W x H inches)		
	Jet Grinder 1000891	22.8 x 11.8 x 31.4		
	Jet Urn 1700169	13.5 x 9 x 15		


NAME ORDER CODE	POWER @ 230V	FULL BREW	CUPS PER HOUR	DIMENSIONS (D x W x H inches)	NEMA	PLUMBING REQS
Jet 6 5.6kW 1000850US	5.6Kw	1.5 GAL	250	17.4 x 11.9 x 33.3	L6-30P	3/8" Compression or 3/8" John Guest
Jet 6 2.8kW 1000851US	2.8kW	1.5 GAL	156	17.4 x 11.9 x 33.3	L6-20P	3/8" Compression or 3/8" John Guest
Jet Twin 1000855US	5.6Kw	1.5 GAL (per urn)	250	17.5 x 24 x 35.2	L6-30P	3/8" NPT


JET TWIN BATCH BREWER

CLEARANCE

JET TWIN 1000855US

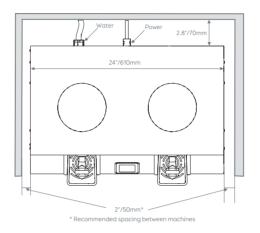

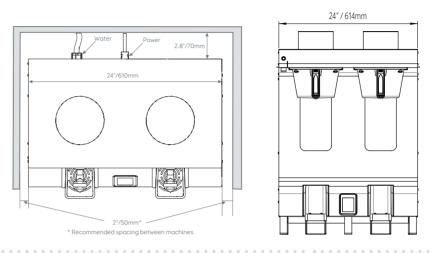

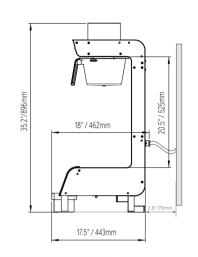

ELECTRICAL INSTALLATION PROCEDURE

When installing the machine, always observe the local regulations and standards. The appliance is supplied with a NEMA L6-30P power cord. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 14.5 -145psi (100 -1000kPa, 0.1 - 1MPa).
- The inlet water must be potable and free of contaminants.
- Requires inline water filter within your water specifications.
- The machine is supplied with a 3/8 NPT connection.

- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through, Especially for new installations.
- Connect the hose to the inlet valve of the machine. Make sure a sealing washer is fitted.
- Turn on water and check for leaks.

OPERATING THE APPLIANCE FOR THE FIRSTTIME

- Check that all installation procedures have been carried out.
- Ensure water valve is on. Plug machine into an appropriate electrical supply and switch on the rocker switch under the machine. Follow the instructions on the screen.

