



# MM00159 INSTRUCTION MANUAL

ASSEMBLY • INSTALLATION • MAINTENANCE • SAFETY



MADE TO FIT  
**39" SWING\***

**M&M SALES  
ENTERPRISES, INC.**

1300 Synergy Ct,  
Dubuque, IA 52002  
877-242-0154  
[mandmsalesinc.com](http://mandmsalesinc.com)

## Big Top Tent Swing Accessory

MADE FOR 39" SWING\*

\*Pairs perfectly with any 39" swing offered by M&M Sales Enterprises, Inc. Explore selection at: [mandmsalesinc.com](http://mandmsalesinc.com)

**PLEASE READ ALL INSTRUCTIONS BEFORE SET UP OR PUT AWAY OF YOUR BIG TOP TENT SWING ACCESSORY.**

This product comes in its folded/coiled form for packaging convenience. The box packaging should be kept for convenient storage of play tent when not in use.

**BEFORE YOU START: OBSERVING THE FOLLOWING STATEMENTS AND WARNINGS REDUCES THE LIKELIHOOD OF SERIOUS OR FATAL INJURY.**

**CAUTION: THIS STRUCTURE USES A SPRING STEEL LOOP THAT WILL POP OPEN QUICKLY!**

- Small children should never be allowed to fold or unfold the structure without adult supervision.
- Do not place heavy objects on this product.
- Discard if steel loop is broken or if this product is damaged.
- If your tent does not hang square or if you notice the wire seam is bowing/curving, you may experience difficulty folding and storing your product. Curving seam may be the result of a twisted inner spring loop. To correct, firmly run your fingers around the wire edge (green binding) of the product and where the spring loop is located. When you feel a twist or kink place hands on either side of it and pedal them backwards or forwards to untwist the loop and allow easier opening and folding.
- To maintain the vibrant coloring and durability of the tents material this product should not be left in direct sunlight or outdoors for extended periods of time.



**WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.**

This tent meets the flammability requirements of CPAI-84. This product is fire resistant only. This fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective. Spot clean only.

**ASSEMBLY WARNING:** To prevent serious injury, children must not use the swing until properly installed. Do not use swing if any damage or deterioration is detected or parts are missing. Contact point of purchase retailer or M&M Sales Enterprises, Inc. Never substitute parts. Please keep instructions for future reference

### ASSEMBLY INSTRUCTIONS

1. Remove the Big Top Tent Swing Accessory from the box. Use caution as the tent will un-fold and pop open on its own. (This product comes in its folded/coiled form for packaging and storage convenience.) Once it has opened, open and lay flat as pictured below in step 1. Next, lay your 39" swing of choice face-up on a flat surface. Pull the four hook/loop straps toward the center.

#### FOR SINGLE POINT HANGING:

2. Feed swing ropes through the cinched tent base toward the opening at top of the tent.
3. Pull swing ropes all the way through.
4. Next, feed the attached tent buckle through both carabiners at the end of each rope. Buckle and tighten.
5. Finished **SINGLE POINT HUNG** Big Top Tent Swing Accessory should look as pictured in step 5. Ropes should not cross each other above swing. Hang and enjoy.



#### FOR DUAL POINT HANGING:

2. Feed swing ropes through the two side hole openings along the green wire frame toward the top of the tent. Clip the carabiners at the end of the swing ropes into a hanging structure or wrap around a branch/beam and clip.
3. Next, take and wrap the buckle around the play structure beam/branch. Buckle and tighten.
4. Finished **DUAL POINT HUNG** Big Top Tent Swing Accessory should look as pictured in step 5. Ropes should not cross each other above swing. Hang and enjoy.

