

M&M

SPIN KIT

MM00168

CONTENTS

Preassembled for your safety and convenience. Do not use tree strap without Cyclone Spinner attached to it.

- (1) 10 ft. (120 in.) tree strap
- (1) Cyclone™ 360° Swing Spinner

TREE STRAP

- Easily adjustable 10 ft. strap length anchors to any identifiably safe tree, beam or play structure
- Hang any swing safely while protecting your tree – wide strap minimizes damage to trees and is safer, stronger, and easier to use than rope
- Tree strap made of 1-7/8" non-stretch polyester 5-panel 100% polyester webbing – resistant to abrasion, water, and contains UV inhibitors that prevent sunlight decay
- Loop ends are securely doubled over for more durable connection points with swing hardware
- Box-X pattern sewn into strap to ensure uniform stitch length and strength


CYCLONE™ 360° SWING SPINNER

- Add another dimension of fun to any single point attachment hanging swing (web, tire, or disc), hammock or chair
- Spins continuously in either clockwise or counter-clockwise direction



INSTALLATION INSTRUCTIONS

1. Find your spot. Locate beam, playground, or healthy horizontal tree branch (branch should be a minimum 8" in diameter). **WARNING:** Avoid any strap edges or abrasive contact with strap to maximize life and function of strap. Area surrounding hanging site should be clear of obstacles and over flat, soft terrain.
2. Wrap tree strap around healthy sturdy branch or other object and pass Cyclone Spinner end through the other loop end. The excess strap should hang from the underside of the branch. (A)
3. To adjust height of strap continue to wrap strap around tree branch and through the loop multiple times until desire length is achieved (B) or create loop with center of strap and pull both ends through (C).
4. Pull strap tightly to secure against branch.
5. Attach your swing securely to Cyclone Spinner using optional carabiner or by attaching swing hanging hardware directly to the lower portion of spinner.

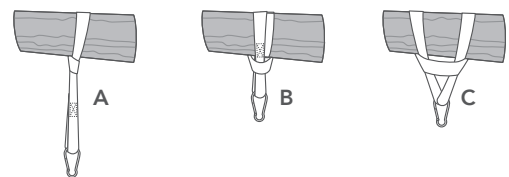

IMPORTANT:

- Check your Spin Kit frequently for signs of wear. If any part of the kit is worn down, do not use.
- Tree strap safely supports maximum weight of 800 lbs.



INSPIRING *outdoor* ADVENTURES

JOIN OUR MISSION TO INSPIRE CHILDREN
TO GET UP, GET OUT, AND PLAY!