

Electric Long Skateboard

Comply with safety standards

User Manual

Model: ONWAY PIRATE - C



SERIAL NO.:

Thank you for purchasing ONWAY electric skateboard.

If you have any questions, please contact us for help before you decide to return the skateboard.




PREPARTION

1. Check the switch of the handle/skateboard in place, as the diagram:

- A. Make sure that the Skateboard Power switch in off state.
- B. Put the switch of "slow/fast" model to "Slow" mode on the handle.
- C. Ensure the remote control was fully charged.

2. The Skateboard should be fully charged before first use.

REMOTE CONTROL DIAGRAM

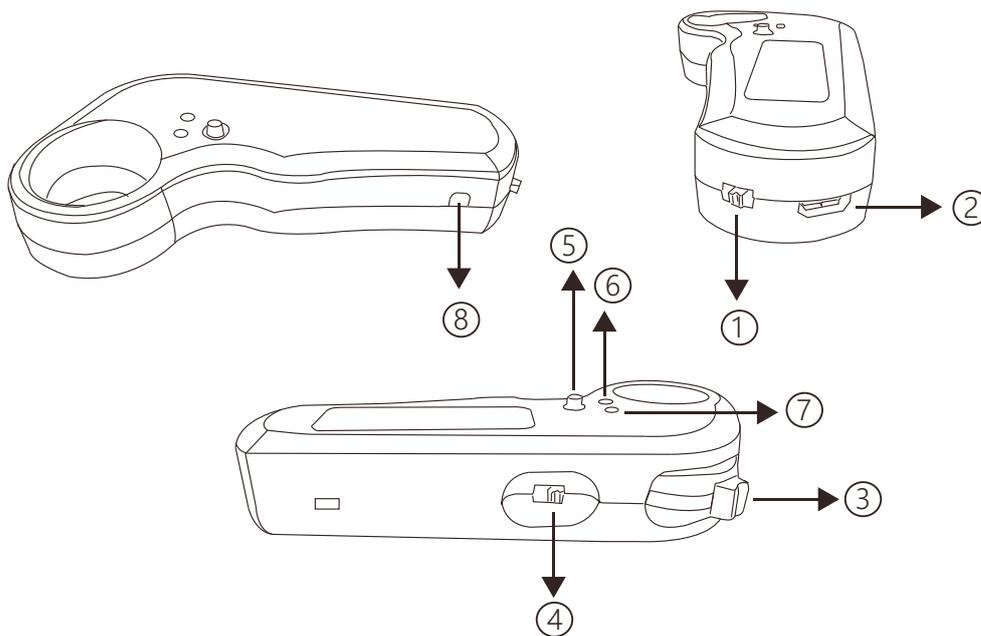

- 1. Power Switch
- 2. MINI USB Charging Port
- 3. Start/Brake switch
- 4. Speed switch (Slow/Fast)
- 5. Direction switch (Forward/Backward Key)
- 6. Backward Indicator/Charging Indicator
- 7. Forward Indicator
- 8. Reset

When the handle can't use or invalid, click on "Reset" to make it work (ensure the remote control **has power**).

POWER INDICATOR

The remote control is built-in Li-polymer battery, when it's low power the red indicator will flash and with "Beep" alarm, you should turn off the skateboard and charge the remote control.


Please stop use the remote control when it's low charge.

OPERATION


Start: When Slide "power switch", the "Forward indicator" will be light (red indicator).

FORWARD & BACKWARD MODE:

1.If want move forward, push the " start/brake switch" and hold on the position,the skateboard will keep moving forward; loosen your grip,the speed will slow down. Pull the back of key,it will be brake.

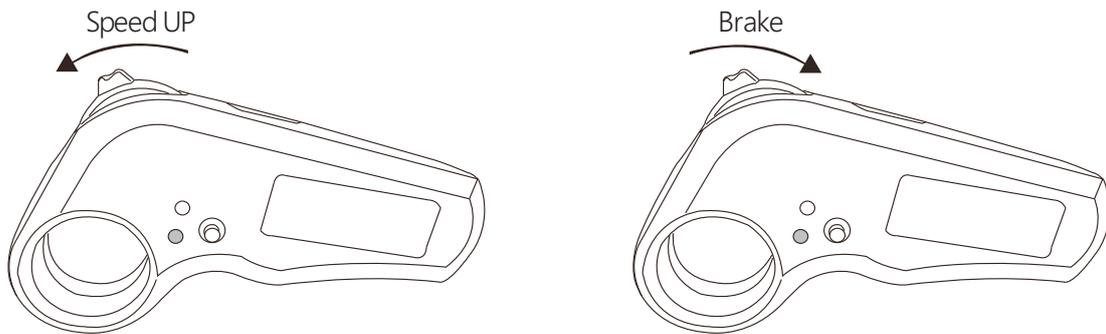


2.Switch the driving model to "Backward indicator/Charging indicator",do the same operation as forward step.

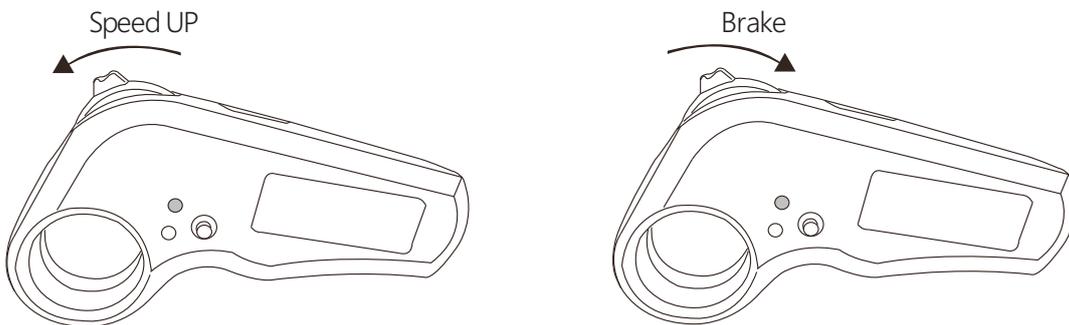

SLOW & FAST MODE:

1.Before start the skateboard, the switch key is on the right side,it's the "SLOW" mode(beginner model),we strongly suggest beginner keep use of beginner model.

2.Switch key to right side, it will be in "FAST" mode (Ace model).

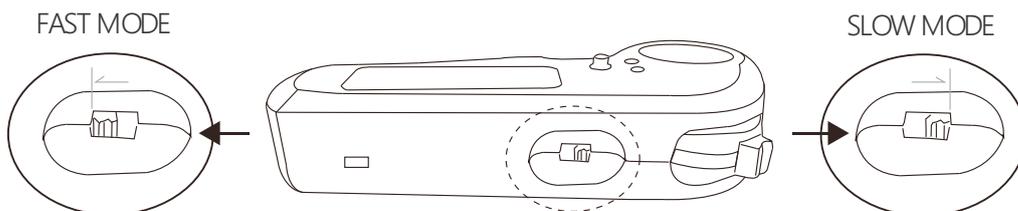

CHARGER

Skateboard is an external charge. First the charger plug into the skateboard's charging port. Charging port is located in the battery compartment side(front inserted to open the slide waterproof plug) and then the charger plug into the power source.

Charger LED is red- the battery is charging. Charger LED is green-charging complete. Avoid long-term without electricity or battery is fully charged. In order to optimize the performance of slide, should be charged every month on one charge (3 hours).

Please use electric skateboard standard charger. Not using a mobile phone or other charging charger.

BATTERY

1. Please use the matched lithium battery.
2. Please don't place the battery under fire, water or environment of extreme temperature.
3. Please don't use the impacted or aging battery.
4. Please don't put the charging batteries in easily ignored places.
5. Please stop charge when the batteries are under abnormal conditions such as heating.

Specification	Size Weight	35.5*10*5 Inch 18 lbs
Product	Load	Up to 265 lbs
Battery	Type Capacity Range	Lithium-ion 4.4A 9-11 miles
Motor	Max Power	300W Dual Hub-Motor
Charger	Input Voltage Output Current Charge Time	AC110~240V 2A 3-4 Hours
Control Model	Remote	2.4G RF Technology
Speed	Fast/Slow	Adjust By Switch
Wheel	Type Size	PU 72mm
Packing box	Size	40*14*6 Inch