


Product Specification

Polymer Power Bank
Victor K7

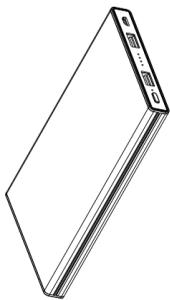

Before using this product, please read this manual carefully and keep it as a reference.

KMASHI Qualcomm Quick Charge 3.0 20000mAh Portable Charger

Product Features

- Compact: Polymer Electric Core, Lightweight & Small Size
- Explosion-proof: Soft Aluminum Polymer Electric Core
- Safety Protection: Equipped with Intelligent Protection Core, which has over-charge, over-discharge, short circuit, and hardware/software multi-level protection.
- Wide Range of Application: This device supports QC2.0 and QC3.0 and can be used to charge digital products with 5V input voltage
- Performance Standard: Meets GB494 3.1-2-11 & GB5296.2-2008 & GB/T18287-2000 Standards.

Specification

Model	Victor K7
Capacity	20000mAh/74Wh
Input	5V 2A/9V 2A/12V 1.5A
Output	Out1: 5V 2.4A
	Out2: 3.6-6.5V 2.4A
	6.5-9V 2A
	9-12V 1.5A
Size	160*100*15mm 6.3*3.94*0.3in
Weight	15.8 Oz
Power Level Display	4 Lights On: 75%-100%
	3 Lights On: 50%-75%
Display	2 Lights On: 25%-50%
	1 Light On: 0%-25%



Illustration

- ① Power Button
- ② QC3.0 Indicator
- ③ Output 2: QC3.0 (Compatible with QC2.0)
- ④ Power level indicator
- ⑤ Output 1
- ⑥ Input

Instructions:

- How to charge the power bank.
 - Plug the micro USB port to the power bank (IN) and connect the USB port to the AC charger to start charging the power bank.
- When the LED light is flashing, this indicates that the device is charging. When the LED light is steadily on, this indicates full charge.
 - This power bank supports QC3.0 (Also compatible with QC2.0) and can only charge digital devices that have input voltage of 5V.
- Please use an appropriate USB cable to charge your devices, and press the power button to start charging.
- When using Output 2 for QC3.0/QC2.0, the USB charge cable must be used.

Operation Guide:

- After the power bank has run out of power, please fully charge. It is recommended to charge this power bank at least once every three months.
- When the power bank is used to recharge your mobile phone or other devices, please check the following tips to avoid possible issues.
 - Check if the plug has been properly inserted in the power bank and your device.
 - If it does not charge, try replacing your original charge cable.
 - If problems persist, please contact customer service.

When the power bank is not charging, please check for these possible causes.

- If the wall charger has power.
- If your USB charger output voltage specification is between 4.75V to 5.25V.
- If your power bank is already fully charged.
- If all of the plugs are properly inserted.
- Try replacing your original USB charge cable.
- If problems persist, please contact customer service.

Warm Tips:

- Please keep the power bank dry. Do not place the power bank near liquids or heat including water and fire.
- Please do not disassemble the power bank without authorization. Do not discard of this power bank into the trash. Properly dispose of this and other batteries.
- Please keep this product away from children.
- Please disconnect the power charger and USB cables from this power bank when not in use.
- Please do not cover the power bank with any products including paper or cloth, which may prevent proper cooling.
- If you feel that this power bank is giving off a strange smell, is noisy, or overheating, please place it in a safe location out of reach of children and try it again after two hours.
- If you have any problem while using this power bank, please feel free to contact us by support@kmashi.com, we'll respond you in 24 hours.