

# UNIVERSAL LAUNCH™

Mount cell phone in top cradle by tightening the back knob.



Use side wingnut to adjust viewing angle.



Insert power adapter into base and plug into a power source to charge.


**Note:** You may also use your Universal Launch while it is plugged in for charging.

Install top cell phone cradle with supplied bolt and wingnut

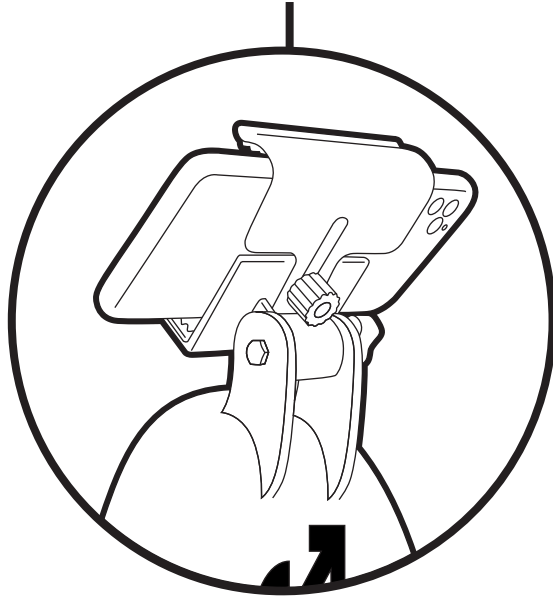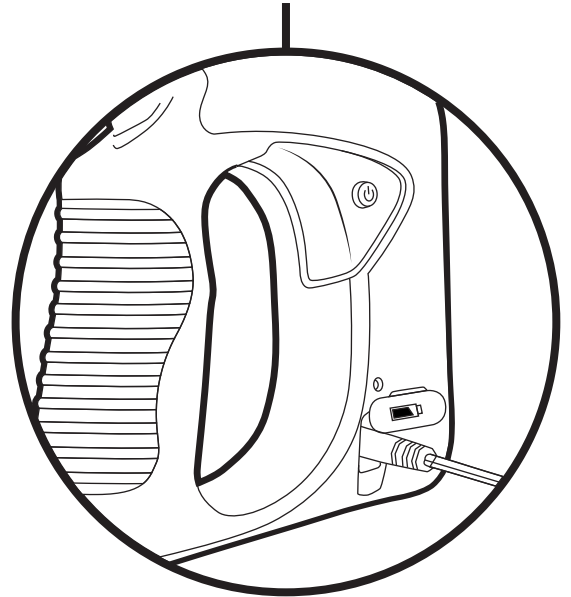


**Stroke Length button**  
Press rocker button to increase or decrease stroke length.

**Stroke Speed button**  
Press rocker button to increase or decrease stroke speed.

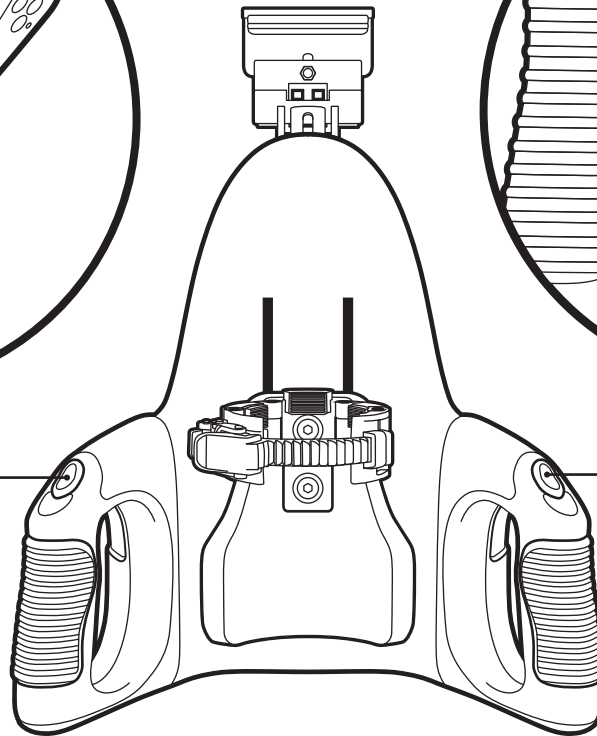

## Universal Ratcheting System

Slide your product through the gripped circular opening (there is a small latch on the side that can be pressed to release the belt if necessary). Once in a safe, desired position, use the large latch to tighten up the grip. Lift the large latch from its left side to ratchet the strap in snugly, taking care not to overtighten and possibly damage your Universal Launch or your stroker.

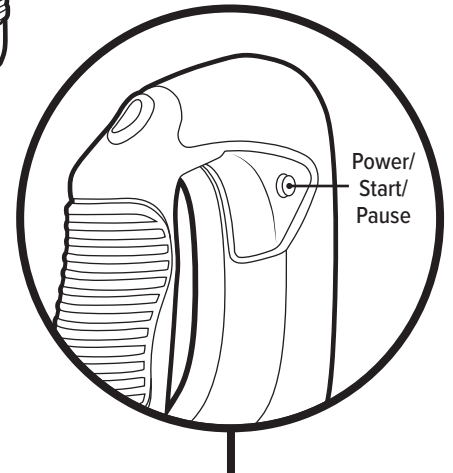

## Power/Start/Pause button

**Power ON** - Press and hold until device becomes active (about 3 sec.)

**Start/Pause** - Once Device is active (lights begin flashing), press once to start. Press again at any time during use to pause movement.

**Power OFF** - Press and hold button to turn off Universal Launch (about 4 sec.)

**Stroke Position**

## Stroke Position button

Press button on side of left grip to adjust position of stroke - base, shaft, or tip

**Note:** If you've set stroke length to the max setting, the stroke position will not change

