




Kontrol Kube®

Kontrol Kube

TS

TopSider™

Kontrol Kube

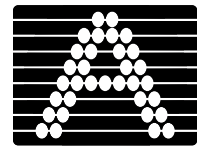

ABACUS™

Mobile Containment Systems


SETUP INSTRUCTIONS

READ THOROUGHLY BEFORE
SETUP AND USE



Fiberlock Technologies, Inc.
150 Dascomb Rd.
Andover MA 01810
www.fiberlock.com | 800.342.3755

GENERAL SETUP INSTRUCTIONS

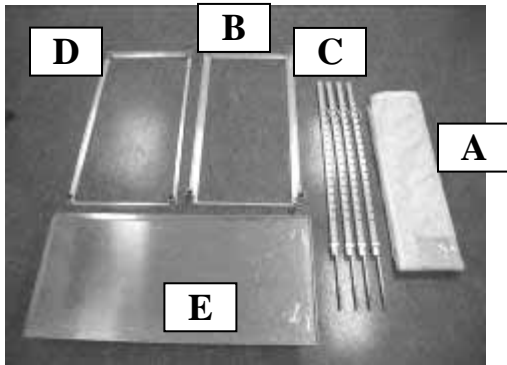

Components:


- A Vinyl Enclosure
- B Bottom Frame
- C Extension Poles (4)
- D Top Frame
- E Wheel Base

Check to ensure all components are present and undamaged.


Unfold vinyl enclosure (A) on floor



Locate bottom frame (B) with square sockets in corners; place on floor with corner post sockets facing up.

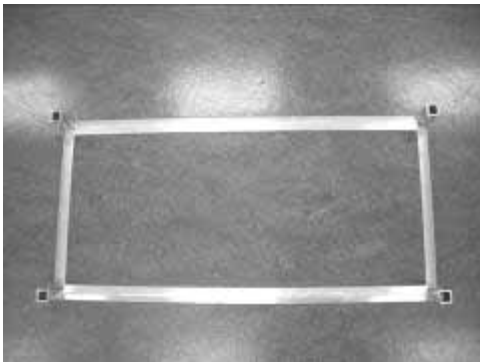

Unhook holding pins in corner sockets and remove from bottom frame.

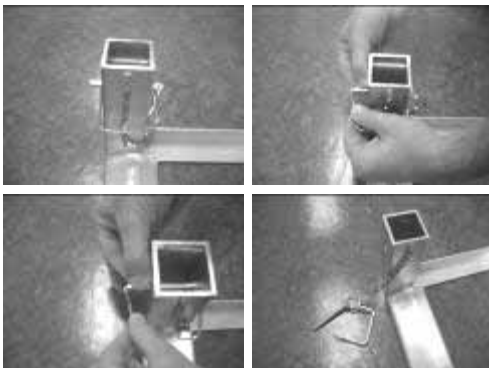



Unzip enclosure and lay bottom flat on floor. Bottom is only side without any openings. Place bottom frame inside enclosure.



Insert extension poles (C) into corner sockets of bottom frame. Make sure handles on extension poles face inward.



Insert pin through corner socket and extension pole. Lock in place with hook.



Place top frame (D) over extension poles. Pull corner rubber socket over nipple on each extension pole.



Pull vinyl enclosure over frame assembly.



Place wheel base (E) on floor. **Lock caster wheels.** Hold assembled unit by corners and place on wheel base.

► FOR OPERATIONS & MAINTENANCE USE, GO TO NEXT PAGE

► FOR ANTEROOM ISOLATION USE, GO TO PAGE 6 (ABACUS ONLY)

OPERATIONS & MAINTENANCE SETUP



Unlock caster wheels. Move unit to desired location. **LOCK CASTER WHEELS.**



Step inside unit. Raise extension poles by lifting one or two notches at a time, alternating sides until unit is at desired height. For best results, unit should be fully extended. Slide down locking collar.



If desired, place ladder inside unit on base. Ensure ladder is stable prior to use. ABACUS unit will accept ladders up to 6' tall; TopSider unit will accept ladders up to 8' tall. Close all zippers and Velcro® seams.



Once inside unit, unzip ceiling access panel for access to overhead area.

ANTEROOM SETUP (ABACUS ONLY)



Unlock caster wheels. Move unit to desired location. **LOCK CASTER WHEELS.**



Hold unit at corners and remove from wheel base. Place wide side of unit flush against door of the room to be isolated. Place air handling equipment against wall, with intake manifold facing the exhaust porthole of unit.



Step inside unit. Raise extension poles by lifting one or two notches at a time, alternating sides until unit is at desired height. For best results, unit should be fully extended. Slide down locking collar.



Open access panels for porthole(s) to be used. Close porthole(s) not to be used.



Step out of unit. Use tape or adhesive to hold flanges against wall. Flanges are located on both sides and top end of unit.



Slide end of exhaust porthole over intake manifold of air handling equipment. Press together any excess ensuring the Velcro® seam comes together. If necessary, tape porthole directly to intake manifold of air handling equipment.



Close all openings and doors on unit. Turn on air handling equipment to create negative pressure in unit. If pressure created in unit is too great, open panel on side door to relieve pressure. Screen can then also be opened to pass objects through.



To open main entry doors, unzip side zippers to desired height. Roll door up; use Velcro® strips located above door to hold the roll securely. Be sure to close door immediately after passing through, and prior to opening the opposite door panel to prevent cross contamination.

FOR ADDITIONAL ASSISTANCE, CONTACT
FIBERLOCK AT 800-342-3755

CAUTION!

- If using a ladder inside of the Kontrol Kube, be certain the ladder is fully opened and on level footing.
- Do not stand on top step of ladder.
- Be sure the Kontrol Kube is on level, flat surface when in use.
- Remember to lock all wheels in place prior to use.
- Use care when securing extension arms.
- Temperature in the Kontrol Kube can get very hot and uncomfortable. Be sure HEPA port is open and functioning to provide proper ventilation.
- Always clean unit after each use.
- Do not store unit at temperatures above 120 degrees F.
- The Kontrol Kube not designed or recommended for outdoor use.
- Use caution when entering and exiting unit.
- Inside surface may be slippery when wet - use caution.

The Kontrol Kube must be used only as part of a comprehensive airborne contaminant control program. This program must include staff training in the set-up and use of the Kontrol Kube and related equipment. Unit should always be set up in advance in a mock situation to determine that the Kontrol Kube is performing to expectations, and that staff understands proper use.