


### 3. Mono

Set up the installation when only one output from the mixer.

1. Connect the mixer output to the transmitter input. ( Either LEFT/CH.1 or RIGHT/CH.2 )
2. Set SIEM-111T to Mix/Mono mode. ( See 6-1 )

NOTE: Stereo or Mix/Mono mode of SIEM-111R will be no effect in this setup.

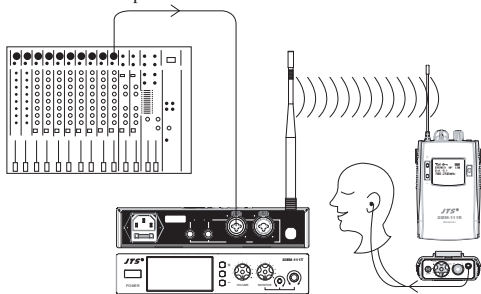


### 7-2 Loop Out Application

#### 1. Stereo for Multiple Systems

Make use of the loop out connectors to deliver one stereo signal from the mixer to multiple SIEM-111T.


1. Connect the mixer outputs to inputs of the first transmitter.
2. Connect loop out connectors of the first transmitter to the second one.
3. Connect subsequent systems in the same way.

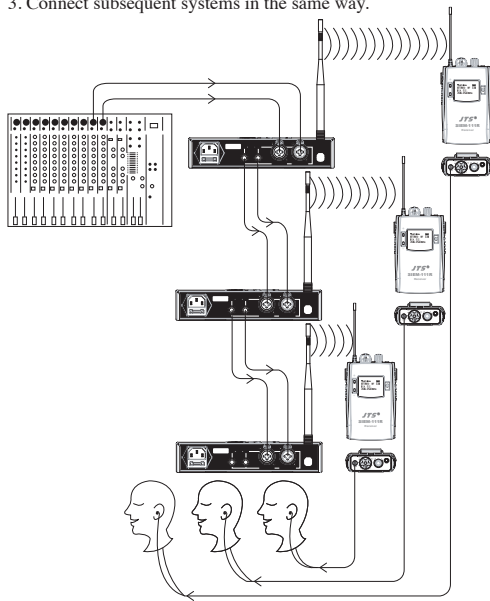

## 2.Mix For Multiple Systems

This installation enables each performer to create their own mix.

1. Send the band mix to input (Right / CH.2) of the first transmitter.
2. Connect loop out connector (CH.2) of the first transmitter to input (Right/CH.2) of the second transmitter.
3. Connect individual solo mix to input (Left/CH.1) of each performer's transmitter.

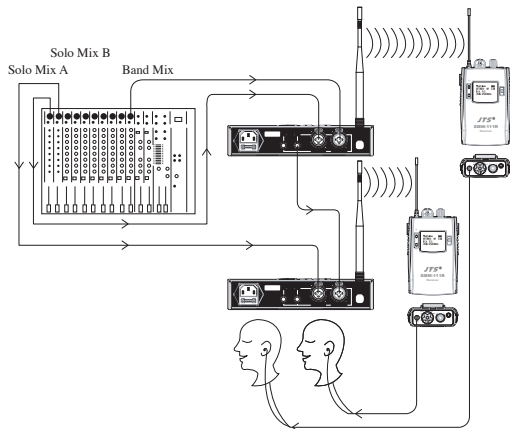

## 8. Recommendations

1. In order to achieve the optimum reception condition and also extend the operating distance, please leave an open space between the receiver and transmitter.
2. Keep the devices away from the metal objects or any interference sources, at least 50 cm.
3. Remove batteries from the battery compartment when the receiver will not be used for long time.
4. When you need to replace the batteries, please replace both batteries at the same time with new ones.