

NYA-EVO[®]

GO FURTHER




FJORD 36

USER GUIDE

- get the most out of your gear -

Access

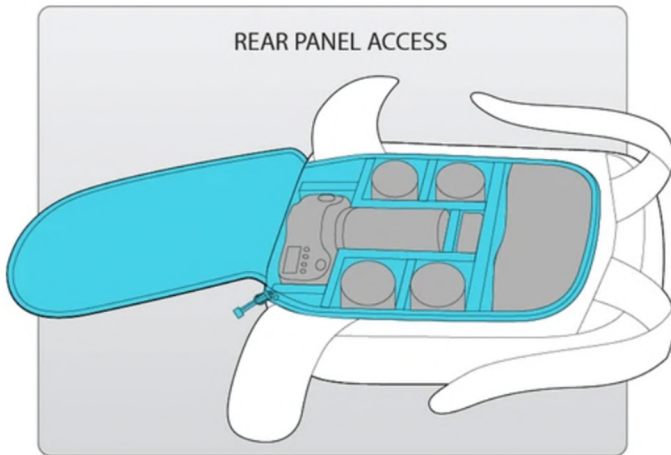

REAR PANEL ACCESS

Release shoulder harness and lay the bag down on its front. Bend the shoulder straps away from the zip and open main zipper.

BENEFIT #1: This design allows equipment to be strapped to the front and top of the backpack and still provide full accessibility to the main compartment.

BENEFIT #2: This design will prevent the rear panel from getting dirty as it will not come in contact with the ground.



FRONT POCKET ACCESS


Organize your alpine or travel gear that need to be accessed fast and frequently.



TOP ACCESS

Extra gear can be placed on top of the removable camera insert.

External Organization

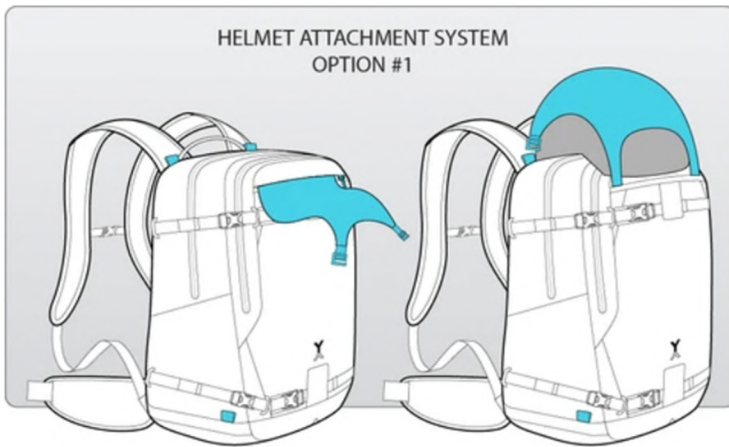


HELMET ATTACHMENT SYSTEM OPTION #1

Located inside zip pocket on upper front panel. Open zipper pocket and take out the helmet attachment fabric panel. Place the helmet on the top of the bag and connect the aluminum toggle attached to the fabric panel through the webbing loops located at the upper rear of the backpack.




EXPANDABLE SIDE POCKETS

Located on both sides of the backpack. Designed to fit most water bottles or items that need to be accessed quickly. Elastic bungee cord lock closure prevents small items falling out.

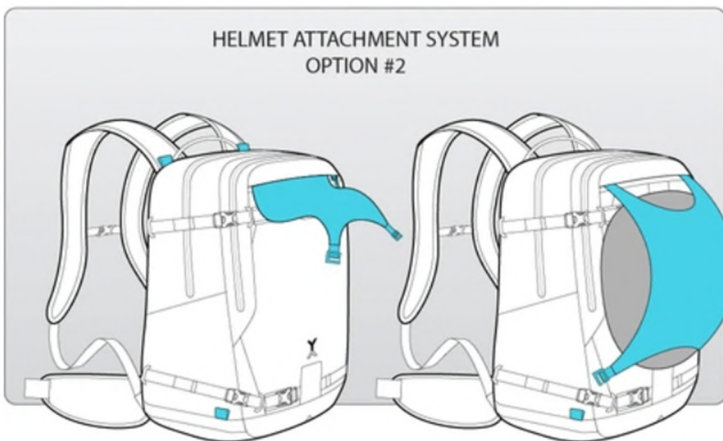

HELMET ATTACHMENT SYSTEM OPTION #2

Located inside zip pocket on upper front panel. Open zipper pocket and take out the helmet attachment fabric panel. Place the helmet on the front of the bag and connect the aluminum toggle attached to the fabric panel through the webbing loops located at the lower front of the backpack.

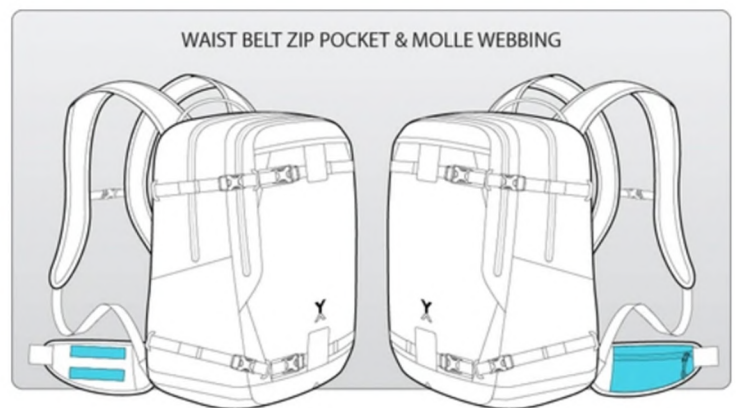

WAIST BELT ZIP POCKET & MOLLE WEBBING

Zipper pocket for small items on the left side. Molle webbing for attachment of external pouches or accessories on the right side.

Internal Organization

LAPTOP SLEEVE



LAPTOP SLEEVE

Location: inside front pocket. Fits most 15 inch laptops. Foam padded and with Velcro® webbing closure. The sleeve serves also to store the hydration system.

TRAVEL / TOOL ORGANIZER




TRAVEL / ALPINE GEAR ORGANIZER

Location: inside front pocket. Snap button closure. Snap button can be used to divide the upper edge in to to hold narrow items in place. Suited to use as an alpine or avalanche equipment sleeve. Suited to store travel book or other travel accessories.

MULTIPLE MESH ZIPPER POUCHES

Location pocket #1: top main compartment.
Location pocket #2: top front pocket.
Pocket #1 comes with inside clip for securing keys.


HYDRATION SYSTEM

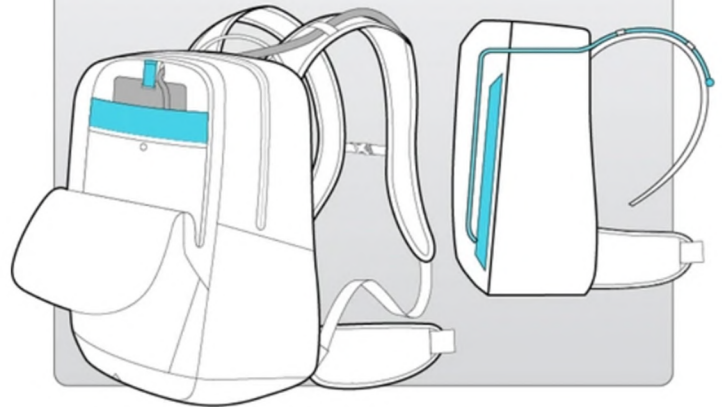

HYDRATION SYSTEM SLEEVE

Location: inside front pocket. Velcro loop closure provided at the top to hold the hydration system upwards. Hydration tube need to be routed through an opening at the top, pulled through the main compartment, exit the backpack

ORGANIZATIONAL POCKETS FOR SMALL ACCESSORIES

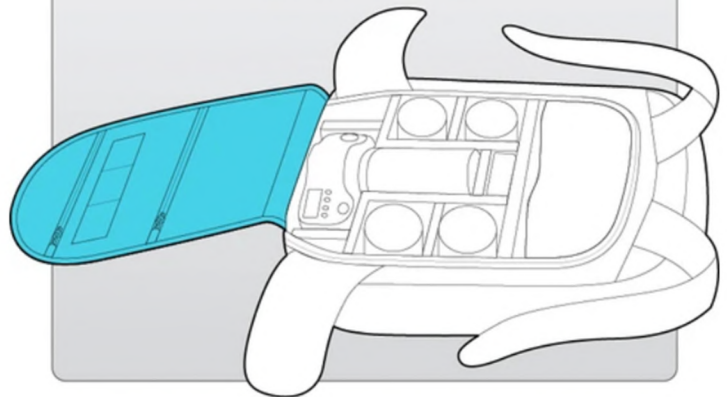


ORGANIZATIONAL POCKETS FOR SMALL ACCESSORIES

Location: main compartment inside rear panel. Two zipper pockets made of a see-through and highly water-resistant material for storage of memory cards, filters or other small accessories.


MULTIPLE MESH ZIPPER POUCHES



Tripod Carry

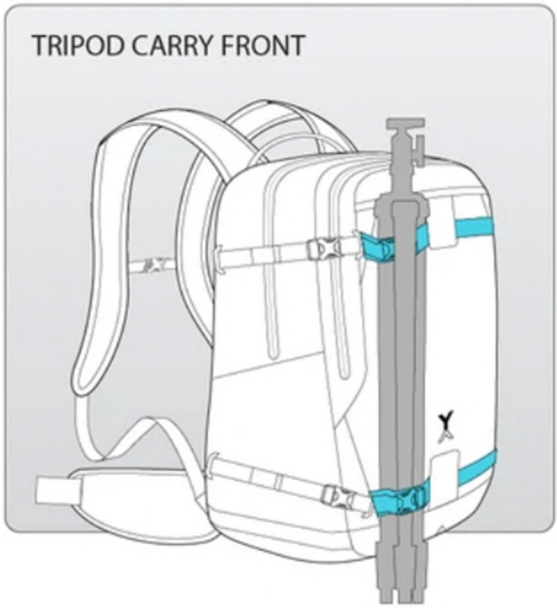


How to Attach Your Gear

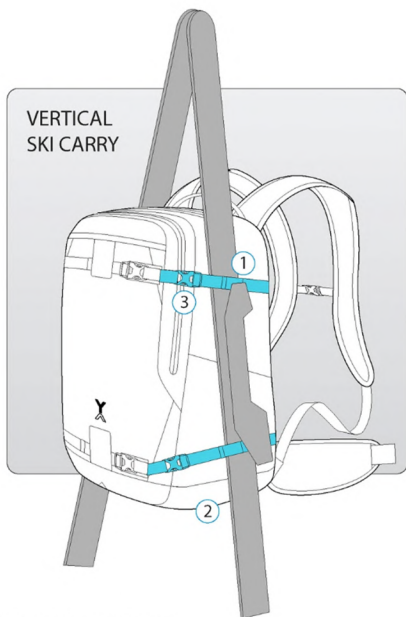


VERTICAL SKI CARRY

1. Open the top side release buckle strap.
2. Insert the ski through the bottom buckle strap.
3. Close the top side release buckle strap and tighten.

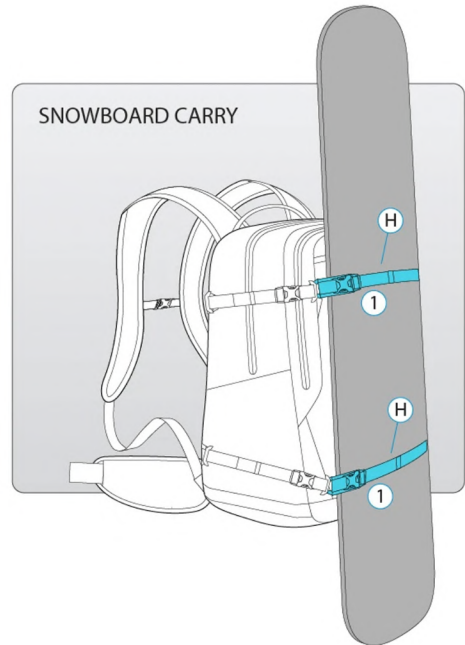

SNOWBOARD / SNOWSHOE CARRY

- H. Un-thread the straps from the Hypalon® loops in the center of the pack.
- I. Wrap the straps around the snowboard, close the side release buckles and tighten.

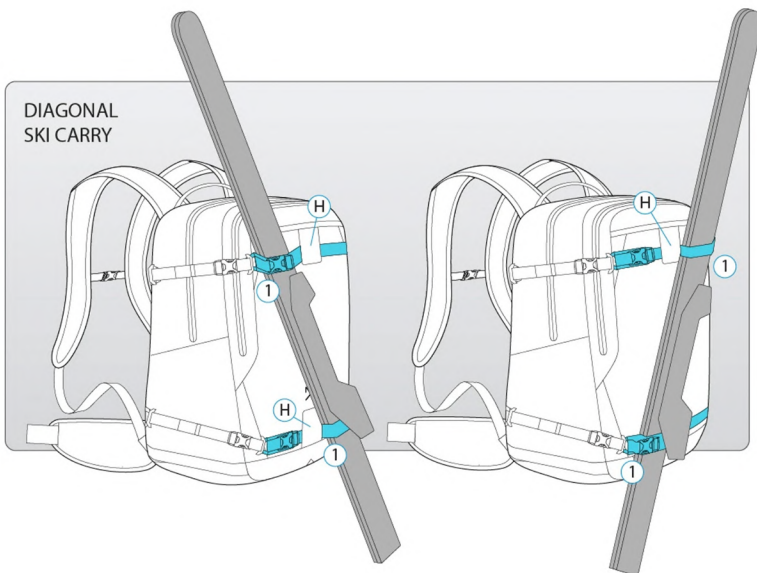

DIAGONAL SKI CARRY


- I. Open the side release buckle straps, loop around the skis, close and tighten.
- H. Make sure the straps go through the Hypalon® loops to ensure secure attachment.

How to Attach Your Gear




ICE AXE CARRY OPTION #1

1. Slide the ice axe through the lower front panel sleeve.
2. Loop the lower front strap around the ice axe, close and tighten.
3. Release the bungee cord from the hook, loop around the ice axe, re-attach bungee cord to the hook and tighten.

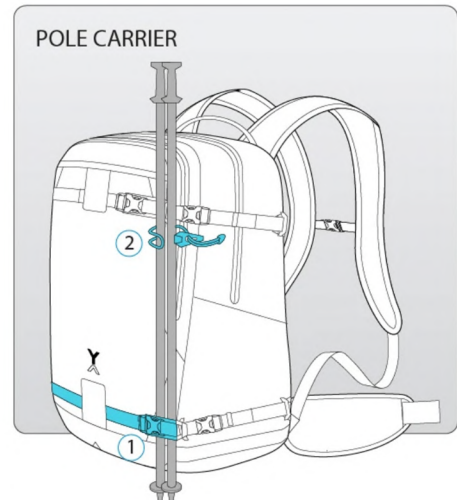


POLE CARRIER

1. Loop the lower front strap around the poles, close and tighten.
2. Release the bungee cord from the hook, loop around the poles, re-attach bungee cord to the hook and tighten.

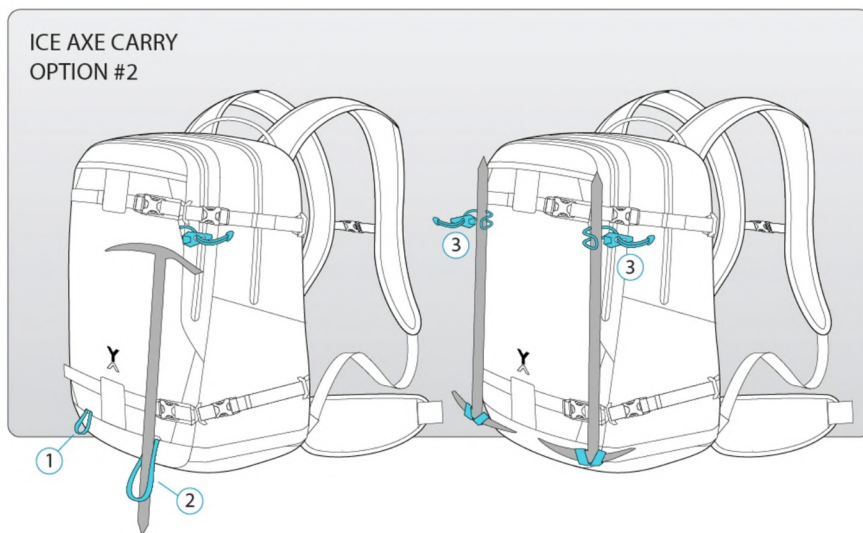

ICE AXE CARRY OPTION #2


1. Pull the lower ice axe webbing loop from the pouch.
2. Slide the ice axe through the webbing loop.
3. Swing the ice axe upwards and fix the top with the bungee cord.

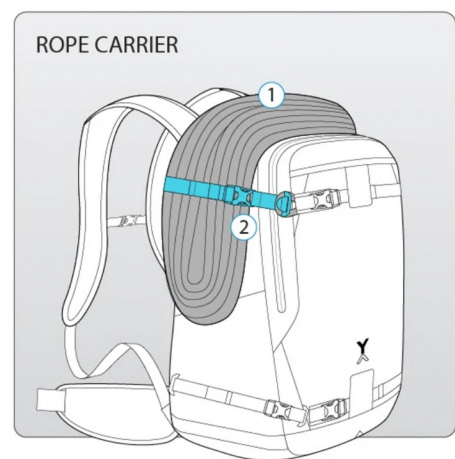

ROPE CARRIER

1. Place the rope onto the top panel of the pack and open the upper side compression straps.
2. Loop the upper side compression straps around the rope, close the buckle and tighten.

Fine-tuning Your Pack

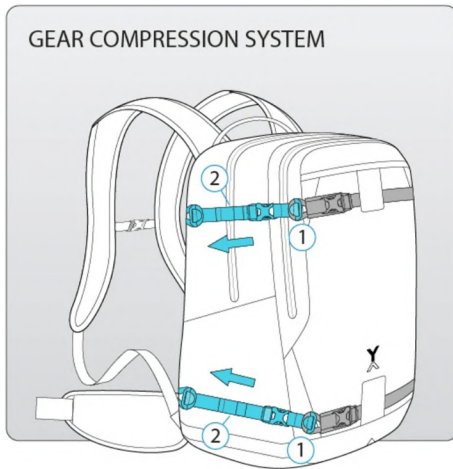


GEAR COMPRESSION SYSTEM

1. Make sure the detachable side webbing straps (shown in blue) are fixed to the front gear attachment straps (shown in grey).
2. Pull the excess webbing of the detachable side webbing straps to tighten and compress the backpack content with attached gear tightly onto the aluminum pack frame.



HIDE ICE-AXE ATTACHMENTS

1. The upper bungee cord with plastic hook can be hidden behind the front panel when not in use.
2. The lower long webbing loop can be hidden behind the front panel when not in use.

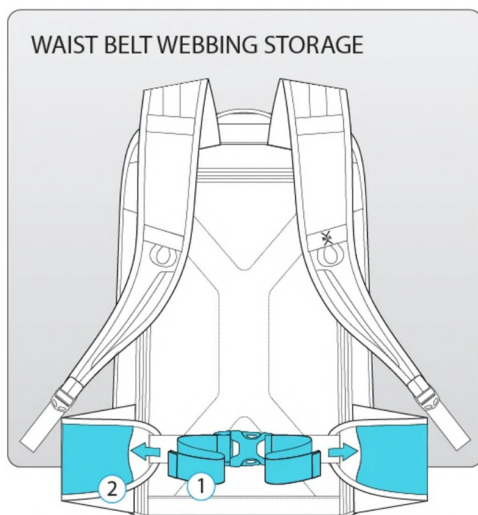

WAIST BELT EXCESS WEBBING STORAGE

1. Tighten the belt around your waist and retrieve the webbing end.
2. Push the webbing end into a pouch sewn on top of the waist belt until there is no excess webbing left.