

尺寸：11*6.5cm

70%黑

**HOW TO
REPLACE
INNER SPRING:**

1. Unfasten the tamping base, baffle, and outer spring from the handle. Next, remove the Core Sleeve from the handle.

*If the Core Sleeve still stays behind inside the handle, try to fasten the tamping base and unfasten the Core Sleeve together by turning counterclockwise.

2. Hold and press the top stud and bottom stud, remove the locking pin.

3. Replace the spring with your preference.

**WHAT'S
IN THE BOX:**


- 1 - Spring Loaded Tamper
- 1 - Tamper Stand
- 1 - 30lb Spring
- 1 - 25lb Spring (Already installed)
- 1 - 15lb Spring



100%黑



Here's how you can connect with us.

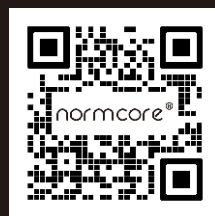

www.normcorewares.com

hello@normcorewares.com



[@normcorewares](https://www.instagram.com/normcorewares)