


# Signet


## LOADING INSTRUCTIONS

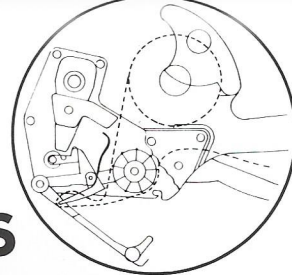

**1.**


Open left side of label holder by turning upwards. Tear off outer wrap of labels. Place label roll on hub, close label holder, and open bottom door. Smooth out end of label roll and insert through opening until it extends below labeler.

*(If label stock catches on drive wheel pins, press handles a couple of times as you insert labels.)*

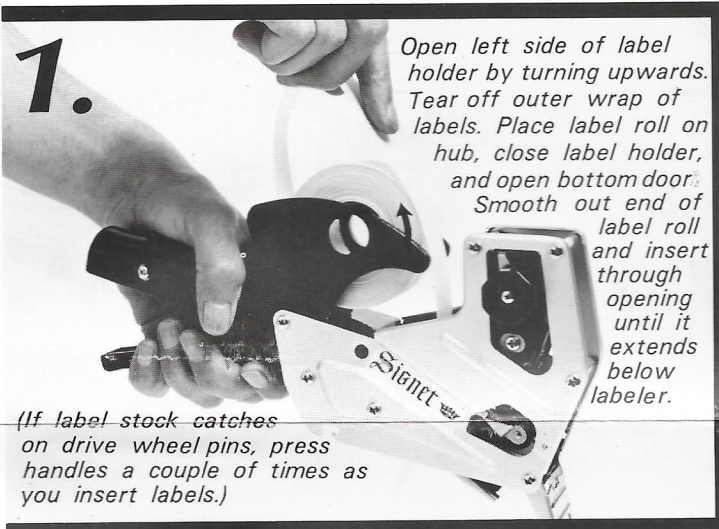

**2.**


Insert labels through opening in printing plate as shown.

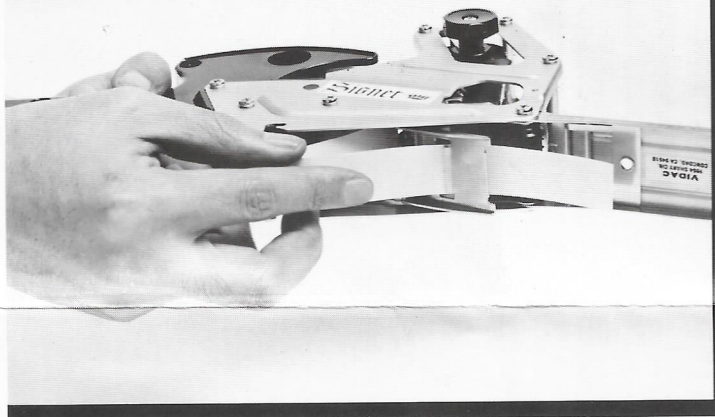

**3.**


Pull labels backwards as far as end of rear door. Be sure to keep labels centered and pins in label stock holes as you close door.

*(If any labels are loose, please remove them.)*

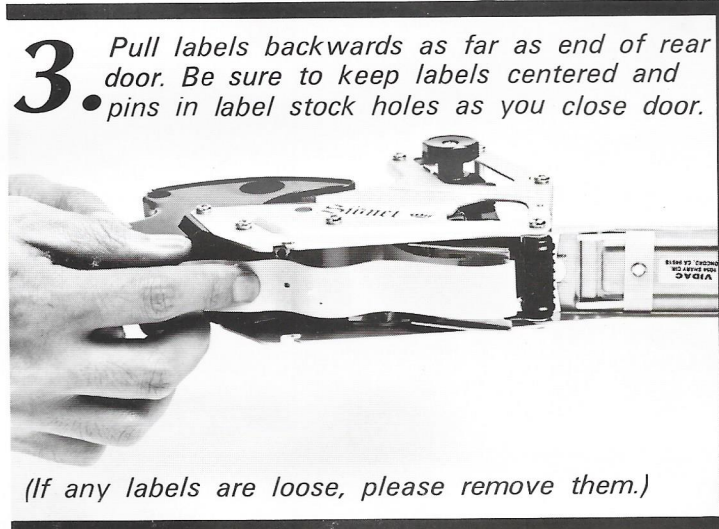

**4.**

Operate labeler a couple of times until you see pins engage label stock. (Through hole in bottom door.) Labeler is ready for operation.

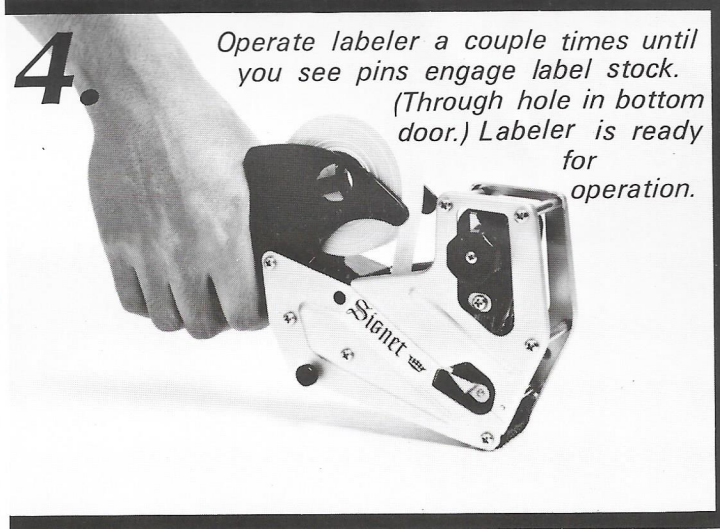

### TO REPLACE INK ROLLER

Pull ink roller holder toward you, turning it upward with thumb and forefinger. Turn labeler sideways. Ink roller will fall out. Place new ink roller over pin and replace holder. CAUTION: Re-inking of roller may ruin print bands, and voids warranty. When print becomes light, replace with new ink roller, available from your Signet distributor.

