

NEO Features / Totals

| Features | HS2128E | HS2128 | HS2064E | HS2064 | HS2032 | HS2016 |
|---|---------|--------|---------|--------|--------|--------|
| Total Zone Count | 128 | 128 | 64 | 64 | 32 | 16 |
| • Hardwired zones | 128 | 128 | 64 | 64 | 32 | 16 |
| • Wireless zones | 128 | 128 | 64 | 64 | 32 | 16 |
| • Onboard zone inputs | 8 | 8 | 8 | 8 | 8 | 6 |
| Partitions | 8 | 8 | 8 | 8 | 4 | 2 |
| Users | 1000 | 95 | 500 | 95 | 72 | 48 |
| Event Buffer | 1000 | 1000 | 500 | 500 | 500 | 500 |
| Proximity tags (MPT) | 999 | 94 | 499 | 94 | 71 | 47 |
| Total PGM outputs | 148 | 148 | 80 | 80 | 38 | 22 |
| • Onboard PGM outputs | 4 | 4 | 4 | 4 | 2 | 2 |
| • Expansion PGM outputs | 144 | 144 | 76 | 76 | 36 | 20 |
| | | | | | | |
| Corbus Modules: | | | | | | |
| • Keypads (hardwired and/or wireless) | 16 | 16 | 8 | 8 | 8 | 8 |
| • Supervised Power Supply HSM2300 | 4 | 4 | 3 | 3 | 3 | 3 |
| • Supervised Power Supply with PGM's HSM2204 | 4 | 4 | 3 | 3 | 1 | 1 |
| • 8 - Output PGM expander HSM2208 | 16 | 16 | 8 | 8 | 4 | 2 |
| • 8 - Zone expander HSM2108 | 15 | 15 | 7 | 7 | 3 | 1 |
| • Transceiver 2-way wireless integration module | 1 | 1 | 1 | 1 | 1 | 1 |
| • Audio verification module HSM2955 | 1 | 1 | 1 | 1 | 1 | 1 |
| | | | | | | |
| Wireless Modules: | | | | | | |
| • Wireless Sirens | 16 | 16 | 8 | 8 | 8 | 4 |
| • Wireless Repeaters * | 8 | 8 | 8 | 8 | 8 | 4 |
| Wireless Keys (PG9938, PG9929, PG9939, PG9949) | 32 | 32 | 32 | 32 | 32 | 32 |
| Wireless PIR / Camera (PG9934P, PG9944) | 10 | 10 | 10 | 10 | 10 | 10 |

E = Extended Memory. Requires v1.2+ to expand the user and tag counts. Only available in the HS2064 and HS2128 panels. E panels have been in the manufacture cycle since January 2016.

* For UL installations, two repeaters must be installed for proper signal routing.