


Proper Rock Placement ensures Sauna Heaters will heat properly.


Notice: Regular maintenance of removing and resetting sauna rocks ensures rapid heat up times and normal room temperatures are achieved. Constant use commercial saunas should have rocks reset every 3 months. Residential sauna rocks can be reset once a year. Remove all rocks from heater, discarding broken or crumbling rocks. Rinse any sediment off of remaining rocks, allow to dry then reset rocks around heating elements according to instructions.

NOTE: Diagrams show typical wall mounted sauna heater of following brands: Polar, Finnleo, Helo, Amerec, McCoy, etc.

a. Loosely place rocks between the elements so air flow is not restricted.

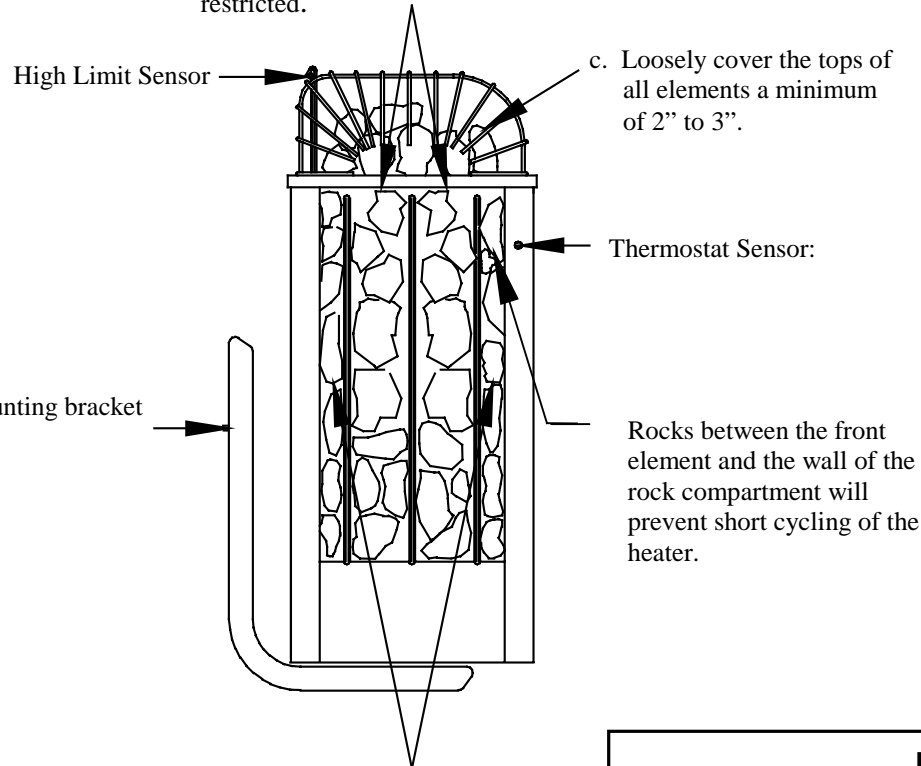

Incorrect

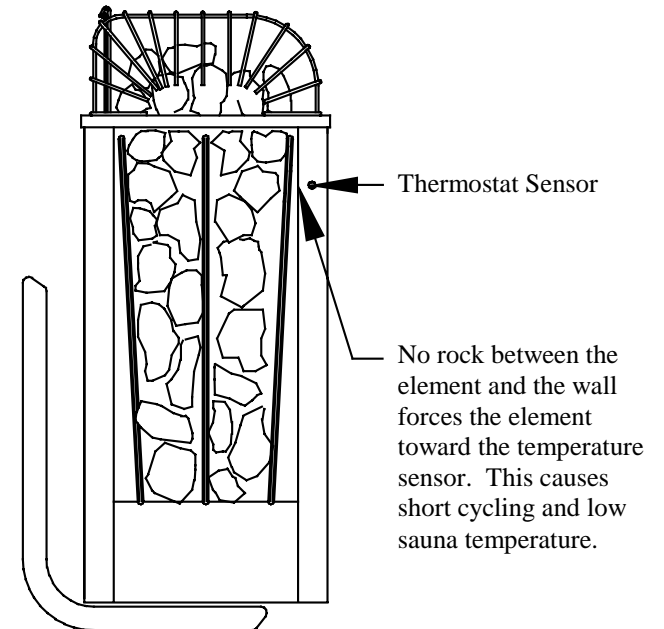

b. Rocks must be placed between the elements and the wall of the rock compartment.

Instructions for placing rocks

1. Put smaller rocks in first around the outer perimeter of the heating chamber.
2. Completely fill all four sections (front, 2 center sections between elements, and back). In the outer sections, use smaller rocks placed more tightly (see note b). Place rocks loosely in the 2 center sections (see note a).
3. Be sure rocks completely cover the elements (see note c).
4. If many rocks were discarded, shop for Vulcanite Sauna Rocks at www.SuperiorSaunas.com

NOTE: For large floor heaters, set larger rocks in bottom half of heater between elements.

