



Contact Information

We would love to hear from you.
Track Patch 1 Corporation
134 N Battlefield Blvd
Chesapeake VA 23320
www.alertafamily.com
tel: (833) - 3ALERTA
email: alerta@trackpatch.com



User Guide

English



Motion-activated
Message Player

- AAA batteries
- Wall mount hardware
- Alerta Voice device

What's in the Box

Alerta Voice is an audio message player that is motion-activated with a passive infrared sensor. The audio message can be recorded by the device or copied to the device via computer. Alerta Voice can be used to, when activated, announce warnings, messages, or alarms.

Alerta Voice Description

- Sample rate 48KHz, bit rate 32kbps.
- Human body triggering distance within 13 feet, 120-degree wide angle passive infrared sensor (the detection and angle ranges are not adjustable and may not be suitable for certain environments, such as narrow detection applications).
- Two switchable volume levels.
- Standard 8Mbit SPI-flash memory.
- Built in microphone for voice recording of warnings.

Performance Characteristics

Alerta Voice is not a precise instrument and should in no way be relied on for any purpose or application, including but not limited to those related to medical, life support, automotive, aviation, personal safety, or anti-theft, or any purpose where failure or malfunction could result in the injury or death of a person, in the loss or damage to property, or in harm to the environment. Track Patch 1 Corporation does not warrant the performance of this device.

Disclaimer

To Record Message Directly on Alerta Voice

1. Press and hold button "A" until there is a beep.
2. While continuing to press button "A," record message.
3. Release button "A" when finished recording.

To Playback Message

1. Press button "B" one time to start playback.
2. Press button "B" to stop playback.

To Adjust Volume

- Switch "V" top position: high volume.
- Switch "V" middle position: low volume.
- Switch "V" bottom position: device power off.

To Update or Change Messages via Computer

1. Connect device to computer with a micro-USB data cable. Computer will recognize the device as a removable disk.
2. Format this removable disk, if necessary.
3. Open the disk, create two new folders named "warning" and "welcome," if necessary.
4. Copy audio file(s) to "warning" and to "welcome" folders.

Device Features

- A. Record button
 - B. Playback button
 - C. Battery compartment
 - L. Light
 - M. Built-in microphone for recording
 - P. Infrared sensor
 - S. Speaker
 - U. Micro USB port (for copying audio files via computer)
 - V. Power and volume switch
 - W. Wall mount ball-socket accessory
- Brand Name: Alerta Voice
 - Model: Microsound V16
 - Type: Speaker
 - Country of Origin: manufactured by Shenzhen Waytronic Electronics Co Ltd, China
 - Audio Format: MP3, 8~320Kbps
 - Power Supply: DC3V-5V or three AAA batteries
 - Current: standby <90 microamps; recording <40 milliamps; playing <200 milliamps
 - Function: record voice and play
 - Detection Range: up to 4 meters or 13 feet, 120° angle
 - Volume: up to 90 decibels
 - Audio Output: 8ohm/1Watt
 - Certification: CE,ROH
 - Single package size: 6x9x2.7 cm3
 - Single gross weight: 0.20 kg

