



Terrawagen Slider window repair / maintenance

Our slider windows require maintenance twice a year, more if you live in a dusty area or notice excessive dirt build up around the slider opening.

We're going to remove the slider window from the track. All you need is a small screwdriver.

The rear of the slider track has a small clip. Insert small screwdriver as shown. The clip is delicate, only push in very slightly and then gently pry out. The clip is the stop for the window you need at least one in place for proper operation.



Removing the slider glass:

With both clips out, pinch the levers as you would normally to open the slider. Slide the window until the back end exits the track. You'll notice it won't go any further than an inch past the track end. Pull the window toward you slightly and tilt / twist the assembly until the forward pins, top and bottom are free from the track. Installation is the reverse.

Use a pipe cleaner to clear debris from the drain hole. Clean the window seal and the mating surface of the opening window. Clean any debris from the track it is part of the drain system. Test the drain with window cleaner. You should see fluid dripping from the middle of the window (standing outside of the van facing the window.)

